

Maxxum Tractors

5120, 5130, 5140 and 5150

IMPORTANT: *This supplement contains additional and changed information to the current Operators Manual 9-27315.*

- A. Electromagnetic Compatibility.*
- B. Third and Fourth Range Opened in Creeper, (If Equipped).*
- C. Trailer/Implement Drawbar Dimensions.*

TRIM THIS EDGE

TRIM THIS EDGE

RIGHT PAGE



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazard situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

TRIM THIS EDGE



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clear the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TRIM THIS EDGE

LEFT PAGE

GENERAL TABLE OF CONTENTS

SAFETY/DECALS	1
EMC - SUPPLEMENTARY INFORMATION	1
SAFETY DECALS	2
OPERATING INSTRUCTIONS	3
CREEPER SPEED OPERATION (WITH POWERSHIFT SWITCH CONTROL)	3
FIELD OPERATION	5
TRAILER/IMPLEMENT DRAWBAR DIMENSIONS	5
SPECIFICATIONS	7
TRAVEL SPEEDS	7

TRIM THIS EDGE

I

TRIM THIS EDGE

RIGHT PAGE

Buy Now



Our support email:

ebooklibonline@outlook.com