8910/8920 Tractor

Operators Manual

9-29002

Reprinted





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171E

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as





STOP

if used, are RED.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000

March, 1995 (Revised October, 1997)

CASE and IH are registered trade marks of Case Corporation

CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) of your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

GENERAL TABLE OF CONTENTS

TO THE OWNER 1
IDENTIFICATION NUMBERS
SAFETY/DECALS 6 SAFETY 6 DECALS 10 ROLL OVER PROTECTIVE STRUCTURE (ROPS) 13
INSTRUMENTS/CONTROLS 15 AUTOMATIC SHUTDOWN SYSTEM 15 DIGITAL INSTRUMENT CLUSTER 16 OPERATING CONTROLS 32
OPERATING INSTRUCTIONS 50 BEFORE STARTING THE ENGINE 50 SERVICE INDICATOR LAMPS 51 AND BAR GRAPH DISPLAYS 51 RUN-IN PROCEDURE 52 SEAT BELTS 53 NORMAL STARTING PROCEDURE 54 STOPPING THE ENGINE 56 COLD TEMPERATURE OPERATION 57 TOWING 62 HOW TO TRANSPORT THE TRACTOR 63 POWER SHIFT TRANSMISSION 64 DIFFERENTIAL LOCK LESS THREE POINT HITCH 70 DIFFERENTIAL LOCK WITH THREE POINT HITCH (IF EQUIPPED) 73 MFD OPERATION LESS THREE POINT HITCH (IF EQUIPPED) 75 DIGITAL INSTRUMENT CLUSTER 77 CAB AIR FLOW ARRANGEMENTS 80 AIR CONDITIONING OPERATION 83 POWER TAKEOFF 84 DRAWBAR 90 TRACTOR WARNING LAMPS AND SMV SYMBOL 92 IMPLEMENT WARNING LAMPS AND SMV SYMBOL 94
FIELD OPERATION

HITCH OPERATION	113
OPERATING IN POSITION CONTROL	120
REMOTE HYDRAULICS PREPARATION	124
REMOTE HYDRAULICS OPERATION	127
LOADER OPERATION	131
CHEMICAL TANK MOUNTING	132
AUXILIARY POWER CONNECTIONS	135
TRUE GROUND SPEED SENSOR HARNESS	137
CAB REAR ACCESS PANEL	138
MONITOR MOUNTING	138
INSTRUMENT CLUSTER PROGRAMMING	139
INOTHOMENT GEOGRETITI HOGHAWIWIING	100
TIRES/WHEELS/SPACING/BALLAST	152
TIRE AND RIM EQUIPMENT	152
TIRE LOAD AND INFLATION CHART	154
TIRE AND RIM SERVICE	159
TREAD POSITIONS	160
AXLE ADJUSTMENT	180
FRONT WHEEL FENDERS (IF EQUIPPED)	198
TIRE SIZE COMBINATIONS	
TRACTOR BALLAST	
BALLASTING GUIDE	
BALLASTING GOIDE	217
LUBRICATION/FILTERS/FLUIDS	220
LUBRICATION/MAINTENANCE CHART	
GREASE FITTINGS - 10 HOURS	
GREASE FITTINGS - 50 HOURS (2WD AXLE)	
GREASE FITTINGS - 50 HOURS (MFD AXLE)	
SYSTEM CAPACITIES	
ENVIRONMENT	
PLASTIC AND RESIN PARTS	
HOOD AND SIDE PANELS	
SERVICE HOUR INTERVAL	
ENGINE LUBRICATION	
ENGINE LUBRICATION	
COOLING SYSTEM	
FUEL SYSTEM	
AIR INDUCTION SYSTEM	251
TRANSMISSION LUBRICATION	257
DIFFERENTIAL LUBRICATION	
PLANETARY LUBRICATION	263
MAINTENANCE/ADJUSTMENTS	264
COMPRESSOR BELT AND FAN/ALTERNATOR BELT	264
SPARK ARRESTING MUFFLER	267
HOOD LATCH ADJUSTMENT	
ENGINE VALVE ADJUSTMENT	
LINGINE VALVE ADJUGITMENT	200

OPERATORS CAB	269
ELECTRICAL SYSTEM	
GENERAL SERVICE INFORMATION	
BATTERIES	
BULB AND LAMP REPLACEMENT	286
SPECIFICATIONS	292
DIESEL ENGINE	292
POWER TRAIN	
TRAVEL SPEEDS	
APPROXIMATE MEASUREMENTS AND WEIGHTS	298
Detail Index	304

TO THE OWNER

Read this manual before you start the engine or operate your tractor. Refer to the Detail Index at the end of this manual for locating specific items about your machine. If you need more information, see your dealer.

Your dealer can give you assistance with Case Corporation approved service parts. Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

Call your dealer if you need any assistance or information.

8910 Tractor with Mechanical Front Drive



NOTE: When you are in the tractor seat looking forward, the right and left side of the tractor are the same as your right hand and left hand.

TO THE OWNER

8920 Tractor with Mechanical Front Drive





Our support email: ebooklibonline@outlook.com