

8930-8940-8950
Tractors
Operators Manual

Rac 9-29012





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) of your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds. **Wash hands after handling.**

NOTE: CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

GENERAL TABLE OF CONTENTS

TO THE OWNER	1
IDENTIFICATION NUMBERS	4
PRODUCT IDENTIFICATION AND SERIAL NUMBERS	4
SAFETY/DECALS	6
SAFETY	6
DECALS	10
ROLL OVER PROTECTIVE STRUCTURE (ROPS)	13
INSTRUMENTS/CONTROLS	15
AUTOMATIC SHUTDOWN SYSTEM	15
DIGITAL INSTRUMENT CLUSTER	16
OPERATING CONTROLS	32
OPERATING INSTRUCTIONS	50
BEFORE STARTING THE ENGINE	50
SERVICE INDICATOR LAMPS	51
AND BAR GRAPH DISPLAYS	51
RUN-IN PROCEDURE	52
SEAT BELTS	53
NORMAL STARTING PROCEDURE	54
STOPPING THE ENGINE	56
COLD TEMPERATURE OPERATION	57
TOWING	62
HOW TO TRANSPORT THE TRACTOR	63
POWER SHIFT TRANSMISSION	64
DIFFERENTIAL LOCK LESS THREE POINT HITCH	70
DIFFERENTIAL LOCK WITH THREE POINT HITCH	71
MFD OPERATION LESS THREE POINT HITCH (IF EQUIPPED)	73
MFD OPERATION WITH THREE POINT HITCH (IF EQUIPPED)	75
DIGITAL INSTRUMENT CLUSTER	77
CAB AIR FLOW ARRANGEMENTS	80
AIR CONDITIONING OPERATION	83
POWER TAKEOFF	84
DRAWBAR	90
TRACTOR WARNING LAMPS AND SMV SYMBOL	92
IMPLEMENT WARNING LAMPS AND SMV SYMBOL	94

TRIM THIS EDGE

FIELD OPERATION	95
DRAWBAR PREPARATION	95
DRAWBAR PREPARATION	99
THREE POINT HITCH PREPARATION	106
HITCH SYSTEM ADJUSTMENTS	107
HITCH COUPLER - CATEGORY III	116
HITCH OPERATION	117
OPERATING IN POSITION CONTROL	124
REMOTE HYDRAULICS PREPARATION	128
REMOTE HYDRAULICS OPERATION	131
LOADER OPERATION	135
CHEMICAL TANK MOUNTING	136
AUXILIARY POWER CONNECTIONS	139
TRUE GROUND SPEED SENSOR HARNESS	141
CAB REAR ACCESS PANEL	142
MONITOR MOUNTING	142
INSTRUMENT CLUSTER PROGRAMMING	143
TIRES/WHEELS/SPACING/BALLAST	156
TIRE AND RIM EQUIPMENT	156
TIRE LOAD AND INFLATION CHART	158
TIRE AND RIM SERVICE	163
TREAD POSITIONS	164
AXLE ADJUSTMENT	183
FRONT WHEEL FENDERS (IF EQUIPPED)	201
TIRE SIZE COMBINATIONS	204
TRACTOR BALLAST	207
BALLASTING GUIDE	220
LUBRICATION/FILTERS/FLUIDS	223
LUBRICATION/MAINTENANCE CHART	223
GREASE FITTINGS - 10 HOURS	224
GREASE FITTINGS - 50 HOURS (2WD AXLE)	225
GREASE FITTINGS - 50 HOURS (MFD AXLE)	227
SYSTEM CAPACITIES	228
ENVIRONMENT	228
PLASTIC AND RESIN PARTS	228
HOOD AND SIDE PANELS	229
SERVICE HOUR INTERVAL	231
ENGINE LUBRICATION	234
COOLING SYSTEM	239
FUEL SYSTEM	247
AIR INDUCTION SYSTEM	254
TRANSMISSION LUBRICATION	260
DIFFERENTIAL LUBRICATION	265
PLANETARY LUBRICATION	266

MAINTENANCE/ADJUSTMENTS	267
SPARK ARRESTING MUFFLER (IF EQUIPPED)	267
HOOD LATCH ADJUSTMENT	268
ENGINE VALVE ADJUSTMENT	268
COMPRESSOR BELT AND FAN/ALTERNATOR BELT	269
OPERATORS CAB	272
ELECTRICAL SYSTEM	281
SPECIFICATIONS	281
GENERAL SERVICE INFORMATION	283
BATTERIES	285
BULB AND LAMP REPLACEMENT	289
SPECIFICATIONS	295
DIESEL ENGINE	295
POWER TRAIN	296
TRAVEL SPEEDS	298
APPROXIMATE MEASUREMENTS AND WEIGHTS	301
DETAIL INDEX	309
DETAIL INDEX	309

TRIM THIS EDGE

TO THE OWNER

Read this manual before you start the engine or operate your tractor. Refer to the Detail Index at the end of this manual for locating specific items about your machine. If you need more information, see your dealer.

Your dealer can give you assistance with Case Corporation approved service parts. Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

Call your dealer if you need any assistance or information.

8930 Tractor with Mechanical Front Drive



RD97J009

TRIM THIS EDGE

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.

8940 Tractor with Mechanical Front Drive



RD97J004

TRIM THIS EDGE

8950 Tractor with Mechanical Front Drive



RD97J005

Buy Now



Our support email:

ebooklibonline@outlook.com