900 LP Gas Wheel Tractor

Operator's Manual

9-382

Reprinted





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171E

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as





S

if used, are RED.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000

March, 1995 (Revised October, 1997)

CASE and IH are registered trade marks of Case Corporation



900 LP GAS WHEEL TRACTOR

J. I. Case Co. RACINE, WISCONSIN - U.S.A.



NOTICE!

At the time your Case Dealer delivers your new tractor, he will acquaint you with its operation and maintenance as outlined in the "Dealer's Delivery Service Report." When your Dealer has completed these instructions, he will ask you to sign the report and will then hand you the yellow copy for your records.

NOTE: The "Dealer's Delivery Service Report" also contains a record of the Pre-Delivery Checkup which your Dealer made on your tractor.

AFTER DELIVERY CHECKUP

The Authorized Case Dealer from whom you purchased your new tractor will perform the "After Delivery Checkup" outlined on the following page, if you will arrange to bring your tractor to his Service Shop within . . .

60 days after date of delivery or 200 hours of operation (whichever occurs first).

NOTE: The only charge your dealer will make for this inspection will be for oil, filters or other accessories.

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

(Owner's Name) (Owner's Address)		(Date Checkup Performed)
(Dealership)	**********	(Town)
Tractor has been operated	hours	(Tractor Model and Serial Number)
☐ Check traction clutch.		☐ Tighten all bolts (including rims).
☐ Check PTO clutch.		☐ Cooling system.
Check brakes.		☐ Crankcase oil (Change oil and filter if necessary).
□ Operate hydraulic system.□ Check tire pressure.		Oil level in transmission, hydraulic system and steering gear.
☐ Tighten cylinder heads and actappets.	djust	☐ Lubricate all pressure fittings and oil cups.
☐ Check distributor timing (material to - if so equipped).	gne-	Check air cleaner.
 Check spark plugs and distribution point gap. Check full governed no ile engine speed. 	outor	Check steering, bearing adjustment and front wheel toe-in.
	beofi	Battery, starter, generator and lights.
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	☐ Check operation of all instruments.
DEALER: Question purchaser c and answer any quest are not clear to him.	arefully c	concerning his experience with tractor cerning maintenance or operation that
	Checkup	Performed by
	Signed	Dealer
Original—Dealer Duplicate—Leave in Operators Manual for Purchaser	Signed	Customer

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

(Owner's Name)	(Date Checkup Ferformed)
(Dealership) Tractor has been operatedho	(Town) OURS
 □ Check traction clutch. □ Check PTO clutch. □ Check brakes. □ Operate hydraulic system. □ Check tire pressure. □ Tighten cylinder heads and adjust tappets. □ Check distributor timing (magneto-if so equipped). □ Check spark plugs and distributor point gap. □ Check full governed no load engine speed. 	oil cups. Check air cleaner. Check steering, bearing adjustment and front wheel toe-in. Battery, starter, generator and
and answer any questions are not clear to him. Che	concerning his experience with tractor concerning maintenance or operation that ckup. Performed by
Original—Dealer	ned Dealer ned Customer

To the Purchaser of a Case Tractor,

The care you give your new Case tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.

Your Authorized Case Dealer

To insure efficient and prompt service, please furnish us with the Model and Serial Number of your tractor in all correspondence or contacts.

TABLE OF CONTENTS

	Page
Serial Number	6
General Specifications	7
Lubrication	17
Pressure Fittings	19
Engine Lubrication	22
Transmission Lubrication	27
Hydraulic Control System	29
Independent Power Take-off	31
Hydraulic Power Steering Attachment	32
Operating Instructions	35
The Application of LP Gas as a Fuel for Engine Use	36
Run-in Procedure	
Pre-Starting Check List	39
Operating Controls and Instrument Guide	40
Hour Meter	41
Deluxe Seat	44
Power Steering	
Starting and Operating Tractor the First Time.	47
Setting Carburetion Adjustments	53
Normal Starting Procedure	55
Cold Weather Starting	55
Stopping the Engine	55
Recommended Method for Emptying LPG Tank	56
Cold Weather Operation	57
Gear Selection	60
Independent Differential Brakes	61
Rear Tire Sizes	
Rear Wheel Weights	63
Drawbar	64
Belt Pulley	66

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com