

David Brown®

Supplement to Manual
for Operators of
990, 995 & 996 TRACTORS with
CARRARO FRONT DRIVE AXLE

Pub. 9-5787 February 1978

Reprinted



David Brown Tractors Ltd

CONTENTS

	Page
Operation	1
Removing the Oil	
Differential	1
Hubs	2
Filling with Oil	
Differential	2
Hubs	2
Checking Oil Levels	
Differential	3
Hubs	3
Breathers	
Axle	3
Hubs	3
Grease Fittings	4
Service	5
Tread Width	5
Tyres	5
Data	5

OPERATION

The control rod for the selection of two wheel or four wheel drive is fastened to a bracket installed to the left and in front of the operator's seat.

To engage four wheel drive, push the control rod down.

To disengage four wheel drive, pull the control rod up.

You must only engage or disengage four wheel drive when the tractor is running under conditions of little or no load.

Important: Do not try to engage four wheel drive after there is a loss of grip by the rear wheels. When you operate the tractor, look for soft ground and engage four wheel drive before you reach it.

Lubrication

COMPONENT	CAPACITY		BP	CASTROL	ESSO	MOBIL	SHELL	TOTAL
	litre	pt						
DIFF. HUBS (ea)	6.0 1.5	10.5 2.6	Gear Oil 140	Agricastrol Gear Oil Medium	Teresso Gear Oil 460	Mobiland Gear 140 Tractor Oil	Dentax 140	Transmission 140
STUB AXLES PIV. BUSHES SPL. SLEEVE	Grease Fittings		Energrease Universal	L.M. Grease	Beacon 2	Mobilgrease MP	Retinax A	Multis

Important

1. Before you use a grease gun, clean the grease fittings.
2. Before you remove a drain or level plug, clean the plug and the area around the plug.
3. Make sure that you use clean containers, funnels, etc.
4. Make a regular check to see that the breathers are clear dirt. If you are not sure, remove the breathers and clean them by washing in fuel oil or kerosene.

NOTE: It is a recommendation that you check the breathers when you check the levels of oil.

Buy Now



Our support email:

ebooklibonline@outlook.com