

**780,880,990, & 1200
Selectamatic
Tractors**

**Operators Manual
Supplement**

9-5792

Reprinted

CASE III






THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

David Brown®

Supplement to Manual
for Operators of
SELECTAMATIC TRACTORS
WITHOUT SYNCHROMESH
(780, 880, 990 and 1200)

Pub. 9-5792 February 1978



David Brown Tractors Ltd

A Tenneco Company

Affiliate of J I Case



INTRODUCTION

This supplement is for the operator of an older Selectamatic® tractor; 780, 880, 990 or 1200 non-synchromesh, for which the original Operator's Manual (Instruction Book) is no longer available. The appropriate complete Operator's manual (Instruction Book) is to be used in conjunction with this supplement:-

780 or 880 Selectamatic—use an 885 Operator's Manual.

990 (non-synchromesh) Selectamatic—use a 990/995/996 Operator's Manual.

1200 Selectamatic—use a 1210/1212 Operator's manual.


Operating instructions for earlier tractors are basically similar to those for these later models, except as outlined in this supplement. Should you experience any difficulty however, please consult your David Brown Dealer or Distributor.

CONTENTS

	<i>Page</i>
Description and Operation	1
Instrument Panels	1
Levers and Pedals	1
Starting from Cold (using Ether)	3
Overload Release	4
Exhaust Brake	4
Permanent Drawbar (880)	5
Adjustments and Settings	5
Adjustments for Clutch	5
Adjustments for Brakes	7
Track Settings for Rear Wheels	7
Information for Maintenance and Servicing	7
Lubrication	7
Filter for Transmission Oil	8
Specifications and Data	8
780	9
880	9
900	10
1200	10

DESCRIPTION AND OPERATION

INSTRUMENT PANELS

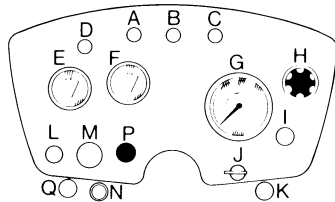

78 5

	780	880	990	1200
Warning Light (Charge) - Red	A	C	C	A
Warning Light (Filter) - Yellow	B	D	D	
Warning Light (Oil Press.) - Green	C	A	A	C
Gauge - Fuel Contents		E	E	E
Gauge - Water Temperature	F	F	F	F
Indicator - Engine or Road Speed	G	G	G	G
Switch for lights	H	H	H	H
Stop Control for Engine	I	K	Q	Q
Key Switch for Starter	J	J	J	J
Push Switch for Horn			L	M
Switch for Direction Indicators			M	
Switch for Hazard Warning			N	
Fuse Holder				P

FIGURE 1. INSTRUMENT PANELS

LEVERS AND PEDALS

Gearbox (six speed) for Transmission

The main gearbox for transmission, controlled by the right-hand lever, has three forward speeds and one reverse speed. The secondary gearbox for transmission, controlled by the left-hand lever, has two speeds; High (H) and Low (L).

The main gearbox with the secondary gearbox give six forward speeds and two reverse speeds. The speeds and the positions of the gear levers are shown on the gearbox cover.

The High/Low gear lever has a neutral position and this must be used when the tractor is stationary during belt pulley or PTO work.

Buy Now



Our support email:

ebooklibonline@outlook.com