

2390 Tractor

Operators Manual

9-6153

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

TABLE OF CONTENTS

| | | | |
|---|-----------|--|--------|
| TO THE OWNER | III | OPERATING INSTRUCTIONS | 33-120 |
| SAFETY | IV-XVII | Run-In Procedure | 33 |
| Safety Rules | IV | Before Starting the Engine | 34 |
| Before Starting | IV-V | Towing | 35 |
| Operation | VI-XV | How to Transport the Tractor | 35 |
| Service | XVI-XVIII | Operating Instruments | 36-41 |
| HAND SIGNALS | XIX-XX | Automatic Engine Shutoff | |
| DECALS | XXI-XXV | (If Equipped) | 40-41 |
| NOTES | XXVI | Operating Controls | 42-70 |
| SERIAL NUMBERS | 1 | Steering Console | 42-43 |
| DIESEL ENGINE SPECIFICATIONS | 2,3 | Foot Pedals | 44-45 |
| GENERAL SPECIFICATIONS | 4-7 | Operator's Console | 46-52 |
| APPROXIMATE TRACTOR SPEEDS | 8-9 | Steering Column Tilt | 53 |
| APPROXIMATE OVER ALL | | Telescopic Steering Column | 53 |
| MEASUREMENTS | 10-11 | Heater Stop Valve | 54 |
| APPROXIMATE TRANSPORT | | Fuel Tank Water Trap | 54 |
| WEIGHT | 10-11 | Rear View Mirrors | 55 |
| OPERATOR'S CAB STANDARDS | 10-11 | Cab Window Lever | 55 |
| TIRE AND WHEEL EQUIPMENT | 12 | Cab Headliner Controls | 56-57 |
| FRONT WHEEL TREAD POSITIONS | 13 | Cab Air Flow Control | 58 |
| REAR WHEEL TREAD POSITIONS | 14-15 | Cab Defroster Control | 58 |
| DUAL REAR WHEEL | | Cab Air Flow Arrangements | 59-61 |
| TREAD POSITIONS | 16-17 | Air Conditioner Operation | 62 |
| DUAL REAR TIRE PRESSURES | 17 | Cab Door Lock | 62 |
| FUEL SPECIFICATIONS | 18-19 | Tool Compartment | 62 |
| LUBRICATION | 20-31 | Operator's Seat | 63-65 |
| Engine Hourmeter | 20 | Seat Belts | 66 |
| Diesel Engine | 21 | Amber Warning Lamps, Direction | 67-68 |
| Lubrication Chart | 22-23 | Turn Signals & SMV | |
| Engine Oil Change | 24-25 | Implement Warning Lamps, | |
| Engine Oil Filters | 25 | SMV Symbol | 69 |
| Transmission Oil Level Check & Change | 26 | Auxiliary Outlet Socket | 70 |
| Hydraulic Oil Filters | 27-29 | Starting Procedure | 71-72 |
| Steering & Brake System Air Removal | 30 | Stopping the Engine | 73 |
| Front Wheel Bearing | 31 | Cold Temperature Operation | 74 |
| ALTERNATOR CHARGING SYSTEMS | 32 | Preparing Tractor For Operating in Cold | |
| | | Temperatures | 75 |
| | | Cold Temperature Starting | 76-79 |
| | | Case Starting Fluid | 76 |
| | | Coolant Heater | 76 |
| | | Operating Ether Start | 77-78 |
| | | Starting Fluid Container Replacement | 79 |
| | | Power Shift Transmission | 80-81 |
| | | Differential Lock | 82 |
| | | Power Takeoff | 83-85 |
| | | Operating PTO | 83 |
| | | Guards | 84 |
| | | Operating Safety | 85 |
| | | Drawbar | 86 |
| | | Three Point Hitch System | 87 |
| | | Hitch System Adjustments | 88-90 |

TABLE OF CONTENTS

OPERATING INSTRUCTIONS

| | | | |
|---------------------------------------|---------|---|---------|
| Hitch Operation | 91-95 | Air Induction System | 139-148 |
| Anti-Sway Chain | 91 | Air Filter Service Interval | 140 |
| Connect Implement | 92 | Final Air Filter Service | 141-144 |
| Hitch Control Lever | 92-93 | Aspirated Strata Tube Service .. | 145-147 |
| Sensing Control | 94-95 | Tubes and Hoses | 148 |
| Stationary Depth | 95 | Neutral Start Switch Adjustment .. | 149-150 |
| Hydraulic Float Control | 95 | Electrical System | 151-156 |
| Hitch Coupler - Category III-II | 96-99 | Head Lamps | 151 |
| Hitch Coupler - Category III | 100 | Flood Lamps | 151 |
| Remote Hydraulic Control | 101-107 | Flashing Amber Warning Lamps | 152 |
| Remote Control Levers | 101-102 | Tail Lamps | 152 |
| Variable Flow Control | 103-104 | Instrument Cluster Lamps | 153 |
| Operating the Remote System | 105 | Fuse Panel - Tractor | 154 |
| Hydraulic Hose Couplers | 106 | Fuse Panel - Operators Cab | 154 |
| Hydraulic Hose Coupling | 107 | Fuse Panel - Tractor & Cab | 155 |
| Remote Cylinder | 108 | Head Lamp Adjustment | 156 |
| Hydraulic Cylinder Jack Pads | 109 | Storage Battery | 157-160 |
| Front Axle Adjustment | 110 | General Maintenance | 157 |
| Rear Wheel Hub Adjustment | 111-113 | When Batteries Are Not In Use | 157 |
| Dual Wheel Mounting | 114 | Access to Batteries | 158 |
| Rear Tire Mounting | 115 | Battery Cables and Terminals | 158 |
| Loads Matched to Tractor | 115 | Battery Water | 159 |
| Tractor Ballast | 116-120 | Breather Tubes | 159 |
| Measuring Slip | 116 | Removal and Installation of Batteries . | 159 |
| Tractor and Equipment Weight | 117 | Auxiliary Battery Connections | 160 |
| Front End Weights | 118 | Roll Over Protective Structure | |
| Rear Wheel Weights | 119 | (ROPS) | 161-163 |
| Tire Liquid Weight | 120 | Tractor Roll Over | 162 |
| PREVENTIVE MAINTENANCE | 121-176 | Safety Rules | 162 |
| Hood and Side Panels | 122 | Maintenance and Inspection | 162 |
| Cooling System | 123-132 | ROPS Label | 163 |
| Pressure Cooling System | 123 | Operator's Cab | 164-176 |
| Coolant Solutions | 124 | Preventive Maintenance | 164-165 |
| Engine Cooling System Treatment .. | 124 | Air Filter Removal | 166 |
| Radiator Cleaning | 125 | Air Filter Service | 167-168 |
| Cooling System Service | 126 | Seat Belt Inspection | |
| Thermostat Check | 127 | and Maintenance | 168 |
| Thermostat Replacement | 127-129 | Operator's Seat | 169-170 |
| Fan Belt Adjustment | 130 | Refrigerant Check | 171-172 |
| Fan Belt Replacement | 131 | Compressor Belt Adjustment | 173 |
| Water Filter & Conditioner | | Compressor Belt Replacement | 174 |
| (If Equipped) | 132 | Dome Lamp | 175 |
| Fuel System | 133-138 | Console Lamp | 176 |
| Service Intervals | 133 | CASE TECHNICAL MANUALS | 177 |
| Fuel Filter Replacement | 134-135 | | |
| Primary Fuel Filter | 136-137 | | |
| Air Removal | 137-138 | | |

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

Case is continuing to work for your safety: by making tractors with better protection and by giving these rules for safe operation.

Before Starting



CAUTION *Provide a first aid kit for use in case of accident.*



CAUTION *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



WARNING Before starting engine study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.



Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



WARNING Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operator's seat.

On roads, use flasher/lights according to local laws. Keep SMV emblem visible.



Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.

 
Before leaving tractor unattended, lower hydraulically lifted equipment to ground.

WARNING Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.


Operation



WARNING Before leaving the tractor, stop the engine, place all controls in neutral, and either set the parking brake or place range lever in PARK position as equipped.

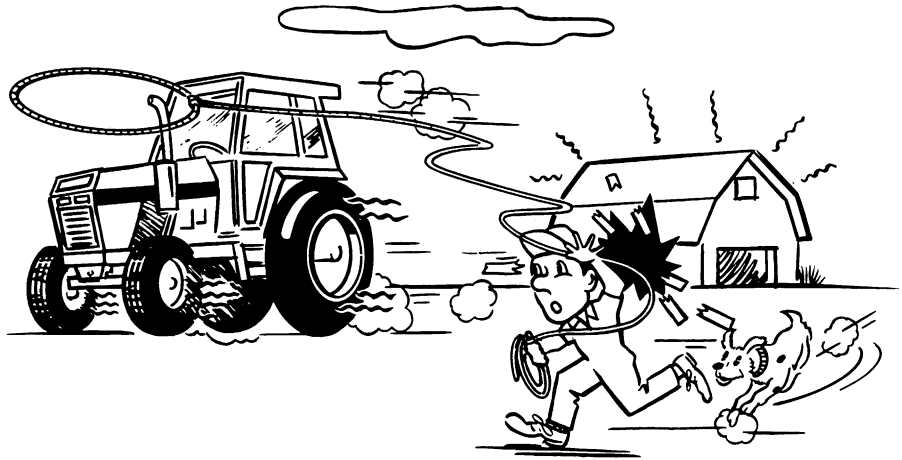

 
WARNING Operate controls only when seated in the Operator's seat.

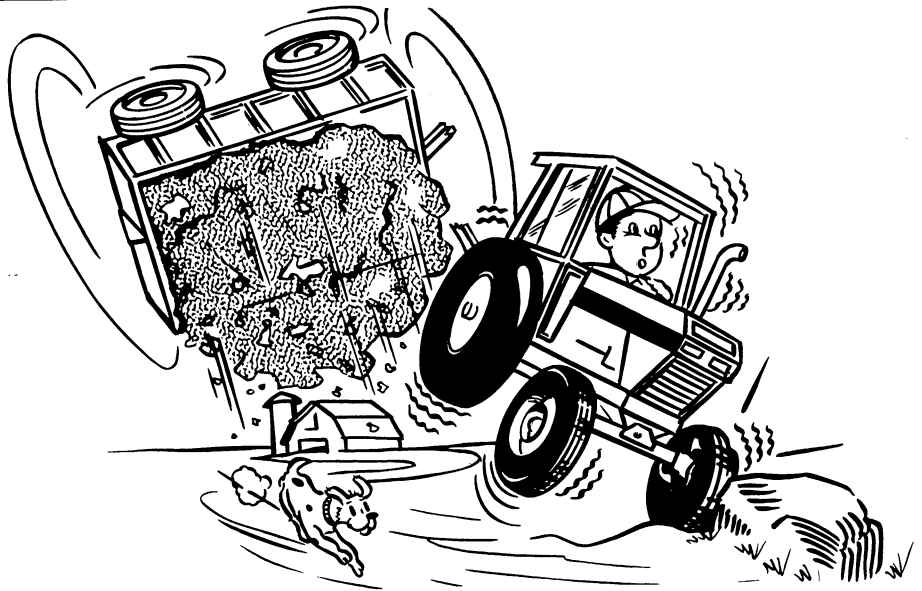


WARNING Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.



 
WARNING *On roads, use flasher/lights according to local laws. Keep SMV emblem visible.*

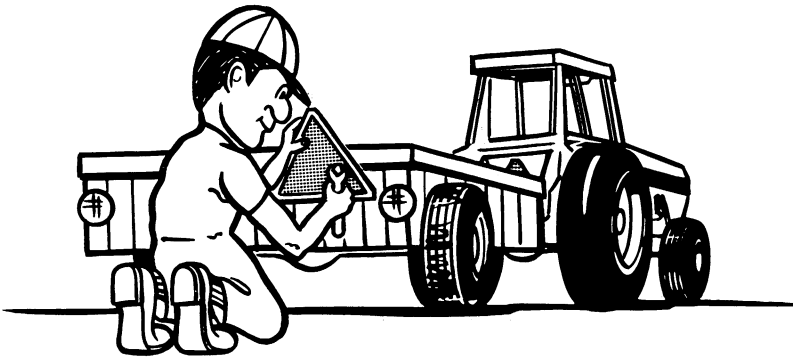

 
DANGER *Excess tractor speed is the big killer. Only experienced drivers should be permitted on highways.*

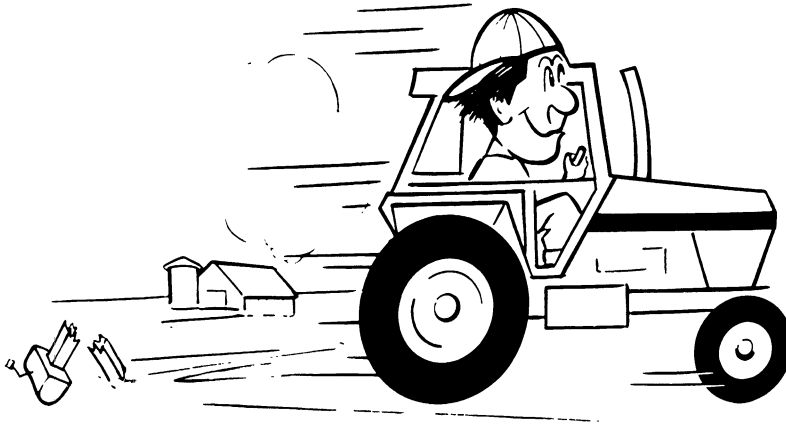

 WARNING *Extra weight increases your braking distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*

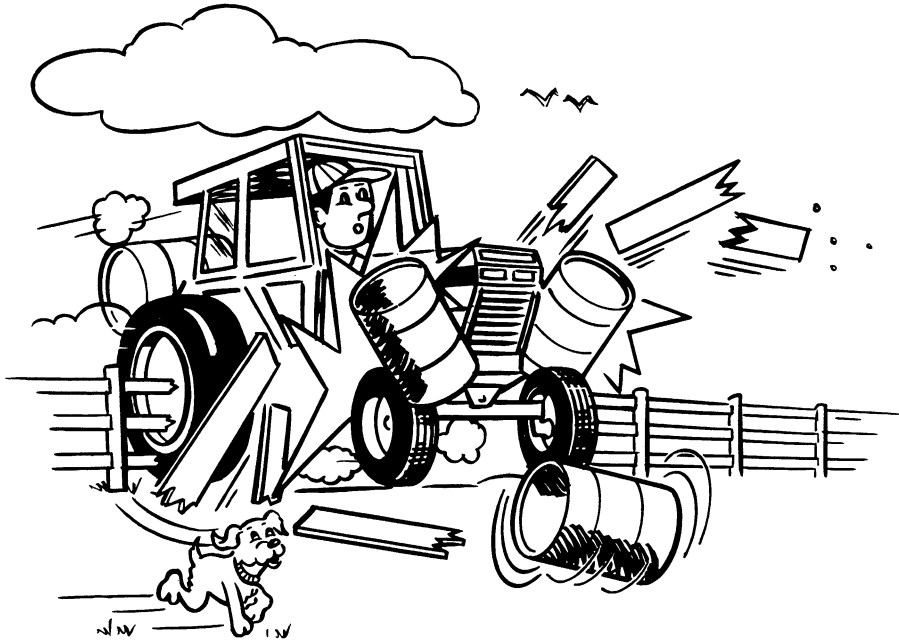


 WARNING *The braking distance will increase in conditions of mud, ice or whenever the traction at one wheel is less than the traction at the opposite wheel. The operator must allow adequate distance to stop in these conditions.*

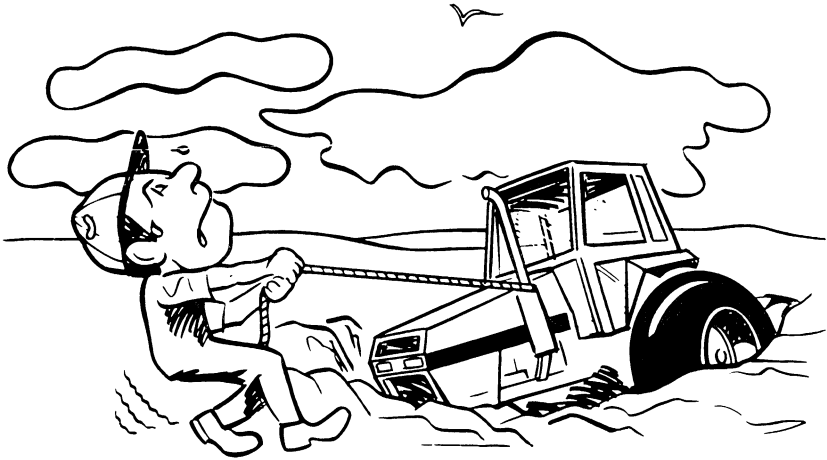




 CAUTION Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.

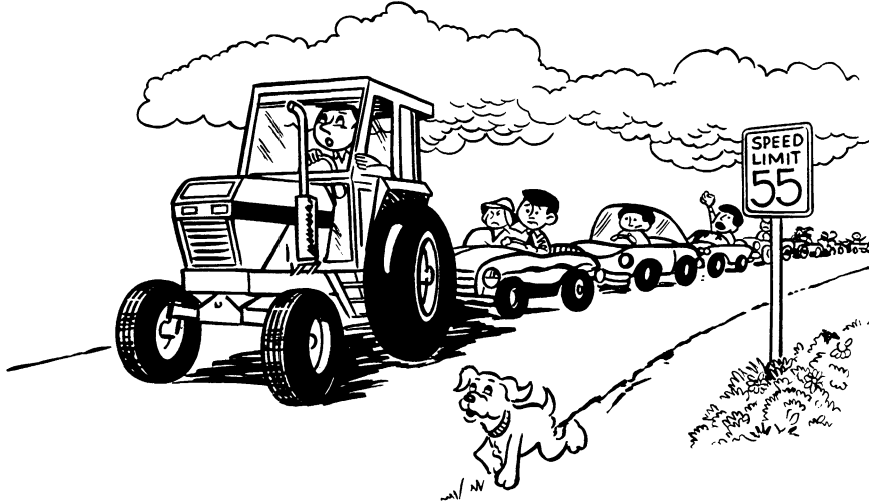

 WARNING Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.

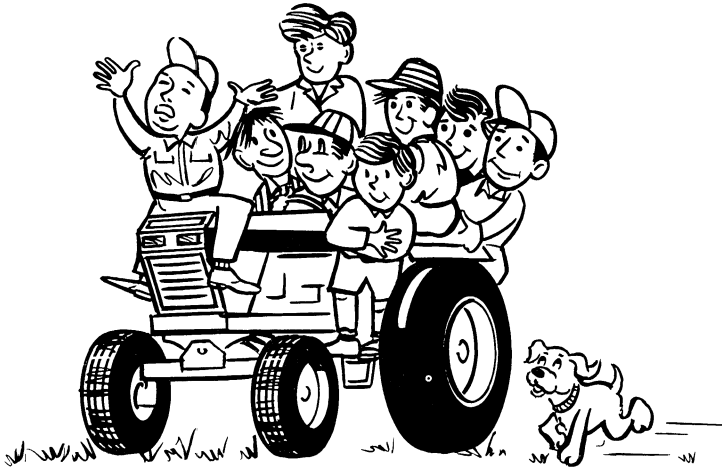


CAUTION Do not operate the tractor at high speeds or attempt to turn the tractor with the differential lock engaged.



CAUTION Try to balance the load primarily on the implement wheels - as in loading a trailer or spreader. Avoid overloading the drawbar. Add front end weights for improved stability. Engage the clutch smoothly, avoid jerking and use the brakes cautiously to avoid jack-knifing.



 WARNING Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use 3 point hitch only with the implements designed for its use - not as a drawbar.

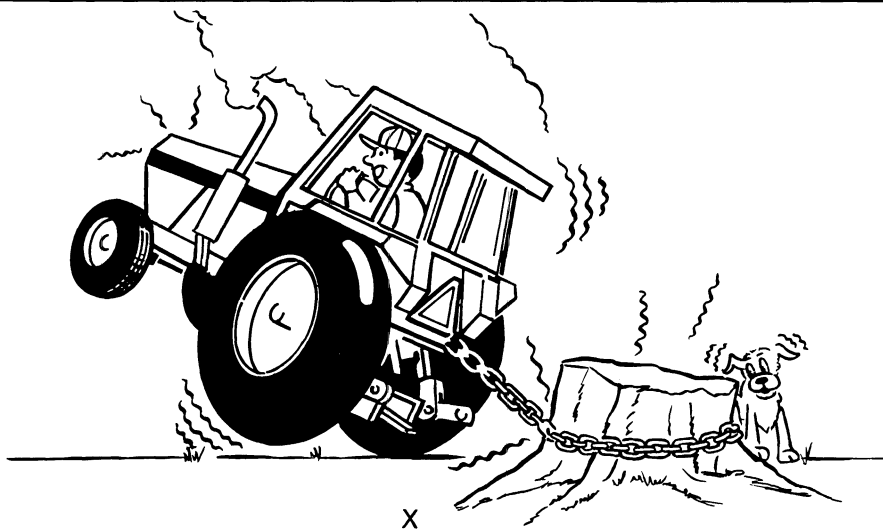





WARNING Be certain both latches are fully engaged across the implement lift pins before transporting or pulling the implement.



 CAUTION The implement should be lowered to the ground before uncoupling of the remote hydraulic hoses.

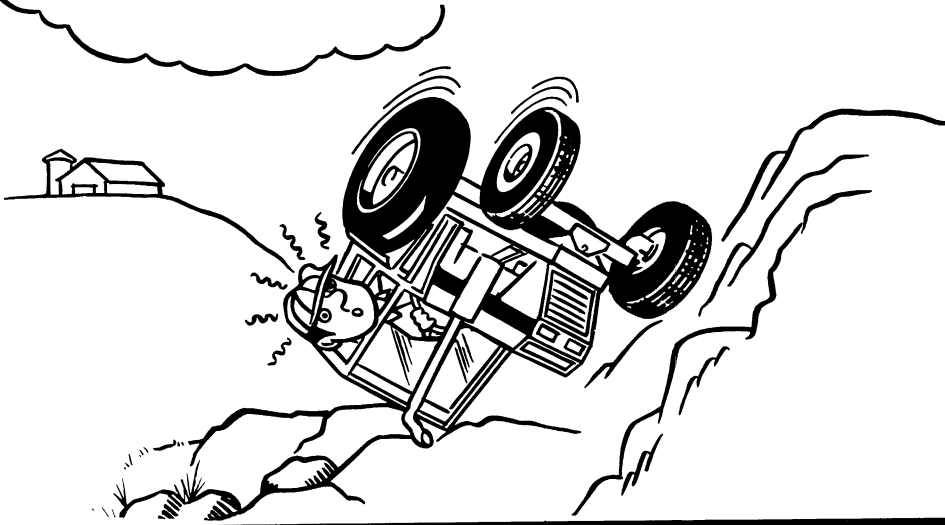

 WARNING Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".

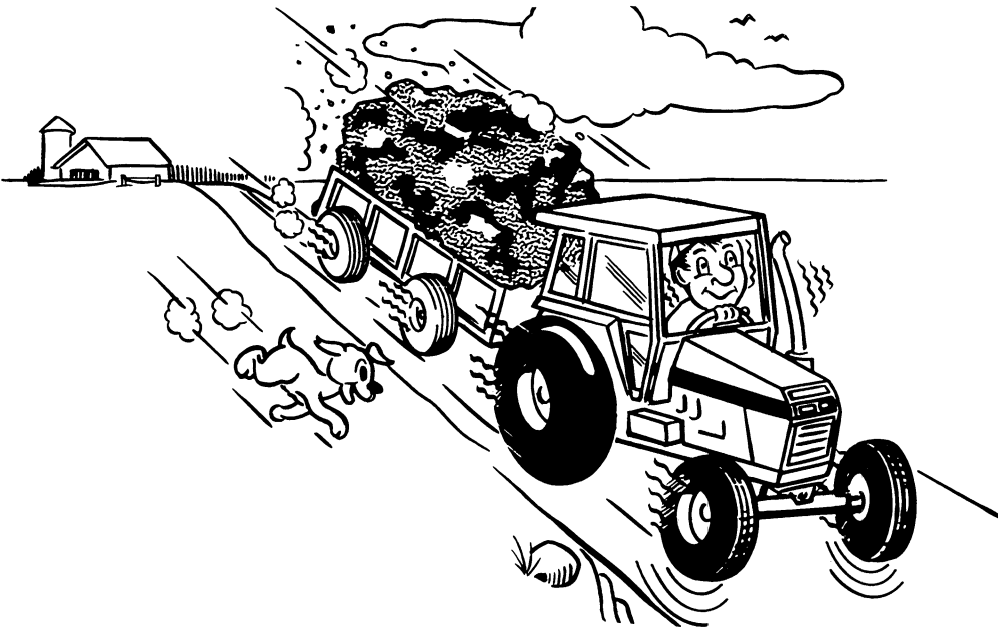



WARNING *Rotating machine parts, stay clear, keep shields installed to help protect from clothing entanglement and injury. Wear close-fitted clothing.*



WARNING *Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.*



WARNING *Whenever a PTO driven machine is in operation, the safety guard must always be in place to prevent injury to the operator. The safety guard must never be removed at any time, except for replacement. When the PTO is not in use, the tubular guard must be installed over the end of the PTO shaft.*



WARNING *When doing stationary PTO work and dismounting from the tractor with the PTO running, keep clear of all moving parts as they are a potential safety hazard.*



WARNING *On a mobile power take-off application, always disengage the PTO before dismounting from the tractor.*



WARNING *This tractor is equipped with a 1000 RPM PTO - be sure implements are matched for this drive speed. Center and lock drawbar when using PTO.*

Buy Now



Our support email:

ebooklibonline@outlook.com