

2590 Tractor

Operators Manual

9-6363

Reprinted

CASE III



*This symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.** The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.*

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS	33-120
SAFETY	IV-XVII	Run-In Procedure	33
Safety Rules	IV	Before Starting the Engine	34
Before Starting	IV-V	Towing	35
Operation	VI-XV	How to Transport the Tractor	35
Service	XVI-XVIII	Operating Instruments	36-41
HAND SIGNALS	XIX-XX	Automatic Engine Shutoff (If Equipped)	40-41
DECALS	XXI-XXV	Operating Controls	42-70
NOTES	XXVI	Steering Console	42-43
SERIAL NUMBERS	1	Foot Pedals	44-45
DIESEL ENGINE SPECIFICATIONS	2,3	Operator's Console	46-52
GENERAL SPECIFICATIONS	4-7	Steering Column Tilt	53
APPROXIMATE TRACTOR SPEEDS	8-9	Telescopic Steering Column	53
APPROXIMATE OVER ALL MEASUREMENTS	10-11	Heater Stop Valve	54
APPROXIMATE TRANSPORT WEIGHT	10-11	Fuel Tank Water Trap	54
OPERATOR'S CAB STANDARDS	10-11	Rear View Mirrors	55
TIRE AND WHEEL EQUIPMENT	12	Cab Window Lever	55
FRONT WHEEL TREAD POSITIONS	13	Cab Headliner Controls	56-57
REAR WHEEL TREAD POSITIONS ...	14-15	Cab Air Flow Control	58
DUAL REAR WHEEL TREAD POSITIONS	16-17	Cab Defroster Control	58
DUAL REAR TIRE PRESSURES	17	Cab Air Flow Arrangements	59-61
FUEL SPECIFICATIONS	18-19	Air Conditioner Operation	62
LUBRICATION	20-31	Cab Door Lock	62
Engine Hourmeter	20	Tool Compartment	62
Diesel Engine	21	Operator's Seat	63-65
Lubrication Chart	22-23	Seat Belts	66
Engine Oil Change	24-25	Amber Warning Lamps, Direction .	67-68
Engine Oil Filters	25	Turn Signals & SMV	
Transmission Oil Level Check & Change .	26	Implement Warning Lamps,	
Hydraulic Oil Filters	27-29	SMV Symbol	69
Steering & Brake System Air Removal ..	30	Auxiliary Outlet Socket	70
Front Wheel Bearing	31	Starting Procedure	71-72
ALTERNATOR CHARGING SYSTEMS ...	32	Stopping the Engine	73
		Cold Temperature Operation	74
		Preparing Tractor For Operating in Cold Temperatures	75
		Cold Temperature Starting	76-79
		Case Starting Fluid	76
		Coolant Heater	76
		Operating Ether Start	77-78
		Starting Fluid Container Replacement .	79
		Power Shift Transmission	80-81
		Differential Lock	82
		Power Takeoff	83-85
		Operating PTO	83
		Guards	84
		Operating Safety	85
		Drawbar	86
		Three Point Hitch System	87
		Hitch System Adjustments	88-90

TABLE OF CONTENTS

OPERATING INSTRUCTIONS

Hitch Operation	91-95	Air Induction System	139-148
Anti-Sway Chain	91	Air Filter Service Interval	140
Connect Implement	92	Final Air Filter Service	141-144
Hitch Control Lever	92-93	Aspirated Strata Tube Service ..	145-147
Sensing Control	94-95	Tubes and Hoses	148
Stationary Depth	95		
Hydraulic Float Control	95	Neutral Start Switch Adjustment ..	149-150
		Electrical System	151-156
Hitch Coupler - Category III-II	96-99	Head Lamps	151
Hitch Coupler - Category III	100	Flood Lamps	151
Remote Hydraulic Control	101-107	Flashing Amber Warning Lamps	152
Remote Control Levers	101-102	Tail Lamps	152
Variable Flow Control	103-104	Instrument Cluster Lamps	153
Operating the Remote System	105	Fuse Panel - Tractor	154
Hydraulic Hose Couplers	106	Fuse Panel - Operators Cab	154
Hydraulic Hose Coupling	107	Fuse Panel - Tractor & Cab	155
Remote Cylinder	108	Head Lamp Adjustment	156
Hydraulic Cylinder Jack Pads	109		
Front Axle Adjustment	110	Storage Battery	157-160
Rear Wheel Hub Adjustment	111-113	General Maintenance	157
Dual Wheel Mounting	114	When Batteries Are Not In Use	157
Rear Tire Mounting	115	Access to Batteries	158
Loads Matched to Tractor	115	Battery Cables and Terminals	158
Tractor Ballast	116-120	Battery Water	159
Measuring Slip	116	Breather Tubes	159
Tractor and Equipment Weight	117	Removal and Installation of Batteries .	159
Front End Weights	118	Auxiliary Battery Connections	160
Rear Wheel Weights	119		
Tire Liquid Weight	120	Roll Over Protective Structure	
		(ROPS)	161-163
PREVENTIVE MAINTENANCE	121-176	Tractor Roll Over	162
Hood and Side Panels	122	Safety Rules	162
Cooling System	123-132	Maintenance and Inspection	162
Pressure Cooling System	123	ROPS Label	163
Coolant Solutions	124		
Engine Cooling System Treatment ..	124	Operator's Cab	164-176
Radiator Cleaning	125	Preventive Maintenance	164-165
Cooling System Service	126	Air Filter Removal	166
Thermostat Check	127	Air Filter Service	167-168
Thermostat Replacement	127-129	Seat Belt Inspection	
Fan Belt Adjustment	130	and Maintenance	168
Fan Belt Replacement	131	Operator's Seat	169-170
Water Filter & Conditioner		Refrigerant Check	171-172
(If Equipped)	132	Compressor Belt Adjustment	173
Compressor Belt Replacement	174		
Fuel System	133-138	Dome Lamp	175
Service Intervals	133	Console Lamp	176
Fuel Filter Replacement	134-135		
Primary Fuel Filter	136-137	CASE TECHNICAL MANUALS	177
Air Removal	137-138		

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

Case is continuing to work for your safety: by making tractors with better protection and by giving these rules for safe operation.

Before Starting



CAUTION *Provide a first aid kit for use in case of accident.*



CAUTION *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



WARNING Before starting engine study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



WARNING Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operator's seat.

On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.

Before leaving tractor unattended, lower hydraulically lifted equipment to ground.



 
WARNING Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.




Operation




WARNING Before leaving the tractor, stop the engine, place all controls in neutral, and either set the parking brake or place range lever in PARK position as equipped.

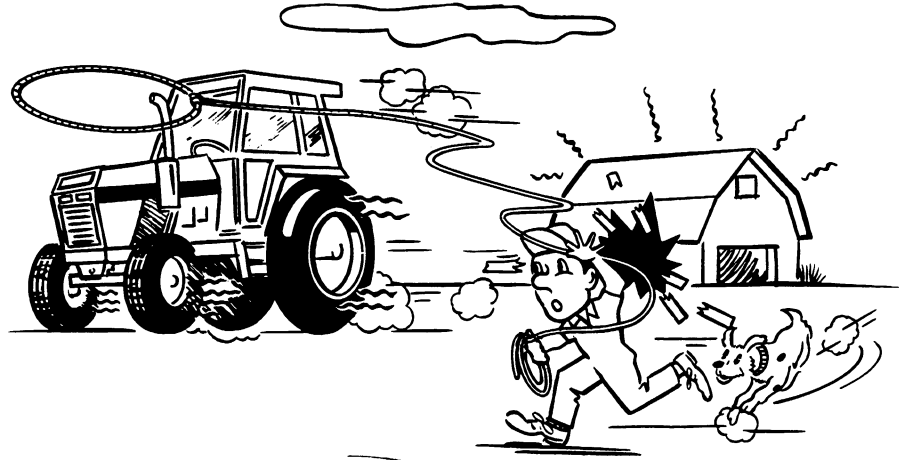

 
WARNING Operate controls only when seated in the Operator's seat.

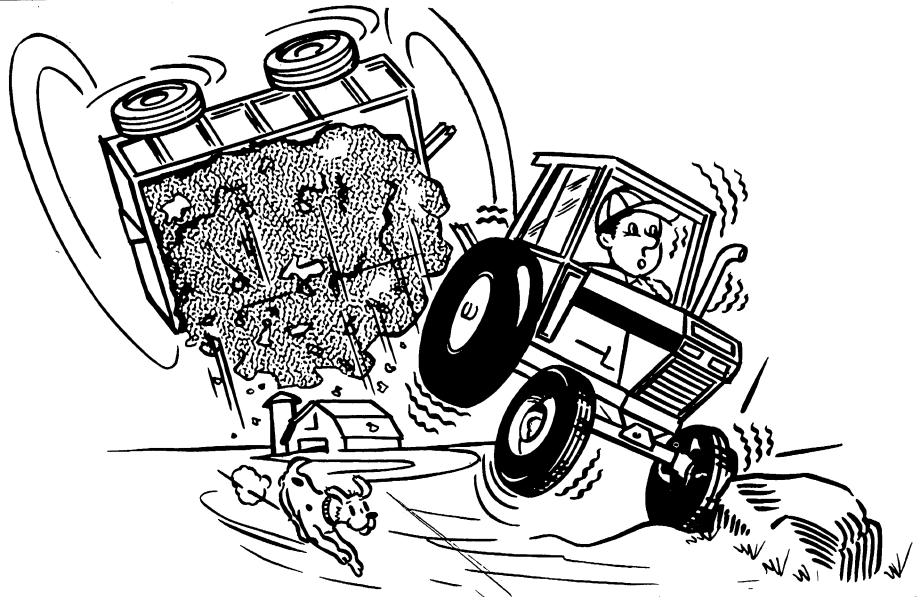

 
WARNING Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.

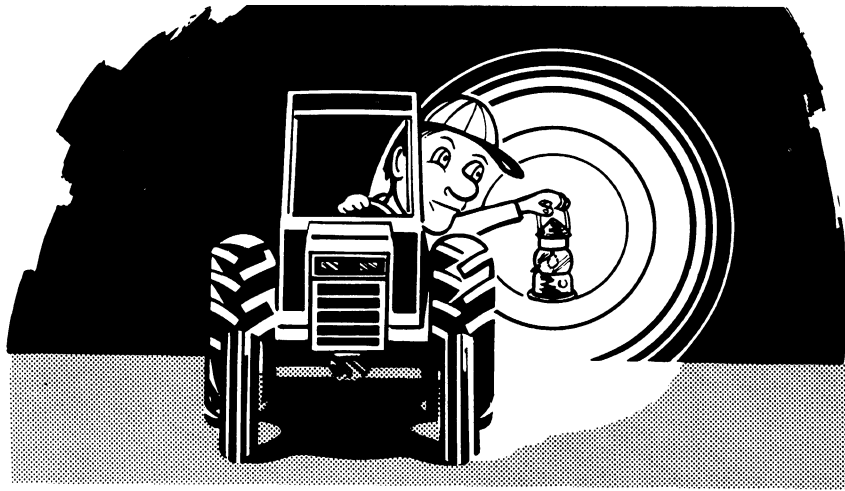

 WARNING On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

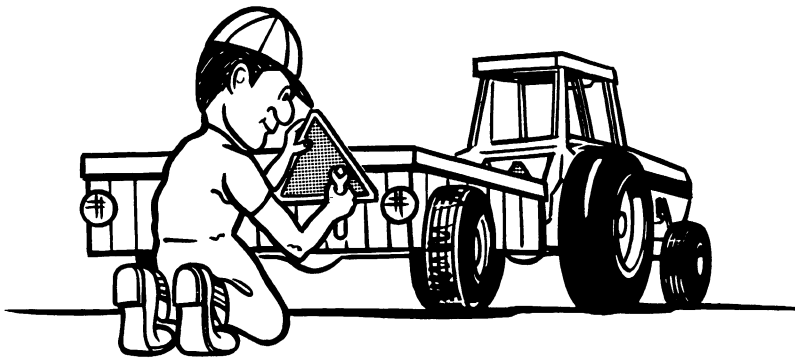


 DANGER Excess tractor speed is the big killer. Only experienced drivers should be permitted on highways.

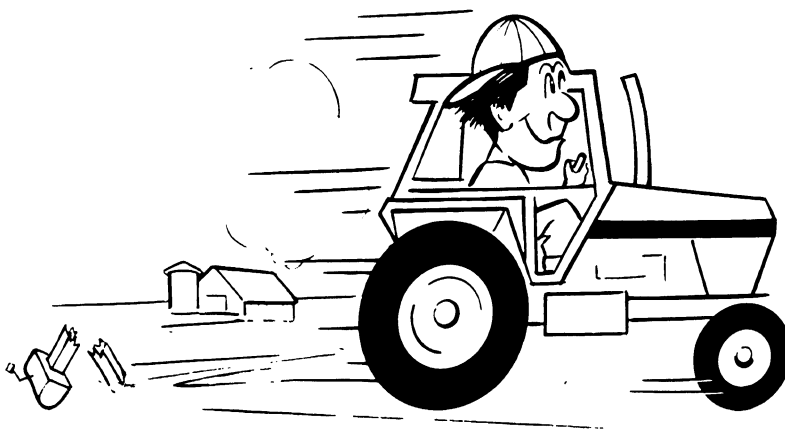




 WARNING *Extra weight increases your braking distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*

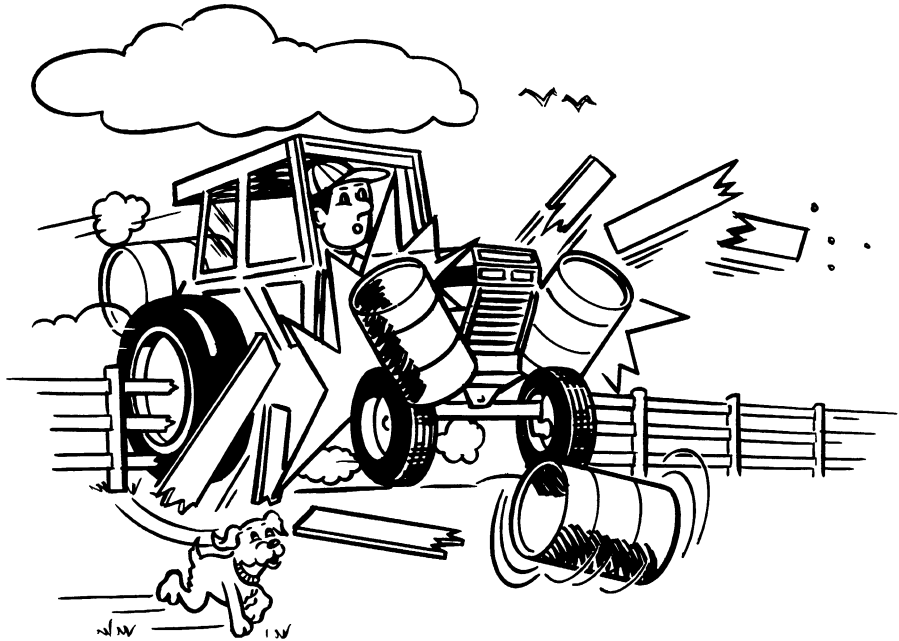


 WARNING *The braking distance will increase in conditions of mud, ice or whenever the traction at one wheel is less than the traction at the opposite wheel. The operator must allow adequate distance to stop in these conditions.*

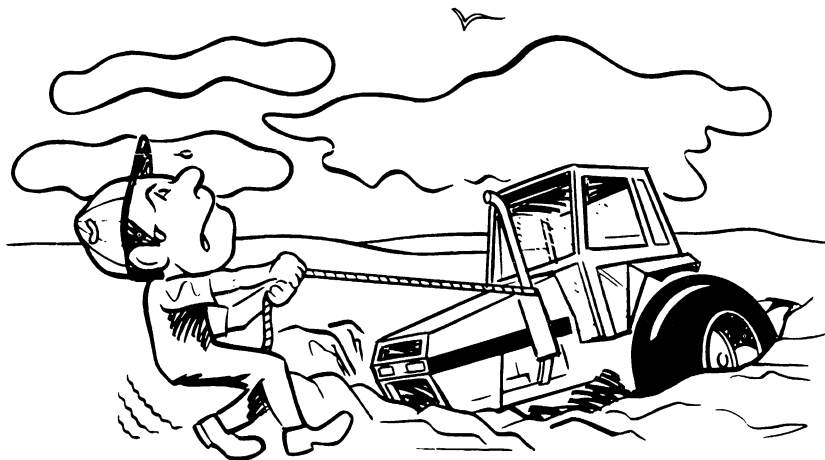




 CAUTION Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.

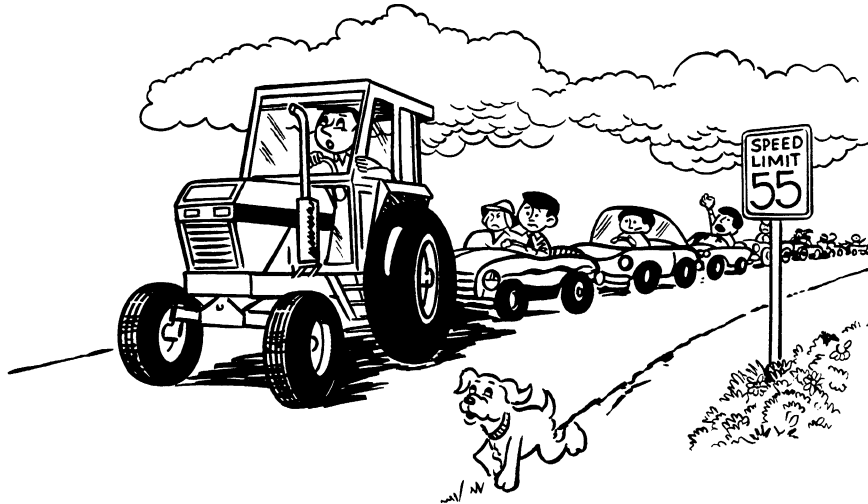

 WARNING Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.

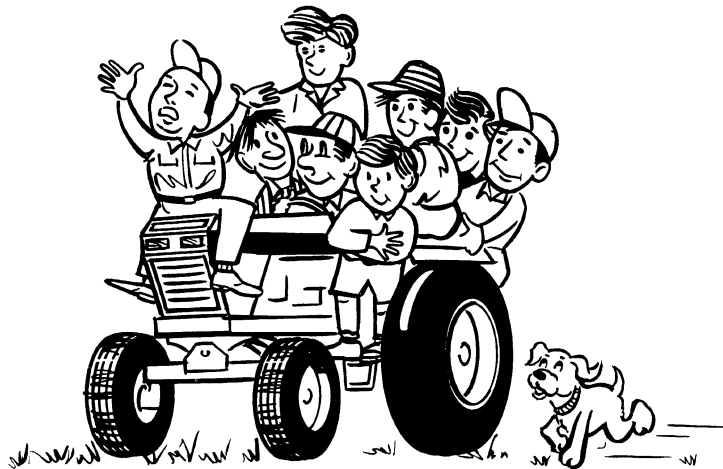


CAUTION Do not operate the tractor at high speeds or attempt to turn the tractor with the differential lock engaged.



CAUTION Try to balance the load primarily on the implement wheels - as in loading a trailer or spreader. Avoid overloading the drawbar. Add front end weights for improved stability. Engage the clutch smoothly, avoid jerking and use the brakes cautiously to avoid jack-knifing.



 WARNING Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use 3 point hitch only with the implements designed for its use - not as a drawbar.

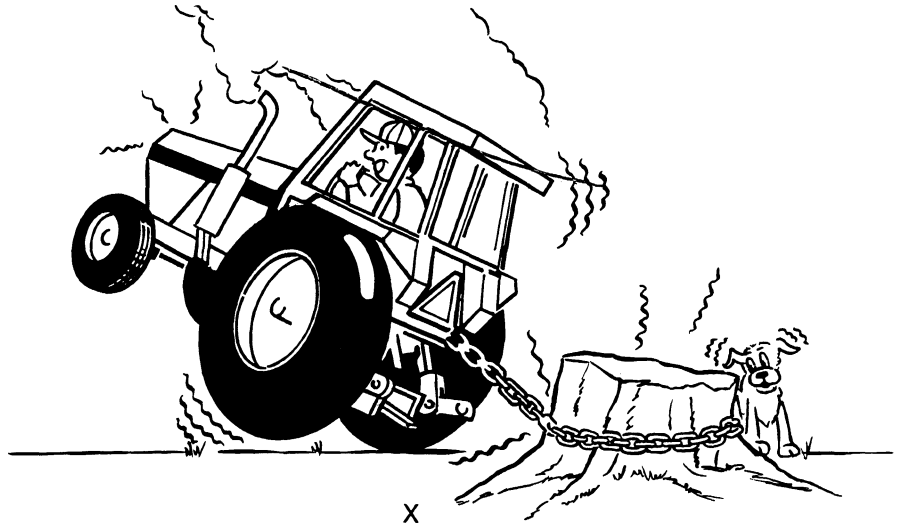





WARNING Be certain both latches are fully engaged across the implement lift pins before transporting or pulling the implement.



 CAUTION The implement should be lowered to the ground before uncoupling of the remote hydraulic hoses.

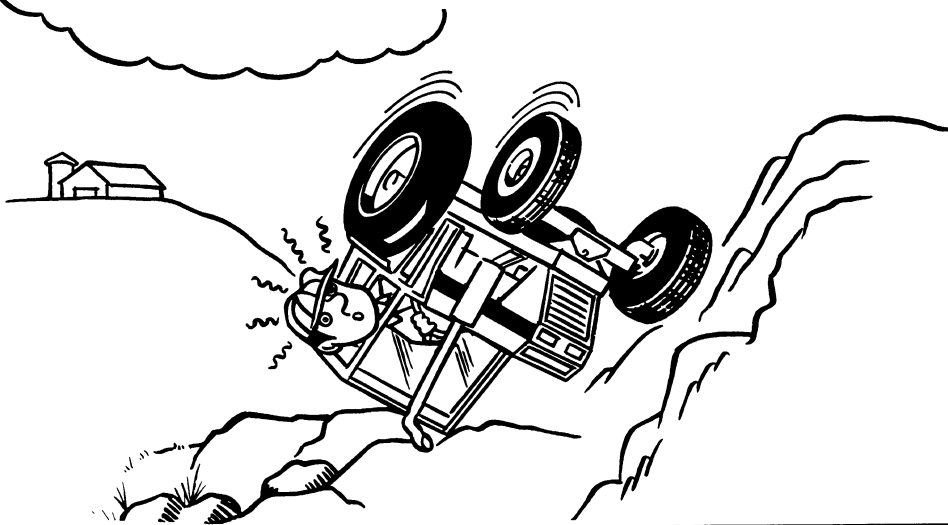

 WARNING Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".

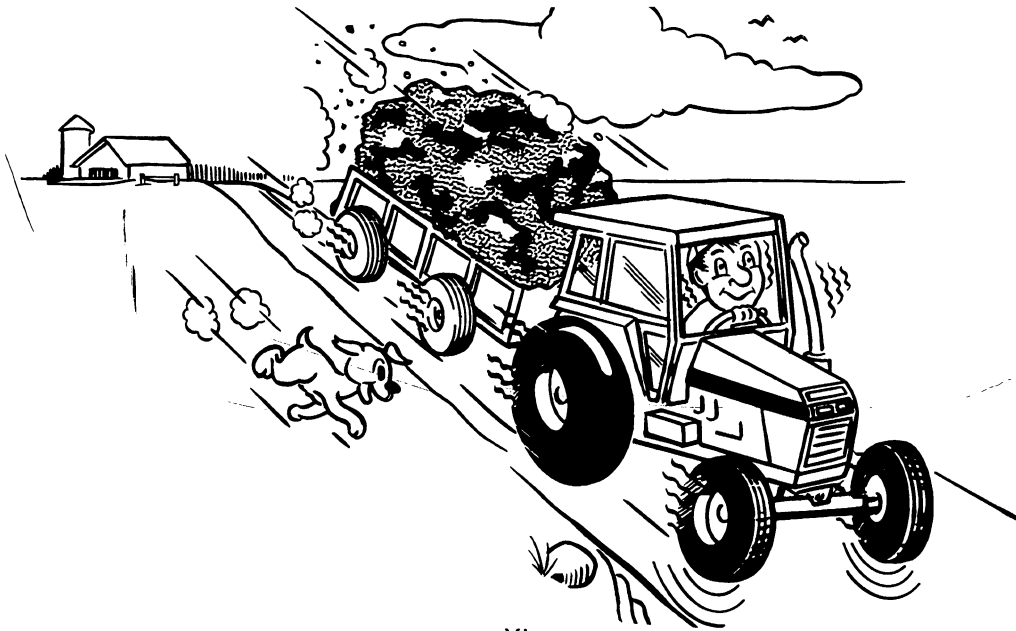



WARNING *Rotating machine parts, stay clear, keep shields installed to help protect from clothing entanglement and injury. Wear close-fitted clothing.*



WARNING *Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.*



WARNING *Whenever a PTO driven machine is in operation, the safety guard must always be in place to prevent injury to the operator. The safety guard must never be removed at any time, except for replacement. When the PTO is not in use, the tubular guard must be installed over the end of the PTO shaft.*



WARNING *When doing stationary PTO work and dismounting from the tractor with the PTO running, keep clear of all moving parts as they are a potential safety hazard.*



WARNING *On a mobile power take-off application, always disengage the PTO before dismounting from the tractor.*



WARNING *This tractor is equipped with a 1000 RPM PTO - be sure implements are matched for this drive speed. Center and lock drawbar when using PTO.*

Buy Now



Our support email:

ebooklibonline@outlook.com