

2090 Tractor Operators Manual

9-6374



Reprinted



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.

WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) or your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

TABLE OF CONTENTS

TO THE OWNER	III	LUBRICATION (Cont'd)	
SAFETY	IV-XVIII	Differential Oil Level	34
Safety Rules	IV	Planetary Oil Level	35
Before Starting	IV-V	Steering & Brake System Air Removal ..	36
Operation	VI-XV	Front Wheel Bearing	37
Service	XVI-XVIII	Front Wheel Pivot Pin Bearing	38
HAND SIGNALS	XIX-XX	ALTERNATOR CHARGING SYSTEMS ...	38
DECALS	XXI-XXV	OPERATING INSTRUCTIONS	39-129
NOTES	XXVI	Run-In Procedure	39
SERIAL NUMBERS	1	Before Starting the Engine	40
DIESEL ENGINE SPECIFICATIONS	2,3	Towing	41
GENERAL SPECIFICATIONS	4-7	How to Transport the Tractor	41
APPROXIMATE TRACTOR SPEEDS		Operating Instruments	42-47
12 Speed Transmission	8	Automatic Engine Shutoff	
8 Speed Transmission	9	(If Equipped)	46-47
FUEL SPECIFICATIONS	10	Operating Controls	48-79
APPROXIMATE OVER ALL		Steering Console	48-49
MEASUREMENTS	11-13	Foot Pedals	50-51
APPROXIMATE TRANSPORT		Operator's Console	52-60
WEIGHT	11-13	Steering Column Tilt	61
OPERATOR'S CAB STANDARDS	11	Heater Stop Valve	62
TIRE AND WHEEL EQUIPMENT	14-15	Fuel Tank Water Trap	62
TIRE SIZE ARRANGEMENTS - MFD	16	Rear View Mirrors	63
FRONT WHEEL TREAD POSITIONS ..	17-18	Cab Window Lever	63
REAR WHEEL TREAD POSITIONS ...	19-20	Cab Headliner Controls	64-65
DUAL REAR WHEEL		Cab Air Flow Control	66
TREAD POSITIONS	21-22	Cab Defroster Control	66
DUAL REAR TIRE PRESSURES	23	Cab Air Flow Arrangements	67-69
LUBRICATION	24-38	Air Conditioner Operation	70
Engine Hourmeter	24	Cab Door Lock	70
Diesel Engine	25	Tool Compartment	70
Lubrication Chart	26-27	Operator's Seat	71-74
Engine Oil Change	28-29	Seat Belts	75
Engine Oil Filter	29	Amber Warning Lamps, Direction ..	76-77
Transmission Oil Level Check & Change ..	30	Turn Signals & SMV	
Transfer Gear Box Oil Level	30	Implement Warning Lamps,	
Hydraulic Oil Filters	31-33	SMV Symbol	78
		Auxiliary Outlet Socket	79
		Starting Procedure	80-81
		Stopping the Engine	82
		Cold Temperature Operation	83
		Preparing Tractor For Operating	
		In Cold Temperatures	84
		Cold Temperature Starting	85-88
		Case Starting Fluid	85
		Coolant Heater	85
		Operating Ether Start	86-87
		Starting Fluid Container Replacement ..	88
		Power Shift Transmission	89-90
		Mechanical Shift Transmission	91
		Differential Lock	92

TABLE OF CONTENTS

OPERATING INSTRUCTIONS (Cont'd)

Power Takeoff	93-96
Operating PTO	93
540 or 1000 RPM PTO Operation	94
Guards	95
Operating Safety	96
Drawbar	97
Three Point Hitch System	98
Hitch System Adjustments	99-101
Hitch Operation	102-106
Connect Implement	102
Hitch Control Lever	102-103
Sensing Control	104-105
Stationary Depth	105
Hydraulic Float Control	105
Anti-Sway Chain	106
Hitch Coupler - Category II	106
Hitch Coupler - Category III-II	107-109
Remote Hydraulic Control	110-116
Remote Control Levers	110-111
Variable Flow Control	112-113
Operating the Remote System	114
Hydraulic Hose Couplers	115
Hydraulic Hose Coupling	116
Remote Cylinder	117
Hydraulic Cylinder Jack Pads	118
Front Axle Adjustment	119
Rear Wheel Hub Adjustment	120-122
Dual Wheel Mounting	123
Rear Tire Mounting	124
Tractor Ballast	124-129
Ballast	124
Measuring Slip	125
Tractor and Equipment Weight	126
Front End Weights	127
Rear Wheel Weights	128
Tire Liquid Weight	129

PREVENTIVE MAINTENANCE 130-186

Hood and Side Panels	131
Slide Type Hood (If Equipped) ...	132-133
Slide Type Hood Adjustment (If Equipped)	132
Slide Type Hood Lubrication (If Equipped)	133
Tilt Type Hood	133
Cooling System	134-143
Pressure Cooling System	134
Coolant Solutions	135
Engine Cooling System Treatment ..	135
Radiator Cleaning	136
Cooling System Service	137
Thermostat Check	138
Thermostat Replacement	138-140
Fan Belt Adjustment	141
Fan Belt Replacement	142
Water Filter and Conditioner	143

PREVENTIVE MAINTENANCE (Cont'd)

Fuel System	144-149
Service Intervals	144
Fuel Filter Replacement	145-146
Primary Fuel Filter	147-148
Air Removal	148-149
Air Intake System	150-157
Air Filter Service Interval	151
Final Air Filter Service	152-156
Tubes and Hoses	157
Neutral Start Switch Adjustment ..	158-159
Electrical System	160-165
Head Lamps	160
Flood Lamps	160
Flashing Amber Warning Lamps	161
Tail Lamps	161
Instrument Cluster Lamps	162
Fuse Panel - Tractor	163
Fuse Panel - Operators Cab	163
Fuse Panel - Tractor and Cab	164
Head Lamp Adjustment	165
Storage Battery	166-169
Access to Batteries	167
Battery Cables and Terminals	167
Battery Water	168
Breather Tubes (If Equipped)	168
Removal and Installation of Batteries .	168
Auxiliary Battery Connections	169
Roll Over Protective Structure (ROPS)	170-172
Tractor Roll Over	171
Safety Rules	171
Maintenance and Inspection	171
ROPS Label	172
Operator's Cab	173-186
Preventive Maintenance	173-174
Air Filter Removal	175
Air Filter Service	176-177
Seat Belt Inspection and Maintenance	177
Operator's Seat	178-179
Refrigerant Check	180-181
Compressor Belt Adjustment	182
Compressor Belt Replacement	183
Dome Lamp	184-185
Console Lamp	186
CASE TECHNICAL MANUALS	187

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety: by making tractors with better protection and by giving these rules for safe operation.

Before Starting



CAUTION *Provide a first aid kit for use in case of accident.*



CAUTION *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



WARNING Before starting engine study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



WARNING Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operator's seat.

On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.

Before leaving tractor unattended, lower hydraulically lifted equipment to ground.



 
WARNING Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.




Operation




WARNING Before leaving the tractor, stop the engine, place all controls in neutral, and either set the parking brake or place range lever in PARK position as equipped.

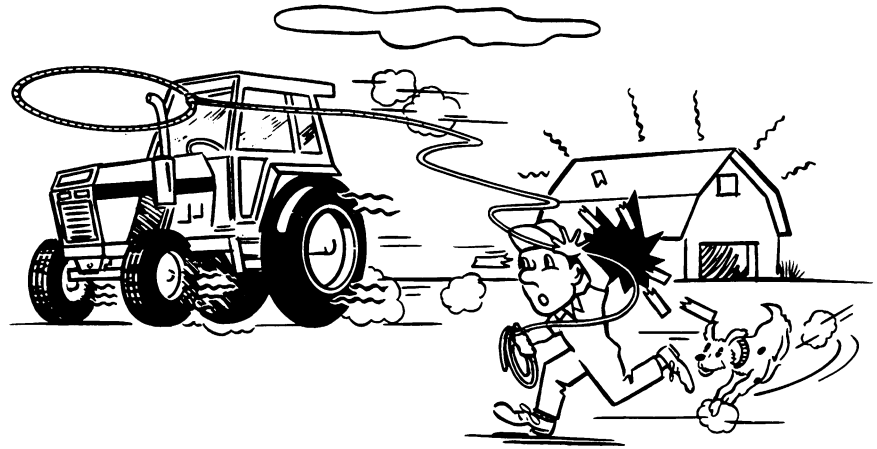

 
WARNING Operate controls only when seated in the Operator's seat.

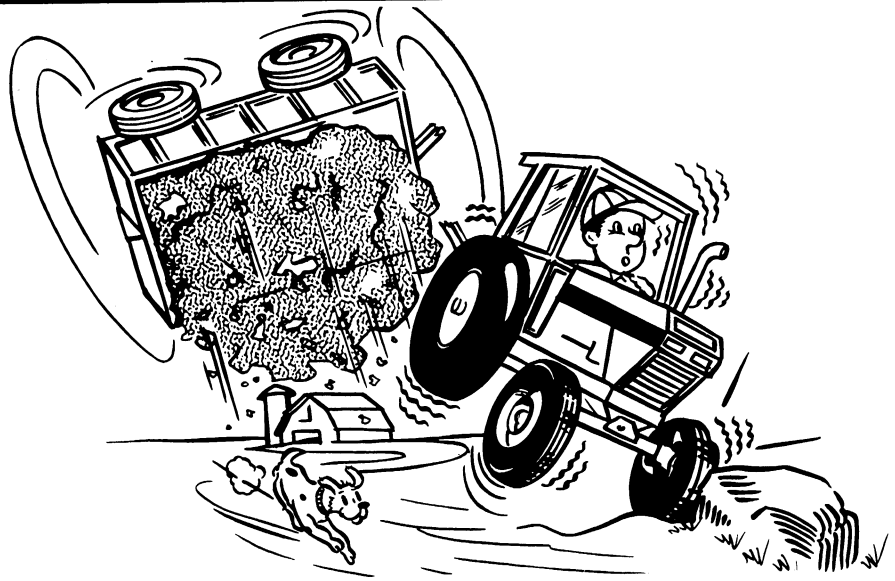

 
WARNING Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.

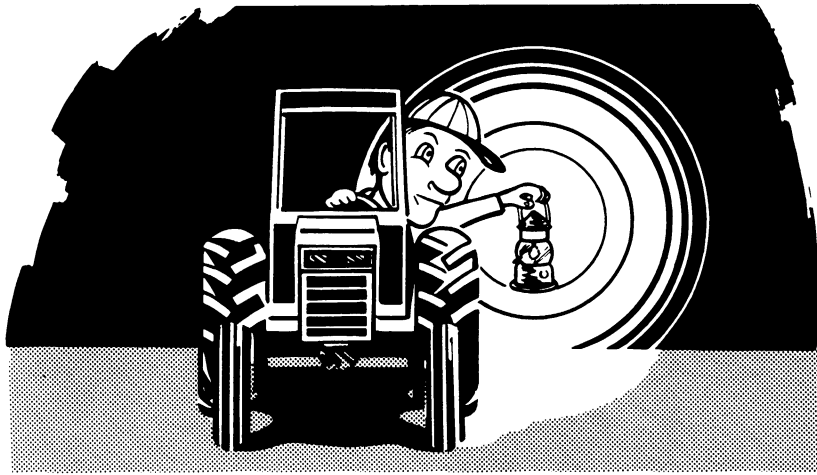

 WARNING *On roads, use flasher/lights according to local laws. Keep SMV emblem visible.*

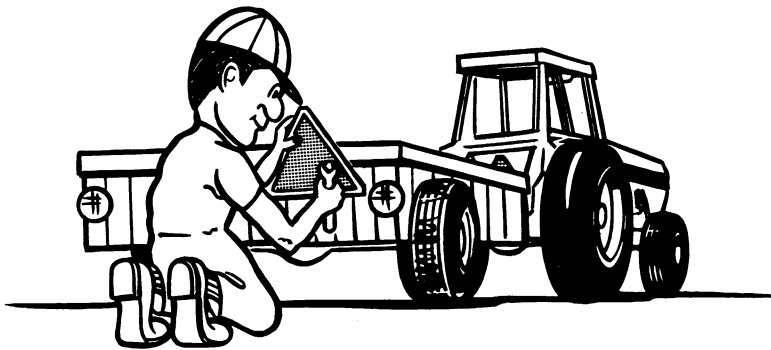


 DANGER *Excess tractor speed is the big killer. Only experienced drivers should be permitted on highways.*

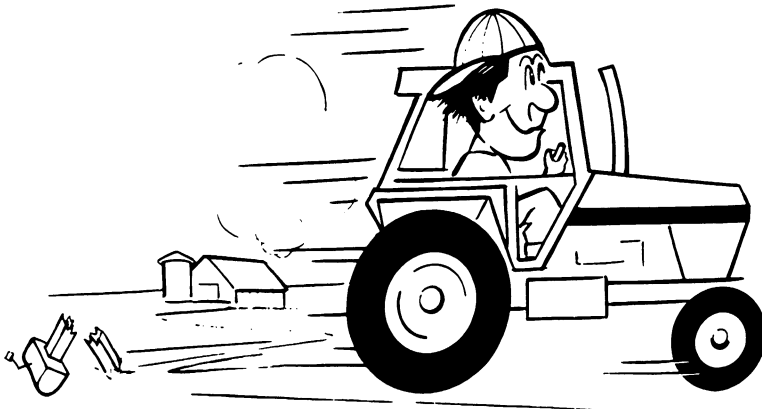




 WARNING Extra weight increases your braking distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.

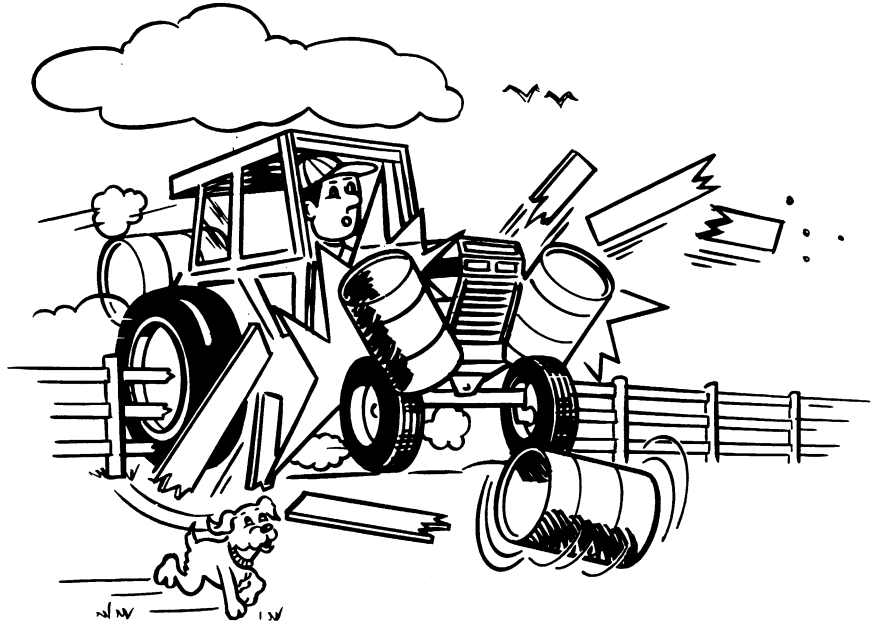

 
WARNING The braking distance will increase in conditions of mud, ice or whenever the traction at one wheel is less than the traction at the opposite wheel. The operator must allow adequate distance to stop in these conditions.

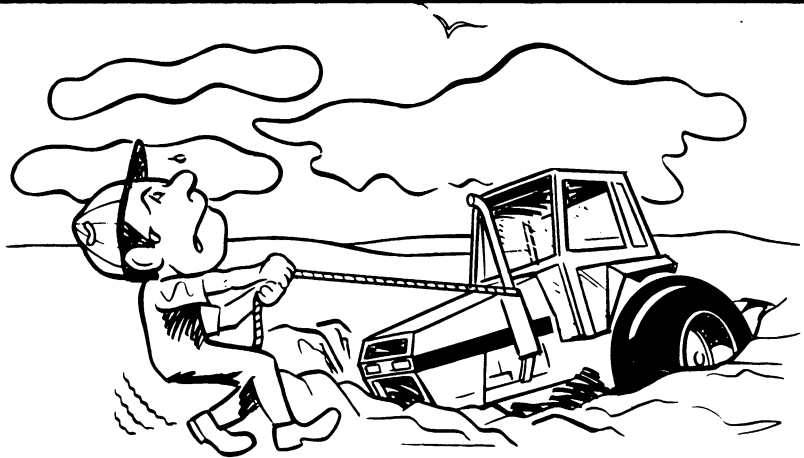


VIII



 CAUTION *Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.*

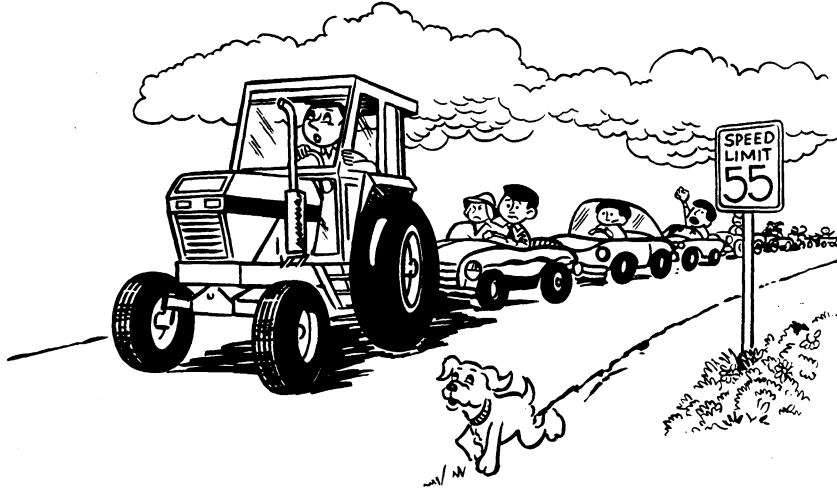

 WARNING *Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.*

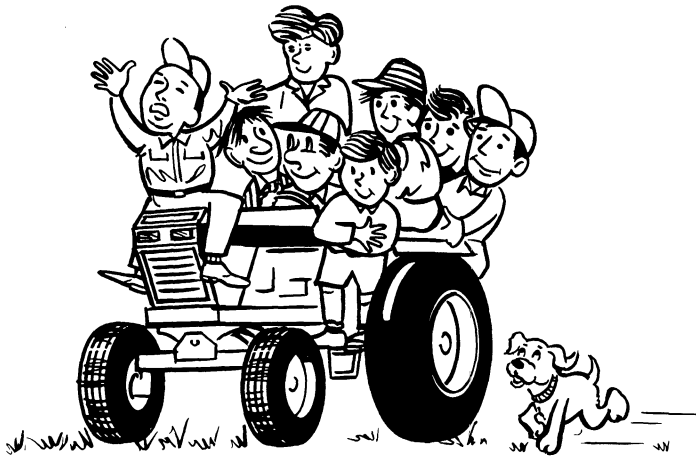


CAUTION *Do not operate the tractor at high speeds or attempt to turn the tractor with the differential lock engaged.*



CAUTION Try to balance the load primarily on the implement wheels - as in loading a trailer or spreader. Avoid overloading the drawbar. Add front end weights for improved stability. Engage the clutch smoothly, avoid jerking and use the brakes cautiously to avoid jack-knifing.



 WARNING Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use 3 point hitch only with the implements designed for its use - not as a drawbar.

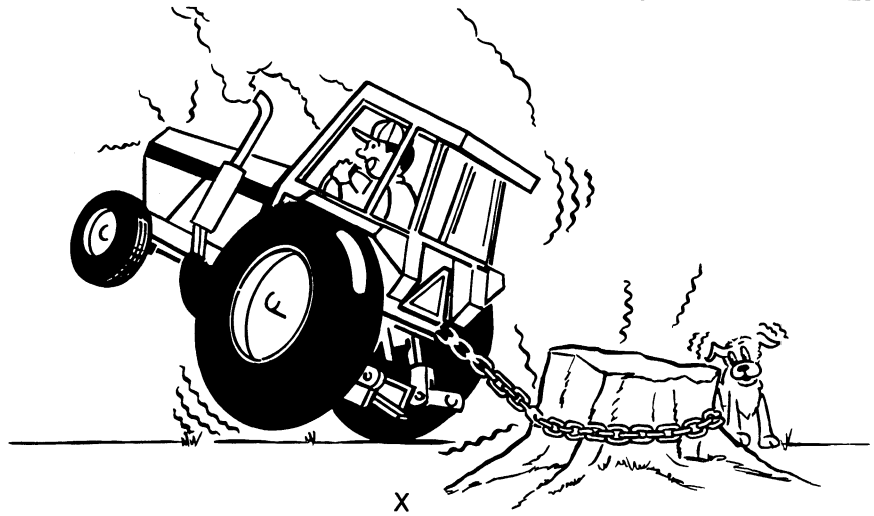





WARNING Be certain both latches are fully engaged across the implement lift pins before transporting or pulling the implement.



 CAUTION The implement should be lowered to the ground before uncoupling of the remote hydraulic hoses.

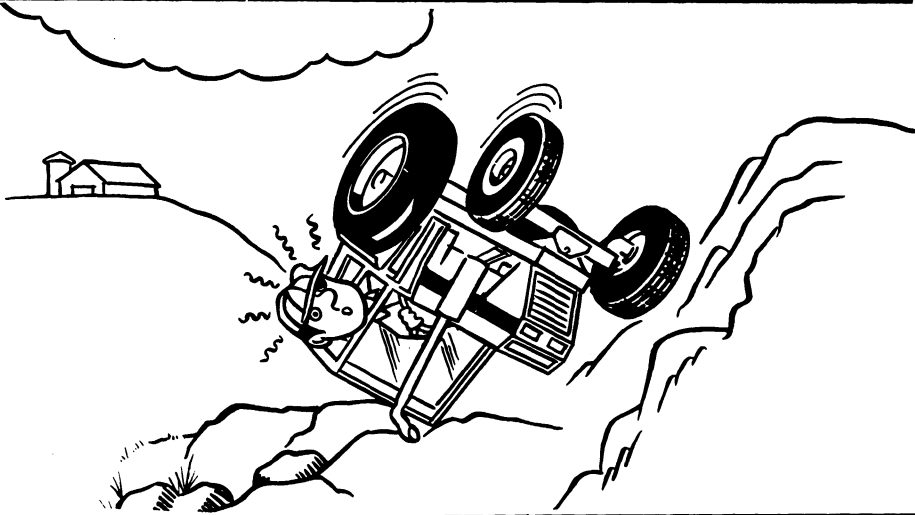

 WARNING Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".

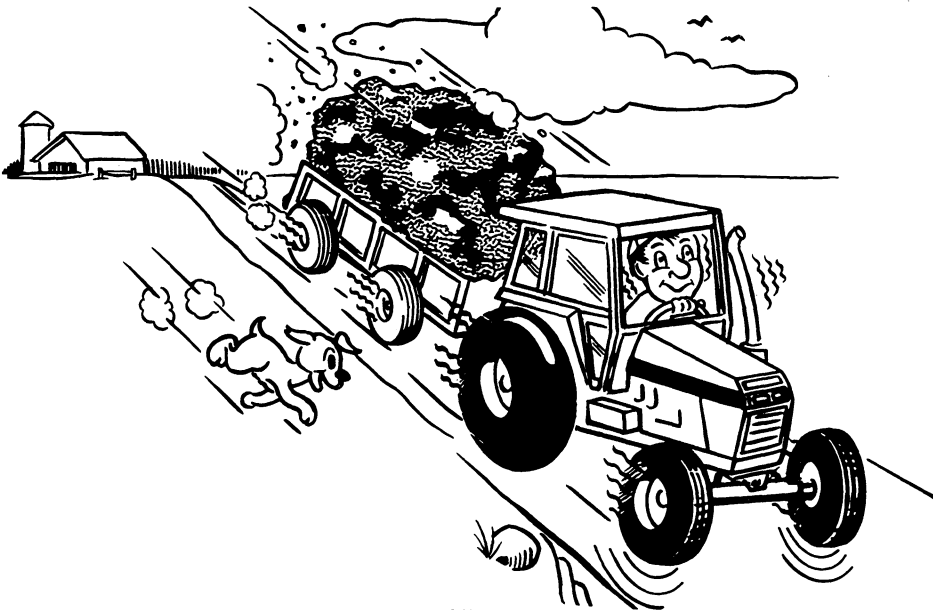

Buy Now



Our support email:

ebooklibonline@outlook.com