

# TABLE OF CONTENTS

TO THE OWNER .....	III	OPERATING INSTRUCTIONS .....	34-127
SAFETY .....	IV-XVI	Run-In Procedure .....	34,35
Safety Rules .....	IV	Before Starting the Engine .....	36
Before Starting .....	IV-V	Towing .....	37
Operation .....	VI-XIII	Operating Instruments .....	38-43
Service .....	XIV-XVI	Operating Controls .....	44-81
HAND SIGNALS .....	XVII-XVIII	Steering Console .....	44-51
DECALS .....	XIX-XXIII	Steering Column Tilt .....	52
SERIAL NUMBERS .....	1	Moving the Telescopic	
DIESEL ENGINE SPECIFICATIONS ...	2,3	Steering Column .....	52
GENERAL SPECIFICATIONS .....	4-7	Operator's Console .....	53-63
APPROXIMATE TRACTOR SPEEDS ..	8,9	Hand Brake Control .....	64
APPROXIMATE OVER ALL		Heater Stop Valve .....	65
MEASUREMENTS .....	10	Fuel Tank Water Traps .....	65
APPROXIMATE TRANSPORT WEIGHT .	10	Cab Headliner Controls .....	66,67
OPERATOR'S CAB .....	10	Cab Air Flow Control .....	68
TIRE AND WHEEL EQUIPMENT .....	11	Cab Defroster Control .....	68
WHEEL TREAD POSITIONS .....	12-16	Cab Air Flow Arrangements ...	69-71
TIRE PRESSURE .....	16	Air Conditioner Operation .....	72
DUAL WHEELS .....	17	Cab Door Lock .....	72
FUEL SPECIFICATIONS .....	18,19	Ash Tray .....	72
LUBRICATION .....	20-33	Rear View Mirrors .....	73
Engine Hourmeter .....	20	Cab Window Lever .....	73
Diesel Engine .....	21	Operator's Seat .....	74-76
Lubrication Chart .....	22,23	Seat Belts .....	77
Engine Oil Change .....	24,25	Amber Warning Lamps, Direction	
Engine Oil Filters .....	25	Turn Signals & SMV .....	78,79
Rear Steering Valve Filter .....	26,27	Implement Warning Lamps &	
Rear Steering Hydraulic Oil Filter ...	28	SMV Symbol .....	80
Transmission Oil Level		Auxiliary Outlet Socket .....	81
Check & Change .....	29	Starting Procedure .....	82-84
Hydraulic Oil Filters .....	29,30	Stopping The Engine .....	84,85
Planetary Oil Level Check & Change .	31	Cold Temperature Operation .....	85
Differential Oil Level Check & Change .	32	Preparing Tractor For Operating in	
Tractor Brakes .....	33	Cold Temperatures .....	86
ALTERNATOR CHARGING SYSTEM ..	34	Cold Temperature Starting .....	87-90
		Coolant Heater .....	87
		Operating Cold Start Assist .....	88,89
		Starting Fluid	
		Container Replacement .....	90
		Power Shift Transmission .....	91,92
		Power Takeoff .....	93-95
		Operating PTO .....	93
		Guards .....	94
		PTO Operating Safety .....	95
		Drawbar .....	96
		Three Point Hitch System .....	97
		Hitch System Adjustments .....	98-100

# TABLE OF CONTENTS

## OPERATING INSTRUCTIONS

Hitch Operation	101-105
Hitch Control Lever	101
Electronic Hitch System	102,103
Controlling Maximum Depth	104
Stationary Depth Operation	104
Hydraulic Float Control	105
Anti-Sway Chain	105

Hitch Coupler - Category III	106
Remote Hydraulic Control	107-113
Remote Control Levers	107,108
Variable Flow Control	109,110
Operating the Remote System	111
Hydraulic Hose Couplers	112
Hydraulic Hose Coupling	113
Remote Cylinder	114
Hydraulic Cylinder Jack Pads	115
Wheel Rim Adjustment & Mounting	116
Wheel Spacing and Clamp Adjustment	117
Power Adjustable Wheel Mounting	118,119
Dual Wheel Mounting	120
Tire Mounting	121
Loads Matched to Tractor	121
Tractor Ballast	122-126
Measuring Slip	122
Tractor and Equipment Weight	123
Front End Weights	124
Wheel Weights	125
Tire Liquid Weight	126
Hood and Side Panels	127

## PREVENTIVE MAINTENANCE

Cooling System	129-137
Pressure Cooling System	129
Coolant Solutions	130
Radiator Cleaning	130
Cooling System Service	131
Thermostat Check	132
Thermostat Replacement	132-134
Fan Belt Adjustment	135
Fan Belt Replacement	136
Water Filter and Conditioner	137

Fuel System	138-143
Service Intervals	138
Fuel Filter Replacement	139,140
Primary Fuel Filter	141,142
Air Removal	142,143

Air Induction System	144-153
Air Filter Service Interval	145
Final Air Filter Service	146-149
Aspirated Strata Tube Service	150-152
Tubes and Hoses	153

Neutral Start Switch Adjustment	154,155
---------------------------------	---------

Parking Brake Adjustment	156
--------------------------	-----

Electrical System	157-161
Head Lamps	157
Flood Lamps	157
Flashing Amber Warning Lamps	158
Rear Flood and Tail Lamp	158
Instrument Cluster Lamps	159
Fuse Panel	160
Head Lamp Adjustment	161

Storage Battery	162-164
When Batteries Are Not in Use	162
Battery Cables and Terminals	162
Battery Water	163
Vent Caps	163
Removal & Installation of Batteries	163
Auxiliary Battery Connections	164

Roll Over Protective Structure (ROPS)	165,166
Tractor Roll Over	166
Safety Rules	166
Maintenance and Inspection	166

Operator's Cab	167-181
Preventive Maintenance	167,168
Air Filter Removal	169
Air Filter Service	170,171
Seat Belt Inspection and Maintenance	171
Operator's Seat	172,173
Compressor Belt Adjustment	174
Compressor Belt Replacement	175
Compressor Belt Alignment	176
Refrigerant Check	177,178
Dome Lamp	179,180
Console Lamp	181

CASE TECHNICAL MANUALS	183
------------------------	-----

# TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can assist you with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

*Your Authorized Case Dealer*



**Figure 1**

**NOTE:** *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.*

# SAFETY

## Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

**READ THIS MANUAL COMPLETELY** and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.

## Before Starting



**CAUTION** *Provide a first aid kit for use in case of accident.*



**CAUTION** *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



**WARNING** Before starting engine study Operator's Manual safety messages.

 
Read all safety signs on machine.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.

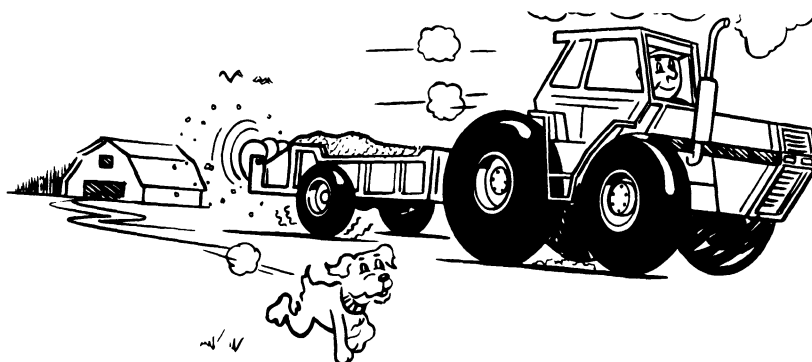

**WARNING** Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operator's seat.

On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.

Before leaving tractor unattended, lower hydraulically lifted equipment to ground.



**WARNING** Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.



**WARNING:** If the steering mode selector switch is turned to another mode position while the tractor is not in operation, the rear wheels can move when the tractor is started again. To prevent possible injury from the rear tires moving, make sure no person is between the rear tires and tractor frame before you start the tractor engine.



## Operation



 
**CAUTION** Before leaving the tractor, stop the engine, place all controls in neutral and set the parking brake.




**WARNING** Operate controls only when seated in the Operator's seat.




**WARNING** Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.

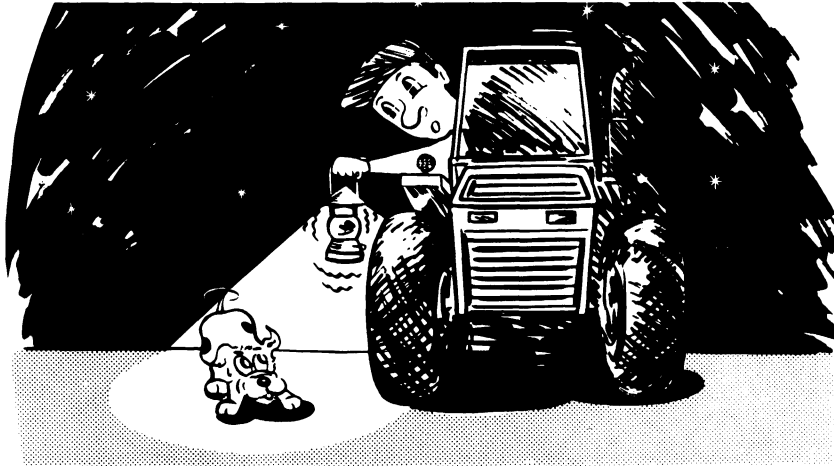

 **WARNING** On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

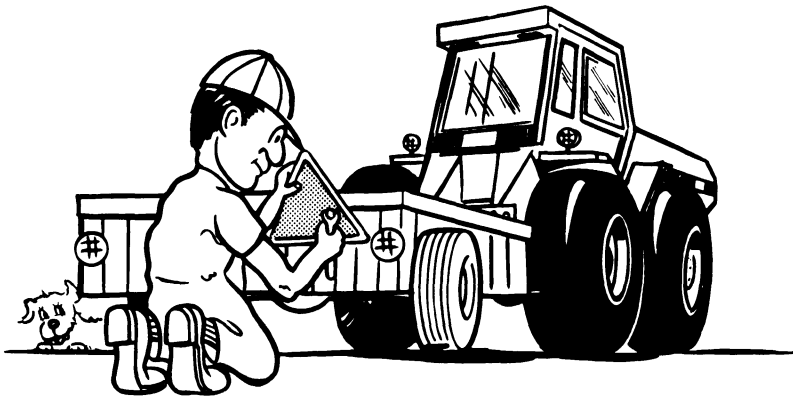

 **DANGER** Excess tractor speed is the big killer. Only experienced drivers should be permitted on highways.

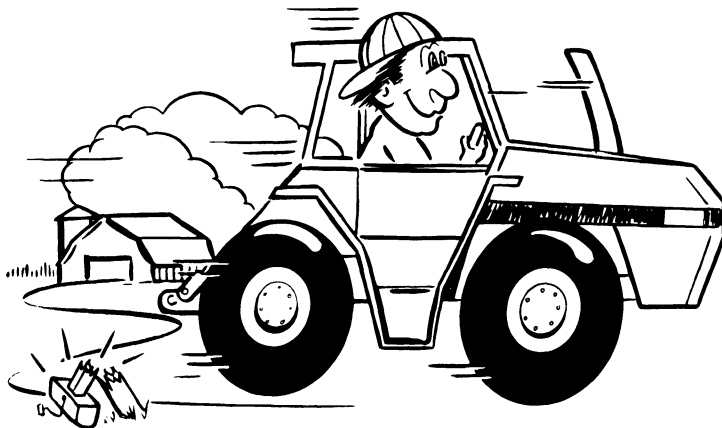



**WARNING** *Extra weight increases your braking distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*



 
**WARNING** *The braking distance will increase in conditions of mud, ice or whenever the traction at one wheel is less than the traction at the opposite wheel. The operator must allow adequate distance to stop in these conditions.*








**CAUTION** Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.

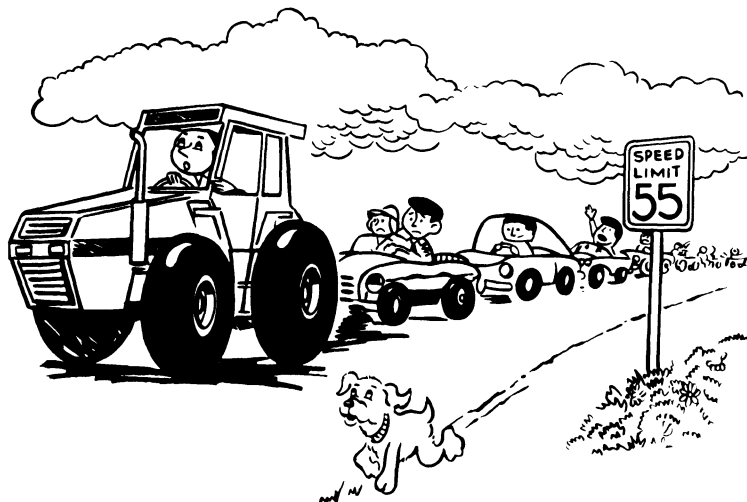

 **WARNING** Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.

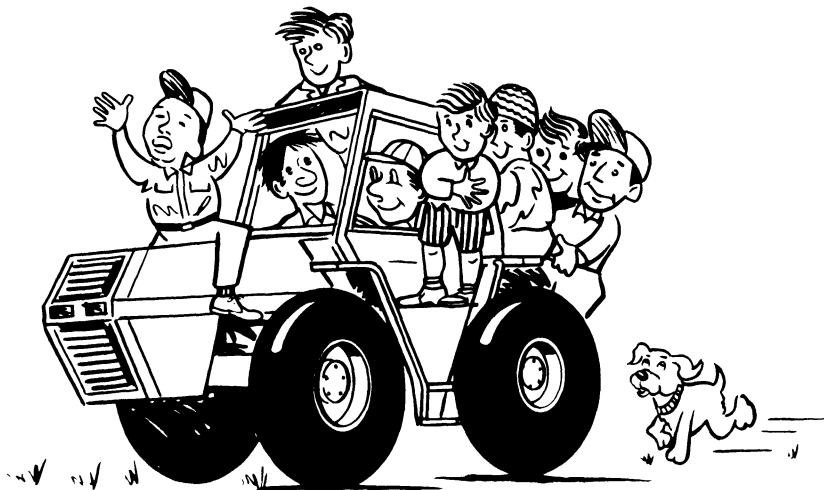

**CAUTION:** During road transport use front steering only.



 
**WARNING:** When the reset button is used, with the engine running, the hitch will raise or lower according to where the hitch control lever is set. Clear the area of other persons before actuating the electronic hitch system.




**WARNING** Be certain both latches are fully engaged across the implement lift pins before transporting or pulling the implement.



**CAUTION** The implement should be lowered to the ground before uncoupling of the remote hydraulic hoses.

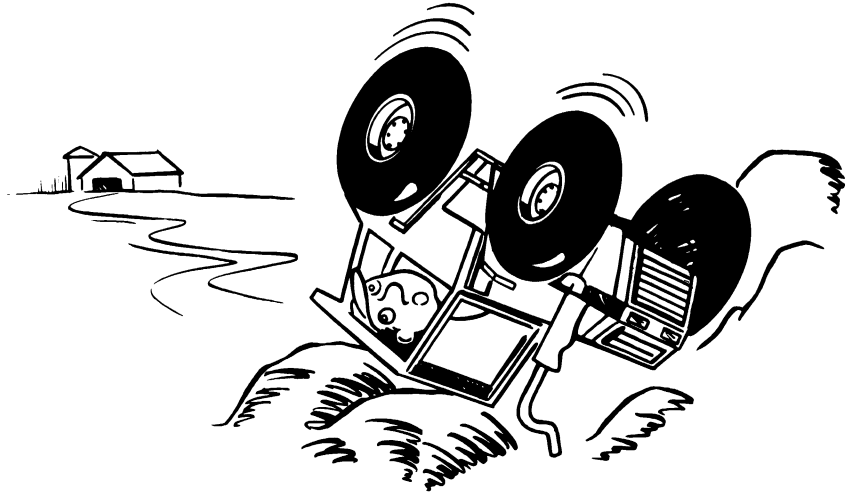

 **WARNING** Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".

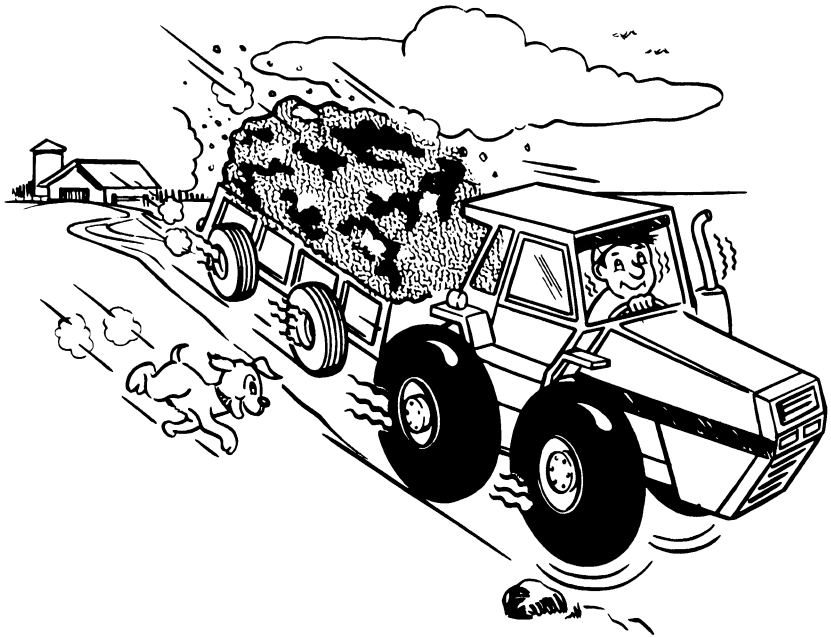



**WARNING** Rotating machine parts, stay clear, keep shields installed to help protect from clothing entanglement and injury. Wear close-fitted clothing.



**WARNING** Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.



**WARNING** Whenever a PTO driven machine is in operation, the safety guard must always be in place to prevent injury to the operator. The safety guard must never be removed at any time, except for replacement. When the PTO is not in use, the tubular guard must be installed over the end of the PTO shaft.



**WARNING** When doing stationary PTO work and dismantling from the tractor with the PTO running, keep clear of all moving parts as they are a potential safety hazard.



**WARNING** On a mobile power take-off application, always disengage the PTO before dismantling from the tractor.



**WARNING** If this tractor is equipped with a 1000 RPM PTO, be sure implements are matched for this drive speed. Center and lock drawbar when using PTO.



**WARNING** Replace fan if it has been bent, modified, or damaged in any way. Stop and make corrections if fan strikes any part of the tractor.

**WARNING** Engine can start with transmission in gear when neutral safety switch is by-passed:

 


1. Do not connect across terminals on starter.
2. Attach booster batteries according to safe method in Operator's Manual. Then use recommended starting procedure from Operator's seat.

Machine run-away can cause injury or death to operator and bystanders.



**WARNING:** Securely fasten your seat belt as this tractor is equipped with a ROPS cab. The seat belts can help insure your safety if they are used and maintained.

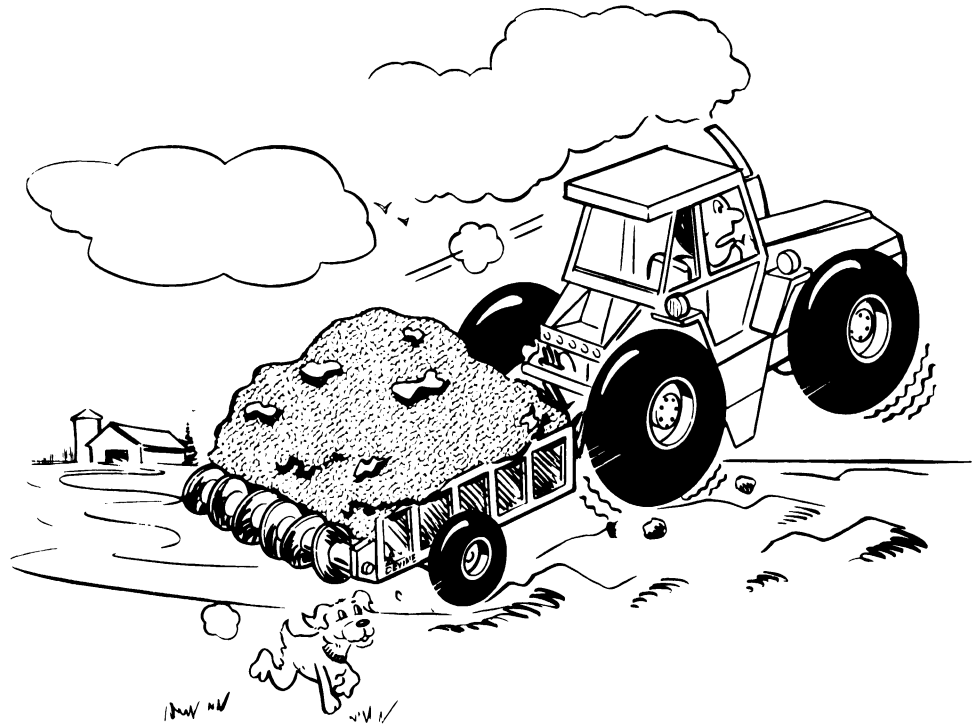


**CAUTION** Make sure that the weight of a trailed vehicle that is not equipped with brakes, NEVER EXCEEDS the weight of the tractor that is towing the vehicle. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.



**CAUTION** Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.




 **WARNING** Lower or block hydraulically or mechanically elevated implements and other attachments before servicing or when leaving the equipment.

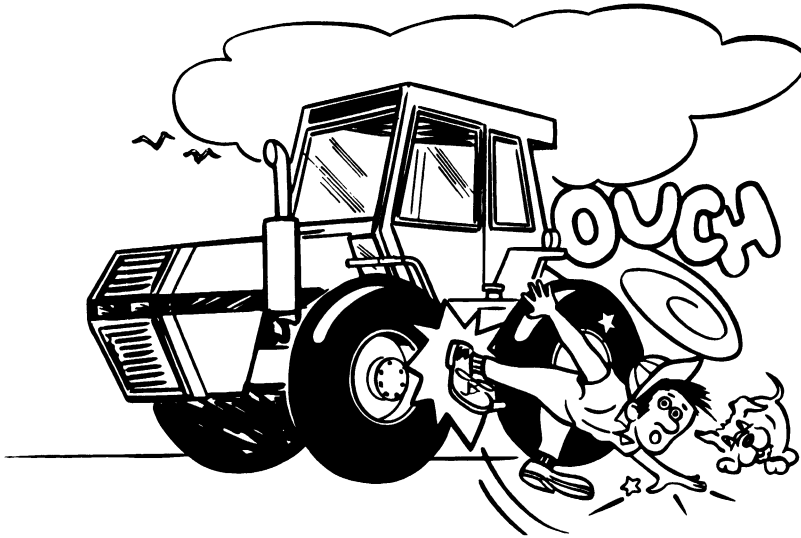

**CAUTION** To provide more secure hand and foot mobility, preventing slipping and possible injury, always face the tractor when mounting and dismounting. Keep steps clean of dirt and debris to prevent slipping.

**"LOOK UP"**

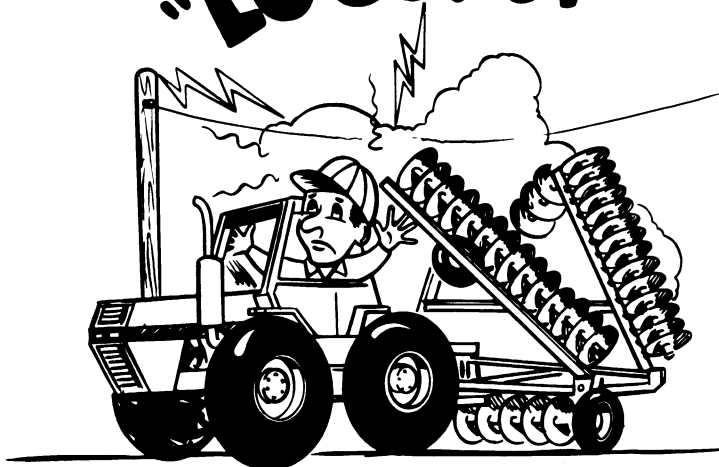 

**WARNING** Look up and live. Make sure there is enough clearance between raised equipment and overhead power lines.

## Service



**WARNING** Hot coolant can spray out if cap is removed suddenly. Remove cap by turning to first notch. Wait until pressure is released, then continue removal. Scalding can result from fast cap removal.



**WARNING:** Hot coolant can spray under pressure. Close valves before removing filter.



**WARNING** Never operate the engine in a closed building. Proper ventilation is required under all circumstances.



**WARNING** Rotating fan and belts. Contact can injure. Keep clear.



**CAUTION** Never smoke while refueling the tractor, servicing the fuel system, checking the batteries or using cold weather starting aids.



**CAUTION** Never use gasoline, naphtha or any other volatile material for any cleaning purposes. These materials may be toxic and/or flammable.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)