

# 4690 Tractor Operators Manual

9-6805

Reprinted

**CASE III**



***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



**IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.**

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# TABLE OF CONTENTS

TO THE OWNER .....	III	OPERATING INSTRUCTIONS .....	34-127
SAFETY .....	IV-XVI	Run-In Procedure .....	34,35
Safety Rules .....	IV	Before Starting the Engine .....	36
Before Starting .....	IV-V	Towing .....	37
Operation .....	VI-XIII	Operating Instruments .....	38-43
Service .....	XIV-XVI	Operating Controls .....	44-81
HAND SIGNALS .....	XVII-XVIII	Steering Console .....	44-51
DECALS .....	XIX-XXIII	Steering Column Tilt .....	52
SERIAL NUMBERS.....	1	Moving the Telescopic	
DIESEL ENGINE SPECIFICATIONS ...	2,3	Steering Column .....	52
GENERAL SPECIFICATIONS .....	4-7	Operator's Console .....	53-63
APPROXIMATE TRACTOR SPEEDS ..	8,9	Hand Brake Control .....	64
APPROXIMATE OVER ALL		Heater Stop Valve .....	65
MEASUREMENTS .....	10	Fuel Tank Water Traps .....	65
APPROXIMATE TRANSPORT WEIGHT .	10	Cab Headliner Controls .....	66,67
OPERATOR'S CAB .....	10	Cab Air Flow Control .....	68
TIRE AND WHEEL EQUIPMENT .....	11	Cab Defroster Control .....	68
WHEEL TREAD POSITIONS .....	12-16	Cab Air Flow Arrangements ....	69-71
TIRE PRESSURE .....	16	Air Conditioner Operation .....	72
DUAL WHEELS .....	17	Cab Door Lock .....	72
FUEL SPECIFICATIONS .....	18,19	Ash Tray .....	72
LUBRICATION .....	20-33	Rear View Mirrors .....	73
Engine Hourmeter .....	20	Cab Window Lever .....	73
Diesel Engine .....	21	Operator's Seat .....	74-76
Lubrication Chart .....	22,23	Seat Belts .....	77
Engine Oil Change .....	24,25	Amber Warning Lamps, Direction	
Engine Oil Filters .....	25	Turn Signals & SMV .....	78,79
Rear Steering Valve Filter .....	26,27	Implement Warning Lamps &	
Rear Steering Hydraulic Oil Filter ....	28	SMV Symbol .....	80
Transmission Oil Level		Auxiliary Outlet Socket .....	81
Check & Change .....	29	Starting Procedure .....	82-84
Hydraulic Oil Filters .....	29,30	Stopping The Engine .....	84,85
Planetary Oil Level Check & Change .	31	Cold Temperature Operation .....	85
Differential Oil Level Check & Change .	32	Preparing Tractor For Operating in	
Tractor Brakes .....	33	Cold Temperatures .....	86
ALTERNATOR CHARGING SYSTEM ..	34	Cold Temperature Starting .....	87-90
		Coolant Heater .....	87
		Operating Cold Start Assist .....	88,89
		Starting Fluid	
		Container Replacement .....	90
		Power Shift Transmission .....	91,92
		Power Takeoff .....	93-95
		Operating PTO .....	93
		Guards .....	94
		PTO Operating Safety .....	95
		Drawbar .....	96
		Three Point Hitch System .....	97
		Hitch System Adjustments .....	98-100

# TABLE OF CONTENTS

## OPERATING INSTRUCTIONS

Hitch Operation .....	101-105
Hitch Control Lever .....	101
Electronic Hitch System .....	102,103
Controlling Maximum Depth .....	104
Stationary Depth Operation .....	104
Hydraulic Float Control .....	105
Anti-Sway Chain .....	105
Hitch Coupler - Category III .....	106
Remote Hydraulic Control .....	107-113
Remote Control Levers .....	107,108
Variable Flow Control .....	109,110
Operating the Remote System .....	111
Hydraulic Hose Couplers .....	112
Hydraulic Hose Coupling .....	113
Remote Cylinder .....	114
Hydraulic Cylinder Jack Pads .....	115
Wheel Rim Adjustment & Mounting ..	116
Wheel Spacing and Clamp Adjustment .....	117
Power Adjustable Wheel Mounting .....	118,119
Dual Wheel Mounting .....	120
Tire Mounting .....	121
Loads Matched to Tractor .....	121
Tractor Ballast .....	122-126
Measuring Slip .....	122
Tractor and Equipment Weight ...	123
Front End Weights .....	124
Wheel Weights .....	125
Tire Liquid Weight .....	126
Hood and Side Panels .....	127
PREVENTIVE MAINTENANCE ...	128-181
Cooling System .....	129-137
Pressure Cooling System .....	129
Coolant Solutions .....	130
Radiator Cleaning .....	130
Cooling System Service .....	131
Thermostat Check .....	132
Thermostat Replacement ....	132-134
Fan Belt Adjustment .....	135
Fan Belt Replacement .....	136
Water Filter and Conditioner ...	137
Fuel System .....	138-143
Service Intervals .....	138
Fuel Filter Replacement .....	139,140
Primary Fuel Filter .....	141,142
Air Removal .....	142,143
Air Induction System .....	144-153
Air Filter Service Interval .....	145
Final Air Filter Service .....	146-149
Aspirated Strata Tube Service .	150-152
Tubes and Hoses .....	153
Neutral Start Switch Adjustment ..	154,155
Parking Brake Adjustment .....	156
Electrical System .....	157-161
Head Lamps .....	157
Flood Lamps .....	157
Flashing Amber Warning Lamps ..	158
Rear Flood and Tail Lamp .....	158
Instrument Cluster Lamps .....	159
Fuse Panel .....	160
Head Lamp Adjustment .....	161
Storage Battery .....	162-164
When Batteries Are Not in Use ...	162
Battery Cables and Terminals ....	162
Battery Water .....	163
Vent Caps .....	163
Removal & Installation of Batteries .	163
Auxiliary Battery Connections ....	164
Roll Over Protective Structure (ROPS) .....	165,166
Tractor Roll Over .....	166
Safety Rules .....	166
Maintenance and Inspection .....	166
Operator's Cab .....	167-181
Preventive Maintenance .....	167,168
Air Filter Removal .....	169
Air Filter Service .....	170,171
Seat Belt Inspection and Maintenance .....	171
Operator's Seat .....	172,173
Compressor Belt Adjustment .....	174
Compressor Belt Replacement ...	175
Compressor Belt Alignment .....	176
Refrigerant Check .....	177,178
Dome Lamp .....	179,180
Console Lamp .....	181
CASE TECHNICAL MANUALS .....	183

# TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can assist you with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

*Your Authorized Case Dealer*



**Figure 1**

**NOTE:** *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.*

# SAFETY

## Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

**READ THIS MANUAL COMPLETELY** and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.

## Before Starting



**CAUTION** *Provide a first aid kit for use in case of accident.*



**CAUTION** *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



**WARNING** Before starting engine study Operator's Manual safety messages.

 
Read all safety signs on machine.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.

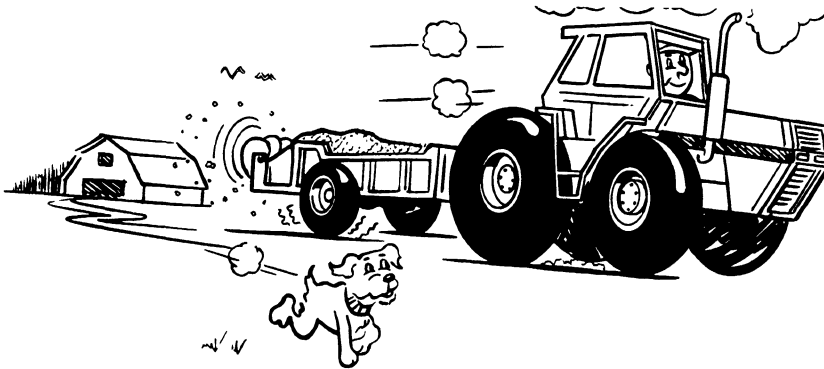

**WARNING** Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operator's seat.

On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.

Before leaving tractor unattended, lower hydraulically lifted equipment to ground.



**WARNING** Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.



**WARNING:** If the steering mode selector switch is turned to another mode position while the tractor is not in operation, the rear wheels can move when the tractor is started again. To prevent possible injury from the rear tires moving, make sure no person is between the rear tires and tractor frame before you start the tractor engine.




## Operation



 **CAUTION** Before leaving the tractor, stop the engine, place all controls in neutral and set the parking brake.




**WARNING** Operate controls only when seated in the Operator's seat.

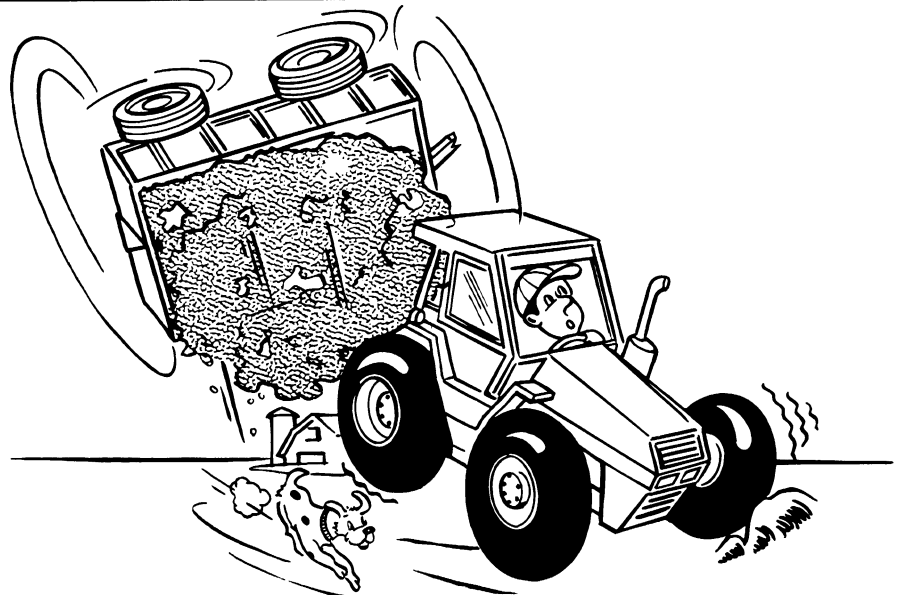


 **WARNING** Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.




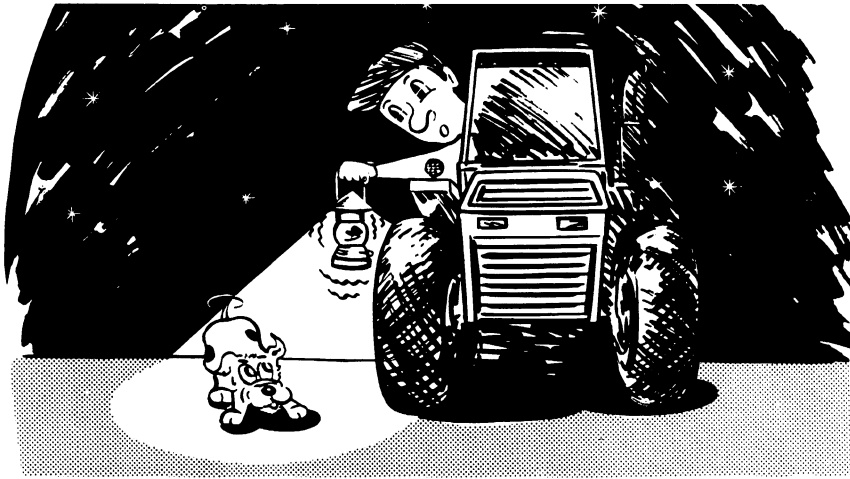

  **WARNING** On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

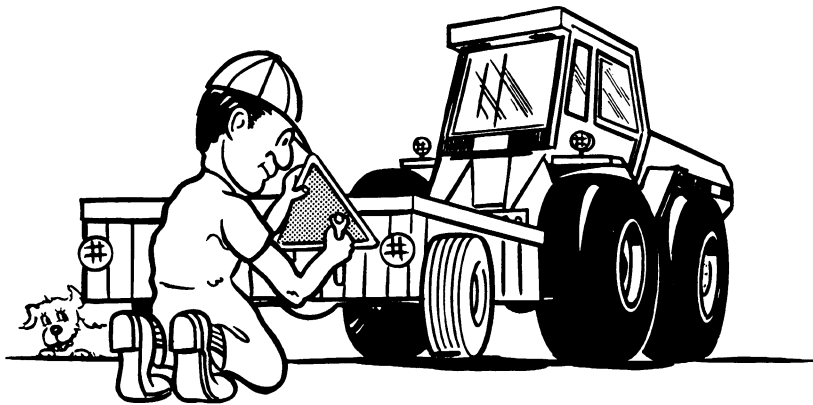

  **DANGER** Excess tractor speed is the big killer. Only experienced drivers should be permitted on highways.

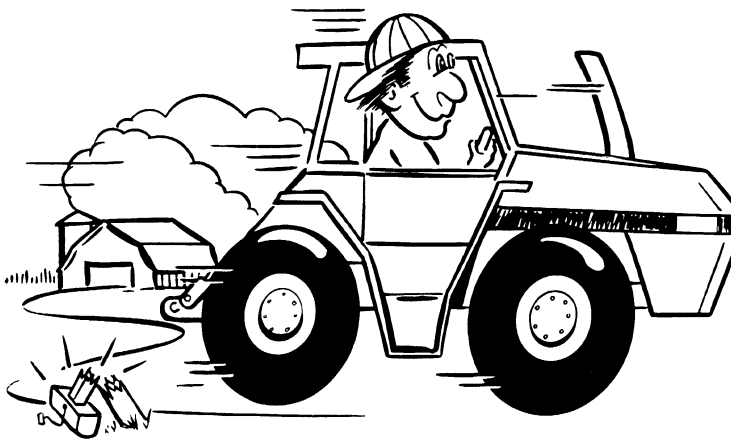



**WARNING** *Extra weight increases your braking distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*

 


**WARNING** *The braking distance will increase in conditions of mud, ice or whenever the traction at one wheel is less than the traction at the opposite wheel. The operator must allow adequate distance to stop in these conditions.*






**CAUTION** *Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.*

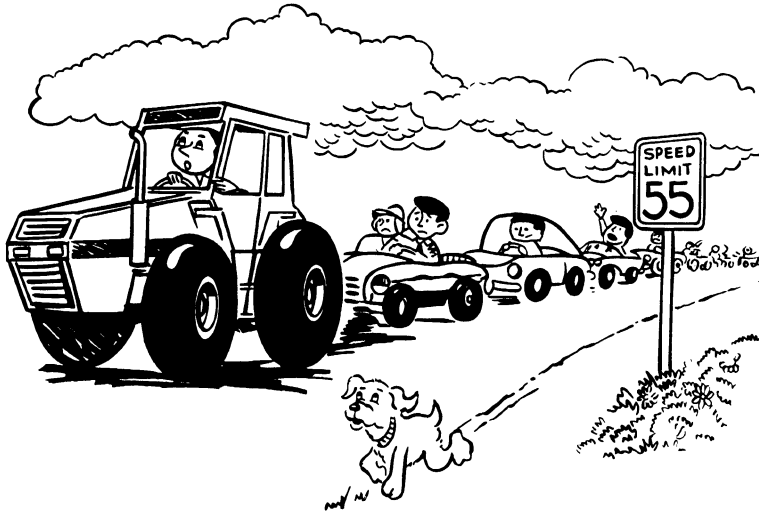

 **WARNING** *Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.*

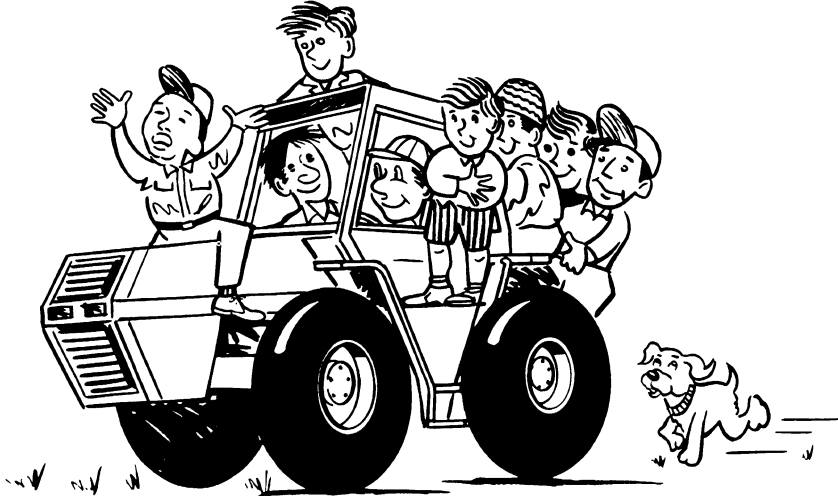

**CAUTION:** *During road transport use front steering only.*



 
**WARNING:** *When the reset button is used, with the engine running, the hitch will raise or lower according to where the hitch control lever is set. Clear the area of other persons before actuating the electronic hitch system.*




**WARNING** Be certain both latches are fully engaged across the implement lift pins before transporting or pulling the implement.



**CAUTION** The implement should be lowered to the ground before uncoupling of the remote hydraulic hoses.

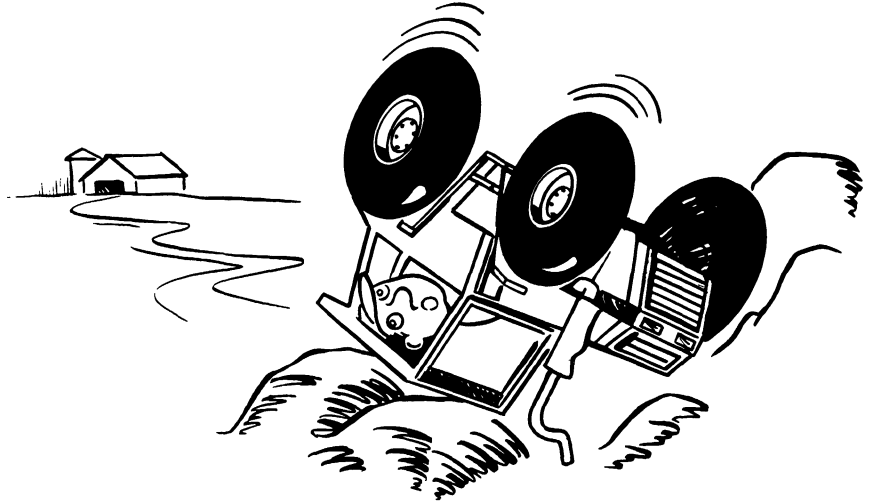

 **WARNING** Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".

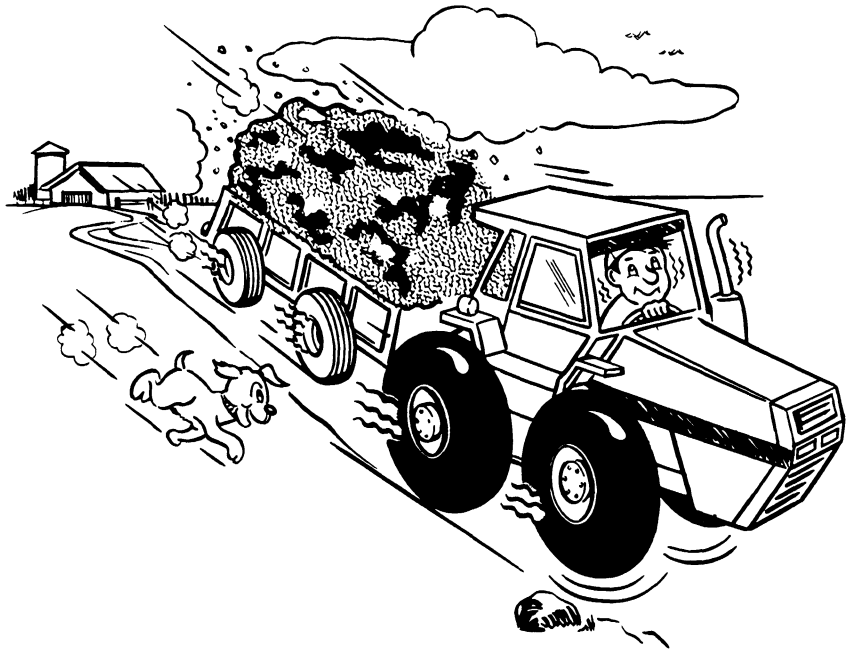

X



**WARNING** *Rotating machine parts, stay clear, keep shields installed to help protect from clothing entanglement and injury. Wear close-fitted clothing.*



**WARNING** *Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.*



**WARNING** *Whenever a PTO driven machine is in operation, the safety guard must always be in place to prevent injury to the operator. The safety guard must never be removed at any time, except for replacement. When the PTO is not in use, the tubular guard must be installed over the end of the PTO shaft.*



**WARNING** *When doing stationary PTO work and dismantling from the tractor with the PTO running, keep clear of all moving parts as they are a potential safety hazard.*



**WARNING** *On a mobile power take-off application, always disengage the PTO before dismantling from the tractor.*



**WARNING** *If this tractor is equipped with a 1000 RPM PTO, be sure implements are matched for this drive speed. Center and lock drawbar when using PTO.*



**WARNING** *Replace fan if it has been bent, modified, or damaged in any way. Stop and make corrections if fan strikes any part of the tractor.*

**WARNING** Engine can start with transmission in gear when neutral safety switch is by-passed:

1. Do not connect across terminals on starter.

2. Attach booster batteries according to safe method in Operator's Manual. Then use recommended starting procedure from Operator's seat.

Machine run-away can cause injury or death to operator and bystanders.



**WARNING:** Securely fasten your seat belt as this tractor is equipped with a ROPS cab. The seat belts can help insure your safety if they are used and maintained.



**CAUTION** Make sure that the weight of a trailed vehicle that is not equipped with brakes, NEVER EXCEEDS the weight of the tractor that is towing the vehicle. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.



**CAUTION** Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)