

2290 Tractor Without Cab

Operators Manual

9-6851

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS	31-102
SAFETY	IV-XVII	Run-In Procedure	31
Safety Rules	IV	Before Starting the Engine	32
Before Starting	IV-V	How to Transport the Tractor	33
Operation	VI-XIV	Shipping	33
Service	XV-XVIII	Operating Instruments	34-37
HAND SIGNALS	XVIII-XIX	Operating Controls	38-65
DECALS	XX-XXIV	Steering Console	38, 39
SERIAL NUMBERS	1	Operator's Console	42-47
DIESEL ENGINE SPECIFICATIONS	2,3	Steering Column Tilt	48
GENERAL SPECIFICATIONS	4-6	Moving Telescopic Steering Column	48
APPROXIMATE TRACTOR SPEEDS		Fuel Tank Water Trap	49
12 Speed Transmission	7	Operator's Seat	50
8 Speed Transmission	8	Amber Warning Lamps, Direction	
APPROXIMATE OVER ALL		Turn Signals & SMV	51,52
MEASUREMENTS	9	Implement Warning Lamps,	
APPROXIMATE TRANSPORT WEIGHT ...	9	SMV Symbol	53
TIRE AND WHEEL EQUIPMENT	10	Auxiliary Outlet Socket	54
FRONT WHEEL TREAD POSITIONS	11	Starting Procedure	55,56
REAR WHEEL TREAD POSITIONS	12	Stopping the Engine	57
DUAL REAR WHEEL		Cold Temperature Operation	58
TREAD POSITIONS	13,14	OPERATING INSTRUCTIONS	
DUAL REAR TIRE PRESSURES	15	Preparing Tractor For Operating in Cold	
FUEL SPECIFICATIONS	16,17	Temperatures	59
LUBRICATION	18-29	Cold Temperature Starting	60-63
Engine Hourmeter	18	Case Starting Fluid	60
Diesel Engine	19	Coolant Heater	60
Lubrication Chart	20, 21	Operating Ether Start	61,62
Engine Oil Change	22, 23	Starting Fluid Container Replacement	63
Engine Oil Filter	23	Power Shift Transmission	64,65
Transmission Oil Level Check & Change	24	Mechanical Shift Transmission	66
Hydraulic Oil Filters	25-27	Differential Lock	67
Steering & Brake System Air Removal	28	Power Takeoff	68-71
Front Wheel Bearing	29	Operating PTO	68
ALTERNATOR CHARGING SYSTEMS ...	30	540 or 1000 RPM PTO Operation	69
		Guards	70
		Operating Safety	71
		Drawbar	72
		Three Point Hitch System	73
		Hitch System Adjustments	74-76
		Hitch Operation	77-80
		Hitch Control Lever	77
		Sensing Control	78,79
		Stationary Depth	79
		Hydraulic Float Control	79
		Anti-Sway Chain	80
		Hitch Coupler - Category III-II	81-83

TABLE OF CONTENTS

Remote Hydraulic Control	84-90	Storage Battery	136-139
Remote Control Levers	84,85	Access to Batteries	137
Variable Flow Control	86,87	Battery Cables and Terminals	137
Operating the Remote System	88	Battery Water	138
Hydraulic Hose Couplers	89	Vent Tubes	138
Hydraulic Hose Coupling	90	Removal and Installation of Batteries ..	138
Remote Cylinder	91	Auxiliary Battery Connections	139
Hydraulic Cylinder Jack Pads	92		
Front Axle Adjustment	93	CASE TECHNICAL MANUALS	141
Rear Wheel Hub Adjustment	94-96		
Dual Wheel Mounting	97		
Rear Tire Mounting	98		
Loads Matched to Tractor	98		
Tractor Ballast	99-102		
Measuring Slip	99		
Front End Weights	100		
Rear Wheel Weights	101		
Tire Liquid Weight	102		
PREVENTIVE MAINTENANCE	103-139		
Hood and Side Panels	104		
Cooling System	105-113		
Pressure Cooling System	105		
Ethylene Glycol Solutions	106		
Engine Cooling System Treatment ..	106		
Radiator Cleaning	107		
Cooling System Service	108		
Thermostat Check	109		
Thermostat Replacement	109-111		
Fan Belt Adjustment	112		
Fan Belt Replacement	113		
Fuel System	114-119		
Service Intervals	114		
Fuel Filter Replacement	115,116		
Primary Fuel Filter	117,118		
Air Removal	118,119		
Air Induction System	120-129		
Air Filter Service Interval	121		
Final Air Filter Service	122-125		
Aspirated Strata Tube Service ..	126-128		
Tubes and Hoses	128		
Neutral Start Switch Adjustment ..	130,131		
Electrical System	132-135		
Headlights	132		
Floodlights	132		
Flashing Amber Warning Lights	133		
Taillights	133		
Instrument Cluster Lights	134		
Lights Fuse Holder	134		
Headlight Adjustment	135		



Our support email:

ebooklibonline@outlook.com