

90 Loader

Operator's Manual

9-6992

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TABLE OF CONTENTS

| | |
|--|--------|
| To The Owner | II |
| Safety | III-VI |
| Safety Rules | III |
| Operation | III-V |
| Transport | V |
| Storage | VI |
| Safety Decals | VI |
| Serial Number And Decals | 1 |
| General Specifications | 2-4 |
| Lubrication | 5 |
| Operating Instructions | 6-23 |
| Hydraulic System | 6 |
| Tines | 7 |
| Front Tire Pressure | 8 |
| Minimum Tread Settings | 8-10 |
| Front Axle Oscillation | 11 |
| Muffler Installation | 11 |
| Battery Box Position | 11 |
| Rear Wheel Weights | 12 |
| Front Weights | 12 |
| Lift Cylinder Pin Position | 13 |
| Operating | 13,14 |
| Filling The Bucket | 14 |
| Manure Filling | 15 |
| Moving a Filled Bucket | 16 |
| Front Bumper | 16 |
| Disconnecting The Loader | 17-20 |
| Putting The Loader On Tractor | 21,22 |
| Operating Procedures | 23 |
| Extra Equipment | 24-41 |
| Material Buckets | 24 |
| Light Material And Snow Bucket | 25 |
| Guard Plate | 26 |
| Manure Fork | 27 |
| Dirt Plate | 27 |
| Snow Bucket | 28 |
| Bucket Level Indicator | 29 |
| Lift Boom | 30 |
| Dirt Scrapers | 31 |
| Bucket Adapter | 32 |
| Fork Lift Attachment | 33 |
| Third Cylinder Hydraulic Tubes | 34 |
| Grapple Over Bucket | 35 |
| Hay Stacker | 36 |
| Hay Grapple Fork | 37,38 |
| Hay Bale Handler | 38-40 |
| Three Point Hitch Round Bale Carrier | 40,41 |

To The Owner

Use this manual as your guide. If you follow the instructions given in this manual, your Case Loader will work good for many years.

Your Authorized Case Dealer can assist you with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your loader.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



When you are in the tractor seat looking forward, the right hand and left hand of the loader are the same as your right and left hand.

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service and operate this loader. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the steering, stability and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, federal, state and local laws. Make sure your loader has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety by making loaders with better protection and by giving these rules for safe operation.

IMPORTANT: *Install new decals if the old decals are destroyed, painted over or can not be read. When parts are replaced that have decals, make sure you install a new decal with each new part.*

Operation

WARNING Before starting tractor engine, study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.



Learn and practice safe use of controls before operating. It is your responsibility to understand and follow manufacture's instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's Manuals may be obtained from your equipment dealer.



CAUTION Operate the loader from the tractor seat only.



CAUTION If tractor is ROPS equipped, do not exceed the manufacturers rating for maximum gross vehicle weight. Refer to Tractor Operator's Manual, ROPS Section.



CAUTION Do not lift or carry personnel on an attachment, a slip or fall could cause bodily injury.



CAUTION If the tractor is equipped with a Rollover-Protective Structure (ROPS), fasten seat belt prior to starting engine.



Our support email:

ebooklibonline@outlook.com