

MX80C, MX90C and MX100C Tractors

Don 9-80591

NOTE: *This manual replaces Don 9-80590*

Reprinted

CASE III






THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

Safety Decals on this machine which use the words **Danger, Warning or Caution**, are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

Safety Decals on this machine which are ISO-two panel Pictorial type decals, are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clear the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

GENERAL TABLE OF CONTENTS

TO THE OWNER	1
IDENTIFICATION NUMBERS/MACHINE COMPONENTS	4
PRODUCT IDENTIFICATION AND SERIAL NUMBERS	4
MACHINE COMPONENTS	6
SAFETY/DECALS	8
SAFETY	8
SAFETY RULES	9
SAFETY DECALS	12
ROLL OVER PROTECTIVE STRUCTURE (ROPS)	15
INSTRUMENTS/CONTROLS	16
TRACTOR ACCESS	16
OPERATORS SEAT	17
STEERING COLUMN ADJUSTMENT	20
STANDARD (ANALOG) INSTRUMENT CLUSTER	21
DELUXE (DIGITAL) INSTRUMENT CLUSTER	22
OPERATING CONTROLS	29
ADDITIONAL CAB FEATURES	40
REAR VIEW MIRRORS	42
OPERATING INSTRUCTIONS	43
BEFORE STARTING THE ENGINE	43
RUN IN PROCEDURE	44
SERVICE INDICATOR LAMPS AND GAUGES	44
NORMAL STARTING PROCEDURE	46
COLD TEMPERATURE OPERATION	48
PARKING THE TRACTOR	53
OPERATING THE TRANSMISSION	54
CAB ENVIRONMENT	58
DRAWBAR	62
AUXILIARY ELECTRICAL POWER SOCKETS	66
WARNING LAMPS AND SLOW MOVING VEHICLE (SMV) SYMBOL	69
TOWING THE TRACTOR	72
HOW TO TRANSPORT THE TRACTOR	73

TRIM THIS EDGE

FIELD OPERATION	74
TRANSMISSION CREEPER OPERATION	74
WHEEL SLIP INDICATOR	75
PROGRAMMING THE DIGITAL INSTRUMENT CLUSTER	77
DISTANCE FUNCTION OPERATION	88
AREA FUNCTION OPERATION	90
REAR POWER TAKEOFF	92
REAR THREE POINT HITCH PREPARATION	99
REAR THREE POINT HITCH OPERATION	105
REAR THREE POINT HITCH DIAGNOSTIC DISPLAY	115
DIFFERENTIAL LOCK CONTROL	117
MECHANICAL FRONT DRIVE (MFD) OPERATION	122
REMOTE HYDRAULIC VALVES	128
REMOTE HYDRAULICS OPERATION	133
IMPLEMENT CABLE ACCESS	138
TIRES/WHEELS/SPACING/BALLAST	139
TIRES/WHEELS/SPACING/BALLAST	139
TIRE AND WHEEL SERVICE	146
INSTRUMENT CLUSTER PROGRAMMING FOR DIFFERENT TIRE SIZES	147
FRONT AXLE AND FRONT TREAD ADJUSTMENTS	149
FRONT TO REAR TIRE SIZE COMBINATIONS	159
FRONT WHEEL FENDERS	160
REAR WHEEL TREAD ADJUSTMENT	161
TRACTOR BALLAST	169
LUBRICATION/MAINTENANCE	177
ENVIRONMENT	177
PLASTIC AND RESIN PARTS	177
SERVICE PARTS	177
TOOL BOX	178
HOURMETER	179
TILT HOOD	180
LUBRICANTS AND CAPACITIES	181
LUBRICATION/MAINTENANCE CHART	183
10 HOURS OR DAILY	185
50 HOUR MAINTENANCE	188
100 HOUR MAINTENANCE	192
250 HOUR MAINTENANCE	196
500 HOUR MAINTENANCE	202
1000 HOUR MAINTENANCE	207
2000 HOUR MAINTENANCE	219
GENERAL MAINTENANCE	225

ELECTRICAL SYSTEM	228
BATTERIES	228
BULB AND LAMP REPLACEMENT	233
FUSES AND RELAYS	240
MACHINE STORAGE	243
SPECIFICATIONS	245
DIESEL ENGINES	245
ELECTRICAL SYSTEM	248
GENERAL MACHINE	249
TRAVEL SPEEDS	252
APPROXIMATE TRACTOR DIMENSIONS	260
APPROXIMATE TRACTOR WEIGHTS	263
DETAIL INDEX	265

TRIM THIS EDGE

TO THE OWNER

Use this manual as your guide. Read this manual before you start the engine or operate this machine. Refer to the Detail Index at the end of this manual for locating specific items about your machine. If you follow the instructions given in this manual, your Tractor will work well for many years.

NOTE: *Some information, illustrations and photographs in this manual may differ to the standard equipment and accessories on your tractor. See your dealer for further information.*

Your Dealer can give you assistance with Case made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Dealer if you need any assistance or information.

MX90C Tractor with Mechanical Front Drive (MFD)



TRIM THIS EDGE

DP97M222

NOTE: *The right and left of the tractor in this manual are the same as your right and left when sitting in the tractor seat looking forward.*

MX80C and MX100C Tractors



DR98M074

TRIM THIS EDGE

How To Use This Manual

Read this manual before you start the engine or operate your tractor. If you need any more information, see your Case dealer.

This manual contains important information about the safe operation, adjustment and maintenance of your Case Tractor. To help you find information easily this manual has been separated into chapters, as shown in the General Table of Contents. The operation of the tractor has been separated into four main chapters:

1. INSTRUMENTS/CONTROLS - Showing the location and description of all controls.
2. OPERATING INSTRUCTIONS - General information for every day tractor operation, e.g. starting/stopping the tractor, operating the transmission etc.
3. FIELD OPERATION - Information for various operations specifically for use in the field, e.g. 3 point hitch, rear PTO etc.
4. TIRES/WHEELS/SPACING/BALLAST - Adjustments for various tractor operating applications, e.g. tire pressures, tread widths etc.

The maintenance of the tractor has been separated into two main chapters:

1. LUBRICATION/MAINTENANCE - Service interval hours, and adjustments.
2. ELECTRICAL SYSTEM - General electrical service information.

TO THE OWNER

IMPORTANT: Refer to the Detail Index at the end of this manual for locating specific items about your machine.

The right and left of the tractor in this manual are the same as your right and left when sitting in the tractor seat looking forward.

DO NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

This tractor, with standard equipment and authorized attachments, is intended to be used for farming, and related operations.

DO NOT use this machine for any application or purpose other than those described in this manual. Consult an authorized dealer or the Case Corporation on changes, additions or modifications that can be required for this machine to comply with various country regulations and safety requirements. Unauthorized modifications may cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.


Manual Storage

Keep the Operators Manual stored in the manual storage compartment equipped on this machine.

Make sure this manual is complete and in good condition.

Contact your dealer to obtain additional manuals or for any further information or assistance about your machine.

Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

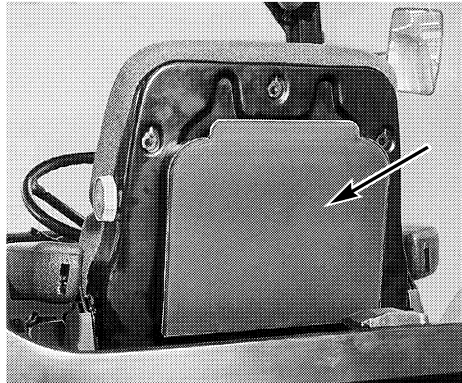

DP96E064

TRIM THIS EDGE

IMPORTANT: This operators manual is part of your tractor. If the tractor is sold, loaned or rented, the operators manual **MUST** go with it.

Buy Now



Our support email:

ebooklibonline@outlook.com