

730 and 830 Wheel Tractors

Operators Manual

9-852

Reprinted





This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

To the Purchaser of a Case Tractor,

The care you give your new Case tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.

Your Authorized Case Dealer

To insure efficient and prompt service, please furnish us with the Model and Serial Number of your tractor in all correspondence or contacts.

TABLE OF CONTENTS


	Page
Serial Number.....	8
General Specifications.....	9 thru 24
Lubrication.....	27 thru 46
Pressure Fittings.....	28 thru 31
Engine Lubrication.....	34 thru 38
Transmission Lubrication.....	39 thru 41
Hydraulic Control System.....	42
Hydraulic Power Steering Attachment.....	44 and 45
Independent Power Take-off.....	46
Operating Instructions.....	47 thru 111
Run-In Procedure.....	48
Operating Controls and Instrument Guide.....	50 thru 54
Engine Starting Procedure.....	56, 57
Stopping Engine.....	57
Cold Weather Operation.....	58, 59
Case Dual-range Transmission.....	60
Rear Tire Sizes.....	63
Rear Wheel and Front End Weights.....	64
Drawbar.....	65 thru 67
Belt Pulley.....	68 thru 70
Independent Power Take-Off.....	71 thru 74
Constant Hydraulic Control Operation.....	75 thru 86
Rear Wheel Tread Spacings.....	87 thru 99
Front Wheel Tread Spacings.....	101 thru 106
Fuels and Fuel Storage.....	107 and 108
Implement Warning Lamp.....	109
Important Checks During Operation.....	111 and 112
Service Suggestions.....	113 thru 122
Preventive Maintenance.....	123 thru 171
Cooling System.....	125 thru 131
Air Cleaner.....	133 thru 135
Crankcase Breather.....	136
Transmission Breather.....	136
Fuel System.....	137 thru 139
Starting and Lighting Equipment.....	140 thru 158
Governor and Engine Speed.....	159
Steering Gear.....	159
Transmission.....	159
Valve Tappet Clearance.....	160 and 161
Traction Clutch Adjustment.....	162 thru 164
Neutral Starting Safety Switch Adjustment.....	164
Differential Brake.....	165
Adjusting Power Take-off Clutch.....	166
Repacking and Adjusting Front Wheel Bearing.....	167 thru 169
Tractor Storage.....	170 and 171
LP Gas Equipment.....	173 thru 187

MODEL 741



**GENERAL
PURPOSE
TRACTOR**

3 *Tractors In* **1**

 
Adjustable
Front Axle
Attachment

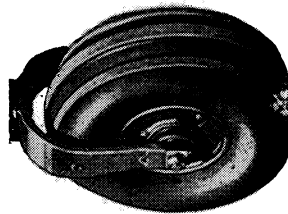

Single
Front
Wheel
Attachment

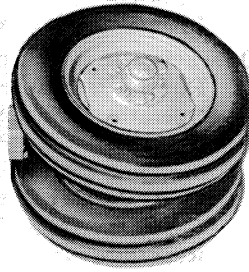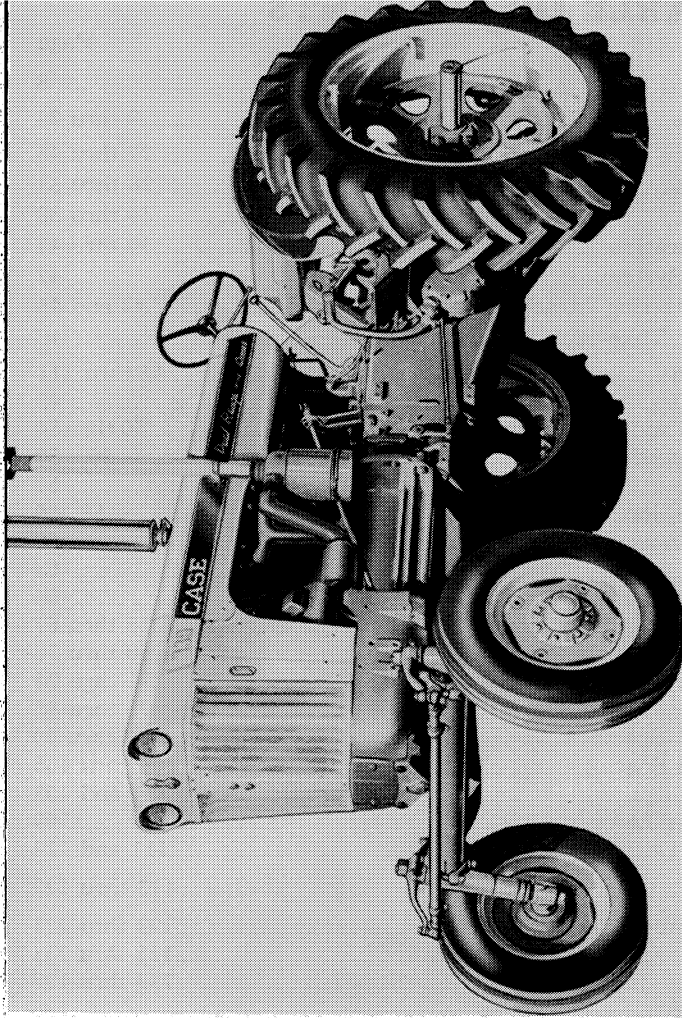  

Dual
Front
Wheel
Attachment

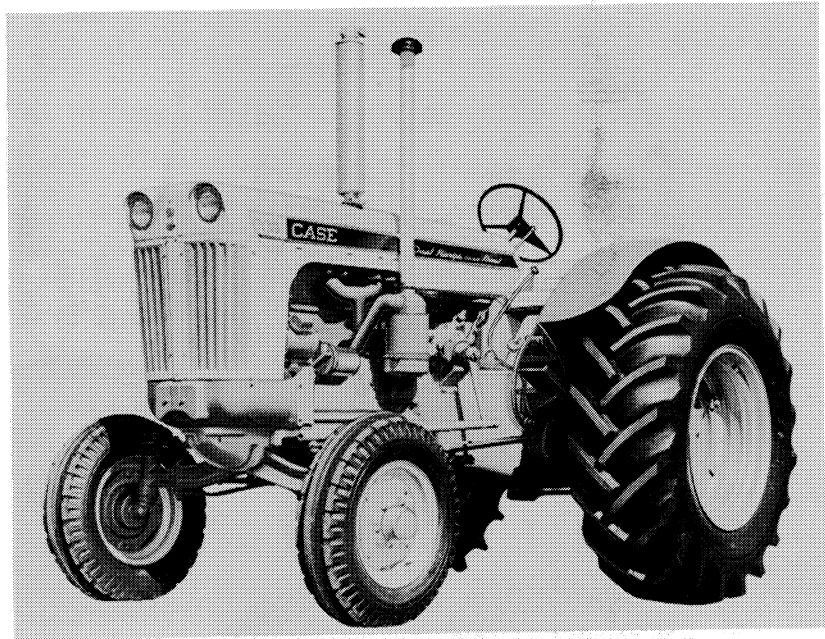 


Standard 4 Wheel Tractor (Left Side View)



Standard 4 Wheel Tractor (Right Side View)




 General Purpose Tractor (Dual Front Wheels)

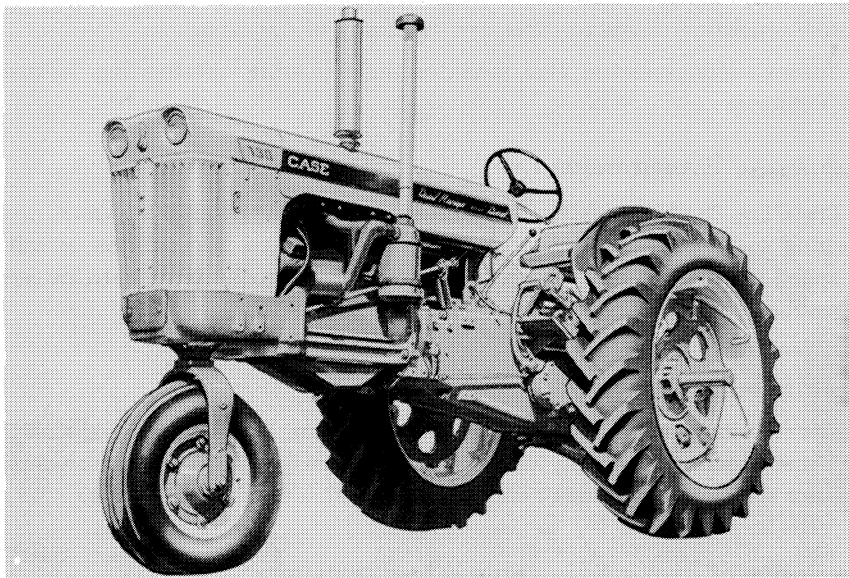

General Purpose Tractor (Single Front Wheel)

 INTRODUCTION

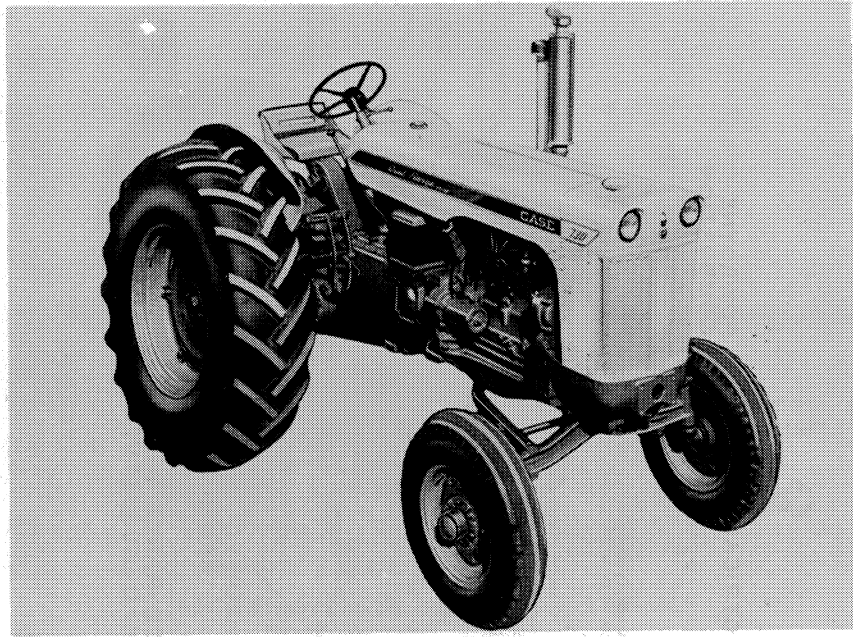

The Case 730 and 830 Series Tractor is powered by a rugged four cylinder spark ignition engine which features heavy duty precision type construction, usually found only in diesel engines. This engine is noted for its quiet operating characteristics and economy of operation.

Advanced engineering also includes the following outstanding features on Case Tractors.

Dual-Range Transmission

 
The Case Dual-Range transmission, 8 speeds forward and 2 reverse, provides a working speed for every job on the farm in any type or condition of soil. The high speed (8th) road gear brings your fields closer to the farm yard in terms of non-productive time spent on the road.

“Comforized” Platform

The “Deluxe Seat,” easily accessible operating controls, well lighted “Tell-Easy” instrument panel; all features designed with the operator’s comfort in mind are standard equipment on Case 730 and 830 Series Tractors.

Wide Range of Easily Adjustable Wheel Spacings

Both front and rear wheel treads can be adjusted on Case Tractors for the various row spacings in a matter of minutes. One man can easily move the tire and rim to any of the tread positions.

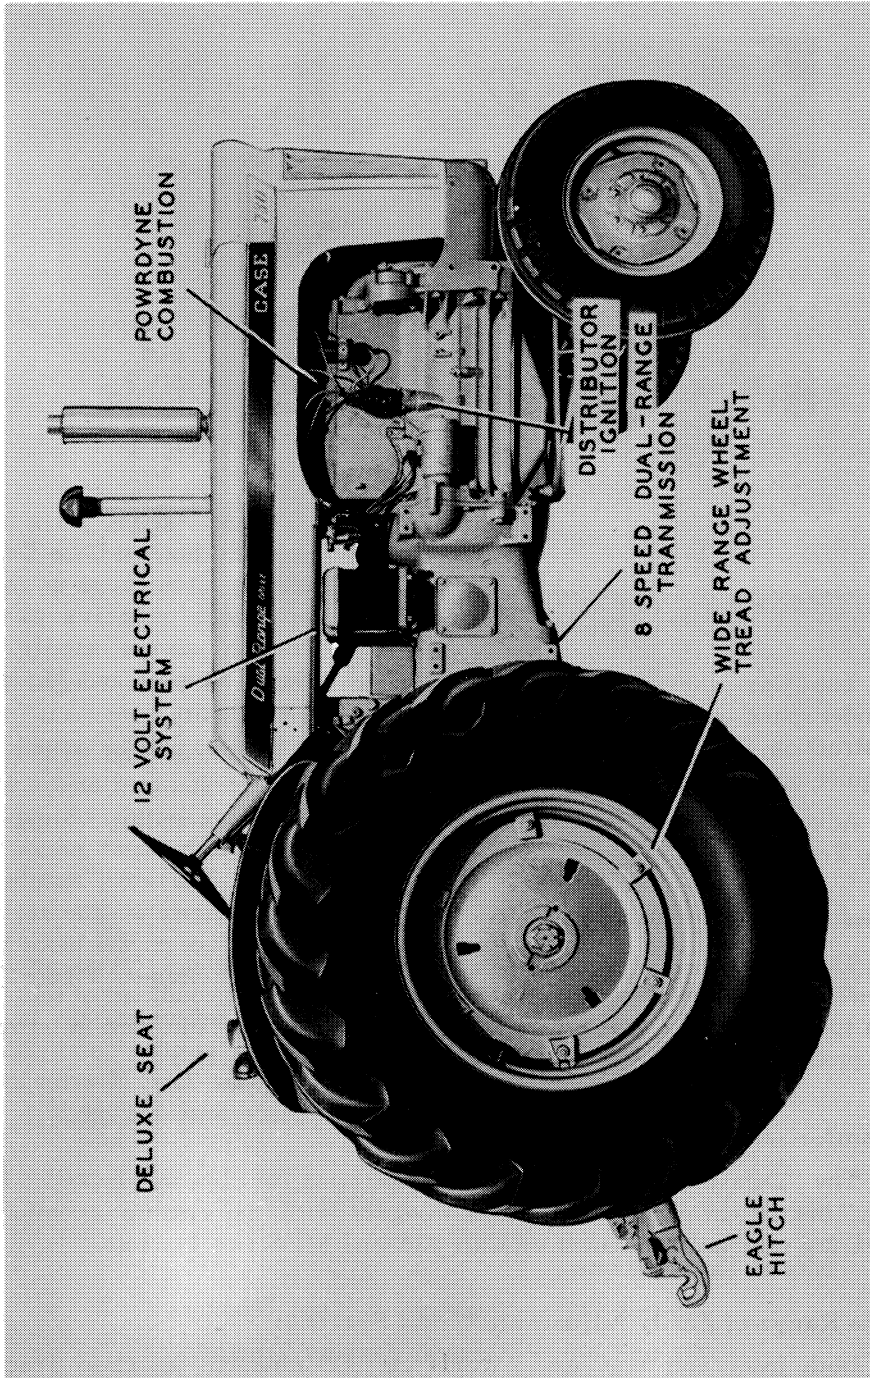



Our support email:

ebooklibonline@outlook.com