

**440 & 441
Wheel Tractor**

Operators Manual

9-9024

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.




WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

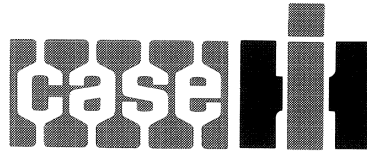

440/441 WHEEL TRACTOR
9-9024

Operators Manual

JI Case
A Tenneco Company



Operator's Instruction Manual

CASE

REGISTERED IN U.S. PATENT OFFICE



MODEL 440-441 WHEEL TRACTORS

Gasoline

TRIPL-RANGE — DUAL RANGE SHUTTLE

J. I. Case Co.

RACINE, WISCONSIN — U.S.A.



NOTICE!

At the time your Case Dealer delivers your new tractor, he will acquaint you with its operation and maintenance as outlined in the "Dealer's Delivery Service Report". When your Dealer has completed these instructions, he will ask you to sign the report and will then hand you the yellow copy for your records.

NOTE: The "Dealer's Delivery Service Report" also contains a record of the Pre-Delivery Checkup which your Dealer made on your tractor.

AFTER DELIVERY CHECKUP

The Authorized Case Dealer from whom you purchased your new tractor will perform the "After Delivery Checkup" outlined on the following page, if you will arrange to bring your tractor to his Service Shop within - - -

60 days after date of delivery or 200 hours of operation (whichever occurs first).

NOTE: The only charge your dealer will make for this inspection will be for oil, filters or other accessories.

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

(Owner's Name)	(Date Checkup Performed)
(Owner's Address)	
(Dealership)	(Town)
Tractor has been operated hours	
(Tractor Model and Serial Number)	

- | | |
|---|---|
| <input type="checkbox"/> Check foot clutch.
<input type="checkbox"/> Check hand clutch (if used).
<input type="checkbox"/> Check shuttle action (if used).
<input type="checkbox"/> Check brakes.
<input type="checkbox"/> Operate Eagle Hitch hydraulic system and check oil level in torque tube.
<input type="checkbox"/> Check tire pressure.
<input type="checkbox"/> Tighten cylinder head and adjust tappets.
<input type="checkbox"/> Check distributor timing.
<input type="checkbox"/> Check spark plugs and distributor point gap.
<input type="checkbox"/> Check full governed no load engine speed. | <input type="checkbox"/> Tighten all bolts (including rims).
<input type="checkbox"/> Cooling system.
<input type="checkbox"/> Crankcase oil (Change oil and filter if necessary).
<input type="checkbox"/> Oil level in transmission and torque tube.
<input type="checkbox"/> Lubricate all pressure fittings and oil cups.
<input type="checkbox"/> Check air cleaner.
<input type="checkbox"/> Check steering, bearing adjustment and front wheel toe-in.
<input type="checkbox"/> Battery, starter, generator and lights.
<input type="checkbox"/> Check operation of all instruments. |
|---|---|

DEALER: Question purchaser carefully concerning his experience with tractor and answer any questions concerning maintenance or operation that are not clear to him.

Checkup
Performed by

Signed
Dealer

Signed
Customer

ORIGINAL—Dealer
DUPLICATE—Leave in Operators Manual for Purchaser

Dealer's Copy — Tear Here

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

(Owner's Name)	(Date Checkup Performed)
(Owner's Address)	
(Dealership)	(Town)
Tractor has been operated _____ hours	
(Tractor Model and Serial Number)	

- | | |
|---|---|
| <input type="checkbox"/> Check foot clutch.
<input type="checkbox"/> Check hand clutch (if used).
<input type="checkbox"/> Check shuttle action (if used).
<input type="checkbox"/> Check brakes.
<input type="checkbox"/> Operate Eagle Hitch hydraulic system and check oil level in torque tube.
<input type="checkbox"/> Check tire pressure.
<input type="checkbox"/> Tighten cylinder head and adjust tappets.
<input type="checkbox"/> Check distributor timing.
<input type="checkbox"/> Check spark plugs and distributor point gap.
<input type="checkbox"/> Check full governed no load engine speed. | <input type="checkbox"/> Tighten all bolts (including rims).
<input type="checkbox"/> Cooling system.
<input type="checkbox"/> Crankcase oil (Change oil and filter if necessary).
<input type="checkbox"/> Oil level in transmission and torque tube.
<input type="checkbox"/> Lubricate all pressure fittings and oil cups.
<input type="checkbox"/> Check air cleaner.
<input type="checkbox"/> Check steering, bearing adjustment and front wheel toe-in.
<input type="checkbox"/> Battery, starter, generator and lights.
<input type="checkbox"/> Check operation of all instruments. |
|---|---|

DEALER: Question purchaser carefully concerning his experience with tractor and answer any questions concerning maintenance or operation that are not clear to him.

Checkup _____
Performed by

Signed _____
Dealer

Signed _____
Customer

ORIGINAL—Dealer
 DUPLICATE—Leave in Operators Manual
 for Purchaser

To the Purchaser of a Case Tractor,

The care you give your new Case tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case tractor will serve you well for many years.

As an Authorized Case Dealer we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.


Your Authorized Case Dealer

To insure efficient and prompt service, please furnish us with the Model and Serial Number of your tractor and Serial Number of your engine, in all correspondence or contacts.

TABLE OF CONTENTS

	Page
Serial Numbers	6
General Specifications	7- 12
Lubrication	13- 27
Pressure Fittings	16- 17
Engine Lubrication	20- 22
Transmission Lubrication	23
Steering Gear	23
Hydraulic System	25- 27
Power Steering	17, 67
Operating Instructions	29- 74
Pre-Starting Check List	30
Operating Controls and Instruments	32- 34
Run-In Procedure	35
Engine Starting Procedure	36- 37
Stopping the Engine	37
Differential Brakes	38
Tripl-Range Drive	40- 41
Dual-Range Shuttle	42
Eagle Hitch and Hydraulic System	43- 48
Three-Point Hitch (with Swinging Draft Arms)	49
Remote (Portable) Cylinder Attachment	50- 51
Rear Wheel Spacing	52- 54
Power Adjusted Wheels	55- 56
Front Wheel Spacing	57- 58
Belt Pulley Attachment	59- 61
Constant Running P.T.O.	62- 63
P.T.O. Output Shaft	64- 65
Drawbar	66
Tractor Accessories	67- 68
Cold Weather Operation	69- 70
Fuel Storage	71
Important Checks During Operation	72- 73
Service Suggestions	75- 81
Preventive Maintenance	83-109
Cooling System	84- 89
Fuel and Fuel System	91- 93
Governor and Engine Speed	94
Valve Adjustment	95
Ignition and Electrical Equipment	97-103
Front Wheel Bearings	104
Flywheel Clutch and Pedal Linkage	105
Differential Brakes and Adjustment	106
Tractor Storage	107-108
Index, Alphabetical	109-110
Warranty	112

INTRODUCTION

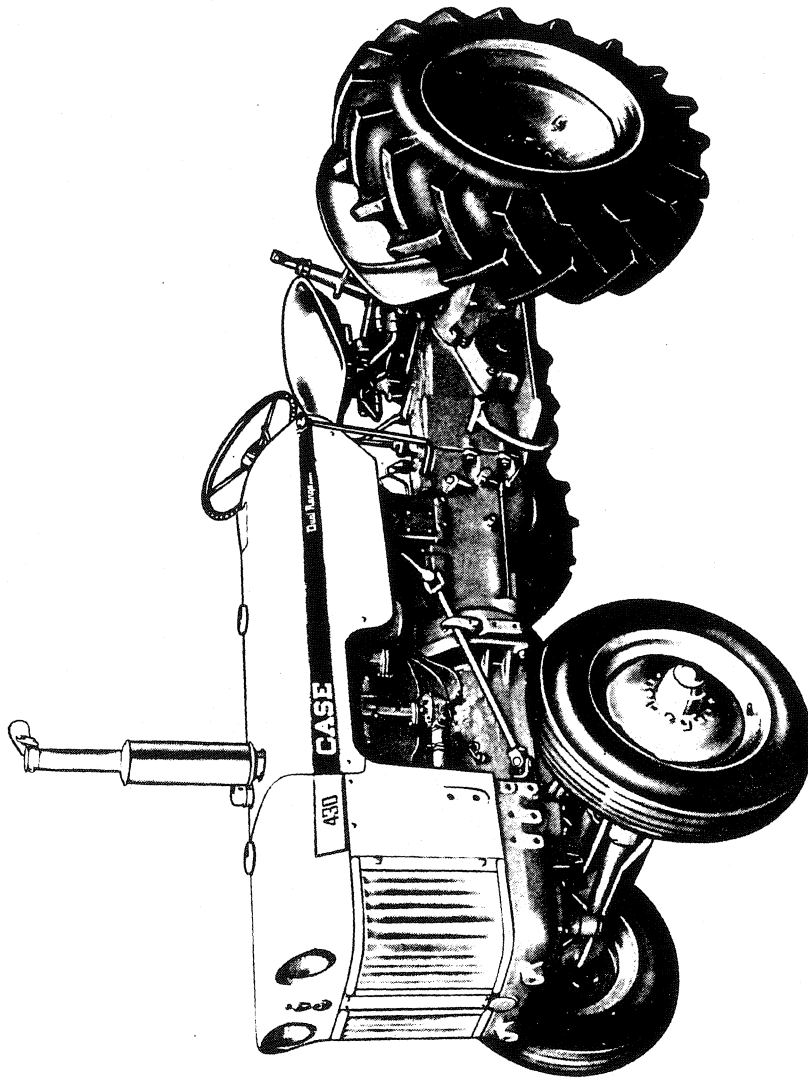

Case Model 440 4-Wheel Utility Tractor

Buy Now



Our support email:

ebooklibonline@outlook.com