

# CONTENTS

	Page
TO THE OWNER .....	5
SAFETY .....	6
HAND SIGNALS .....	18
DECALS .....	20
TRACTOR IDENTIFICATION .....	24
SPECIFICATIONS .....	26
OPERATING .....	42
MAINTENANCE .....	83

## SPECIFICATIONS

ENGINE SPECIFICATIONS .....	26
GENERAL SPECIFICATIONS .....	28
APPROXIMATE TRACTOR SPEEDS .....	33
APPROXIMATE MEASUREMENTS .....	34
TIRE PRESSURES .....	35
TREAD POSITIONS .....	36
FUEL .....	39
LUBRICANTS .....	40

# OPERATING

	Page
<b>INSTRUMENTS</b> .....	42
<b>CONTROLS</b> .....	46
<b>PEDALS</b> .....	48
<b>LEVERS</b> .....	50
<b>OPERATOR'S SEAT</b> .....	54
<b>SEAT BELTS</b> .....	55
<b>AMBER WARNING LAMPS – DIRECTION TURN SIGNALS AND SMV SYMBOL</b> .....	56
<b>IMPLEMENT WARNING LAMPS – SMV SYMBOL</b> .....	58
<b>DIESEL ENGINE:</b>	
<b>Before Starting the Engine</b> .....	59
<b>Starting the Engine</b> .....	60
<b>Before Stopping the Engine</b> .....	61
<b>Stopping the Engine</b> .....	61
<b>TRANSMISSION:</b>	
<b>Method of Operation</b> .....	63
<b>Using the Travel Speed Chart</b> .....	63
<b>BALLAST</b> .....	64
<b>MEASURING WHEEL SLIP</b> .....	65
<b>POWER TAKE-OFF (PTO)</b> .....	66
<b>TREAD ADJUSTMENT:</b>	
<b>Front Tread:</b> .....	67
<b>Rear Tread: Power Adjusted</b> .....	68
<b>HITCH:</b>	
<b>Single Category</b> .....	69
<b>Dual Category</b> .....	70
<b>Telescopic Stabiliser Bars</b> .....	72
<b>Mechanical Flotation</b> .....	73
<b>DRAWBAR</b> .....	74
<b>DRAFT CONTROL:</b> .....	76
<b>Operating with Draft Control</b> .....	77
<b>POSITION CONTROL:</b> .....	78
<b>Operating with Position Control</b> .....	79
<b>DOUBLE ACTING REMOTE VALVES</b> .....	80
<b>SINGLE ACTING EQUIPMENT</b> .....	81
<b>HOSE AND COUPLERS</b> .....	81
<b>HITCH LIFT LATCH</b> .....	82

# MAINTENANCE

INTRODUCTION .....	83
FIRST OIL CHANGE AT 20/60 HOURS .....	83
SERVICE CHART .....	85
DAILY INSPECTION .....	88
50 HOUR SERVICE .....	89
100 HOUR SERVICE .....	95
200 HOUR SERVICE .....	96
400 HOUR SERVICE .....	97
800 HOUR SERVICE .....	107
FUEL WATER TRAP .....	90
BRAKE ADJUSTMENT .....	91
CLUTCH ADJUSTMENT:	
Continuous .....	92
Independent .....	93
ENGINE OIL CHANGE .....	95
ENGINE OIL FILTER .....	96
INJECTORS .....	97
VALVE CLEARANCES .....	97
TRANSMISSION OIL FILTER ELEMENT .....	98
FAN BELT .....	100
AIR CLEANER ELEMENT .....	101
FUEL FILTERS .....	102
REMOVING AIR FROM THE FUEL SYSTEM .....	102
HYDROSTATIC STEERING FILTER ELEMENT .....	104
ROLL OVER PROTECTIVE STRUCTURE (ROPS) .....	106
COOLING SYSTEM .....	108
FRONT HUB BEARINGS .....	109
HOOD — EARLY MODEL:	
Raising .....	110
Lowering .....	110
HOOD SIDE PANELS .....	110
RAISING THE ENGINE COVER — LATER MODEL .....	111
Lowering the Engine Cover .....	112
Removing the Front Panel .....	112
Installing the Front Panel .....	112
REMOVING THE SIDE PANEL AND RAIL ASSEMBLY .....	113
FUSES .....	114
BATTERY .....	115
AUXILIARY BATTERY .....	116
ALTERNATOR .....	117


## **TO THE OWNER OF A CASE TRACTOR**

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

*Your Authorized Case Dealer*

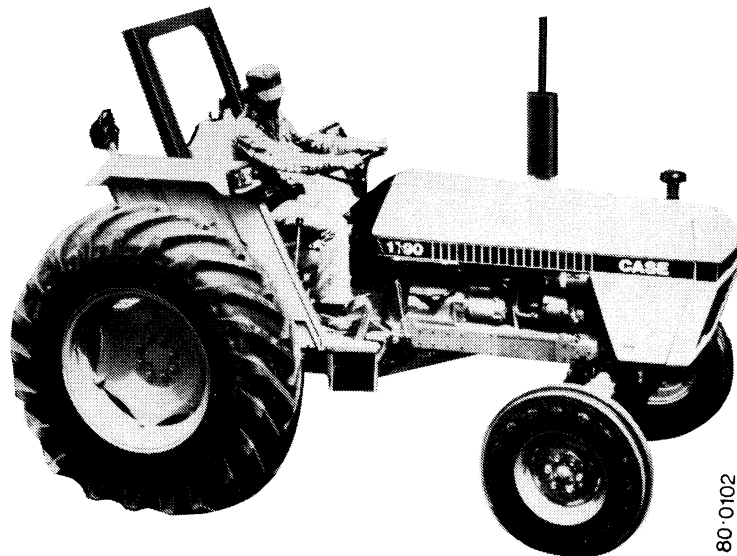

80-0102

**NOTE:** *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

## SAFETY

If you carefully operate this equipment, you will be safe and the persons around you will be safe. Before you operate any equipment, make sure you know the positions and operation of all the controls. **BEFORE YOU START YOUR WORK, PUT THE MACHINE IN A SAFE AND OPEN AREA. THEN CHECK ALL THE CONTROLS.**

**READ EVERY PAGE OF THIS MANUAL.** Make sure you understand the instructions. Do not operate this machine before you know the specifications of this machine for speed, braking, steering, stability, and load.

The safety codes, insurance rules, country and local laws are not in this manual. Know the rules and laws for your area. Make sure your machine is correctly fitted according to these laws and rules.

It is our recommendation that the following safety rules be put in a place where they can be seen clearly.



### **BEFORE YOU START THE MACHINE**



**CAUTION:** Check the machine for leaks or any parts that are broken, not working correctly, or not there at all. Before you start the machine, tighten all caps, dipsticks, battery covers, etc.





**CAUTION:** If you cannot read any safety decal, clean or change it.



**CAUTION:** Before you operate this machine on a road check local rules.


 **CAUTION:** Before leaving the tractor, stop the engine, place all controls in neutral and set the parking brake.

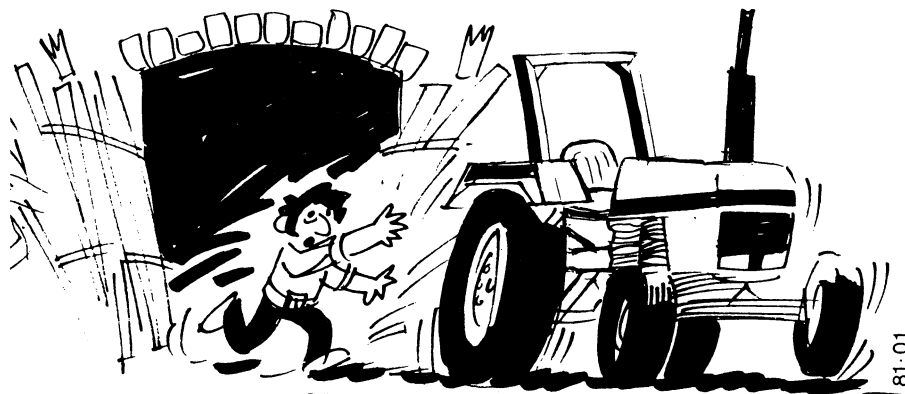

 **WARNING:** Operate controls only when seated in the Operator's seat.

 **WARNING:** On roads, use flasher/lights according to local laws. Keep SMV emblem visible.




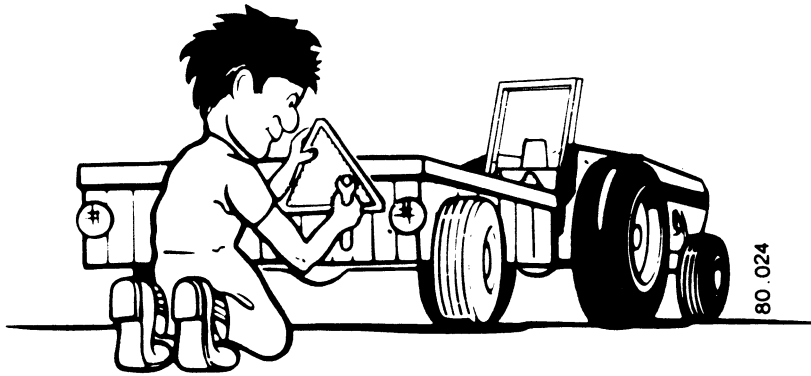
 **WARNING:** Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.

SAFETY



81-03

 **WARNING:** *On roads, use flasher lights according to local laws. Keep SMV emblem visible*




80-024

SAFETY



**CAUTION:** Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.

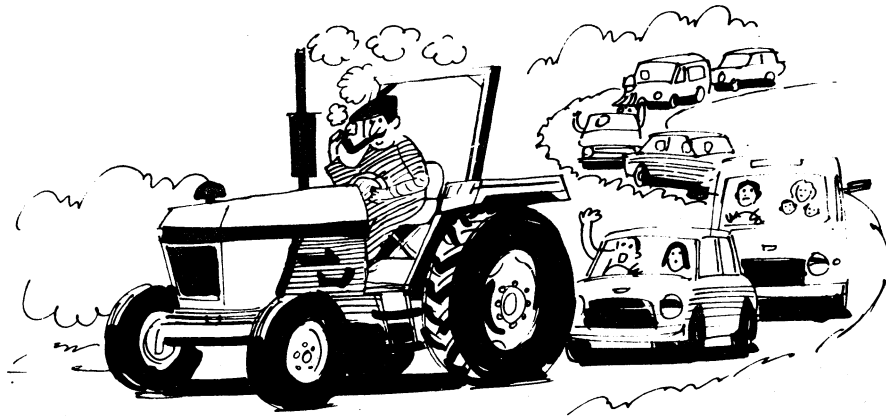

81-04



**WARNING:** Do not permit others to ride. Only one person—the operator—should be on a tractor when it is in operation.



81-05



**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)