

1290/1390 Tractor

Operators Manual

9-9224

Reprinted

CASE III



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

TABLE OF CONTENTS

Sections

| | |
|---|-----|
| TO THE OWNER | 5 |
| SAFETY | 6 |
| HAND SIGNALS | 20 |
| DECALS | 22 |
| SERIAL NUMBERS | 26 |
| DIESEL ENGINE SPECIFICATIONS | 28 |
| GENERAL SPECIFICATIONS | 30 |
| APPROXIMATE TRACTOR SPEEDS | 35 |
| APPROXIMATE OVER ALL MEASUREMENTS | 36 |
| TIRE SIZES LOADS AND PRESSURES | 38 |
| TIRE ARRANGEMENTS | 39 |
| FRONT WHEEL TREAD POSITIONS | 40 |
| REAR WHEEL TREAD POSITIONS | 42 |
| FUEL SPECIFICATIONS | 44 |
| LUBRICATION | 46 |
| INSTRUMENTS AND CONTROLS | 48 |
| MAINTENANCE | 101 |

TABLE OF CONTENTS

Contents

| | |
|---|-------|
| TO THE OWNER | 5 |
| SAFETY | 6-19 |
| HAND SIGNALS | 20-21 |
| DECALS | 22-25 |
| SERIAL NUMBERS | 26-27 |
| Tractor | 26 |
| Pin, Engine, Axle | 27 |
| DIESEL ENGINE SPECIFICATIONS | 28-29 |
| GENERAL SPECIFICATIONS | 30-34 |
| APPROXIMATE TRACTOR SPEEDS | 35 |
| APPROXIMATE OVER ALL MEASUREMENTS | 36-37 |
| 2WD | 36 |
| MFD | 37 |
| TIRE SIZES, LOADS AND PRESSURES | 38 |
| TIRE ARRANGEMENTS, MFD | 39 |
| FRONT WHEEL TREAD POSITIONS | 40-41 |
| 2WD | 40 |
| MFD | 41 |
| REAR WHEEL TREAD POSITIONS | 42-43 |
| Manual Adjust | 42 |
| Power Adjust | 43 |
| FUEL SPECIFICATIONS | 44-45 |
| LUBRICATION | 46-47 |
| Engine | 46 |
| Capacities | 47 |

TABLE OF CONTENTS

Contents

| | |
|--|-------|
| INSTRUMENTS AND CONTROLS | 48-99 |
| Operating Instruments | 48-49 |
| Warning Lamps | 50-51 |
| Operating Controls | 52-53 |
| Pedals | 54-55 |
| Control Levers | 56-60 |
| LH SIDE | 56-57 |
| RH SIDE | 58-59 |
| REAR | 60 |
| Operators Seat | 61 |
| Seat Belts | 62 |
| Decals | 63-65 |
| Front Opening Hood | 66 |
| Rear Opening Hood | 67-68 |
| Front Panels - Side Panels | 68-69 |
| Amber Warning Lamps, Turn Signals, SMV and Implement Warning Lamp | 70-72 |
| Starting the Engine | 73-74 |
| Stopping the Engine | 75 |
| Synchronesh Transmission | 76-77 |
| Tractor Ballast | 78-81 |
| BALLAST | 78 |
| FRONT END WEIGHTS | 79 |
| REAR WHEEL WEIGHTS | 80 |
| MEASURING SLIP | 81 |
| Front Axle Adjustment | 82 |
| Rear Wheel Adjustment | 83 |
| Hitch System | 84-91 |
| OPERATION | 84-85 |
| LIFT ROD | 86 |
| MECHANICAL FLOAT | 86 |
| STABILIZER BARS | 87 |
| SENSING UNIT | 88 |
| SELECTOR DIAL | 89 |
| POSITION CONTROL | 90 |
| DRAFT CONTROL | 91 |
| Remote Hydraulic Valve | 92-95 |
| HOSE AND COUPLINGS | 92 |
| REMOTE VALVES | 93-95 |
| Drawbar | 96-97 |
| Power Take Off | 98-99 |

TABLE OF CONTENTS

Contents

| | |
|---|---------------|
| PREVENTATIVE MAINTENANCE | 101-144 |
| General | 101 |
| Service Charts | 102-107 |
| Grease Fittings | 108-109 |
| Daily / 10 Hour Service | 110 |
| 50 Hour Service | 111-116 |
| FUEL WATER TRAP | 111 |
| CLUTCH ADJUSTMENT | 112 |
| BRAKE ADJUSTMENT | 113 |
| TRANSMISSION OIL | 114-134 |
| FRONT AXLE MFD - CASE | 115, 118, 136 |
| FRONT AXLE MFD - CARRARO | 116, 118, 136 |
| 100 Hour Service | 117-118 |
| 200 Hour Service | 119 |
| ENGINE OIL FILTER | 119 |
| 400 Hour Service | 120-132 |
| TRANSMISSION OIL FILTER | |
| 1390 | 120 |
| 1290 | 122 |
| INJECTORS | 124 |
| VALVE CLEARANCES | 124 |
| FAN BELT | 125 |
| FUEL FILTERS | 125 |
| REMOVING AIR FROM THE FUEL SYSTEM | 126 |
| AIR CLEANER | 128 |
| HYDROSTATIC STEERING | 130 |
| ROPS | 132 |
| 800 Hour Service | 133-137 |
| FRONT HUB BEARINGS | 133 |
| COOLING SYSTEM | 135 |
| BATTERY | 138-140 |
| FUSES | 141 |
| LAMPS | 142-143 |
| ALTERNATOR | 144 |

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: *When you are in the tractor seat looking forward, the right-hand and left-hand of the tractor are the same as your right-hand and left-hand.*

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety: by making tractors with better protection and by giving these rules for safe operation.

Before Starting

CAUTION: *Provide a first aid kit for use in case of accident.*



CAUTION: *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



Figure 2

WARNING Before starting engine study Operators Manual safety messages.

Read all safety signs on the tractor.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on tractor operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your dealer.

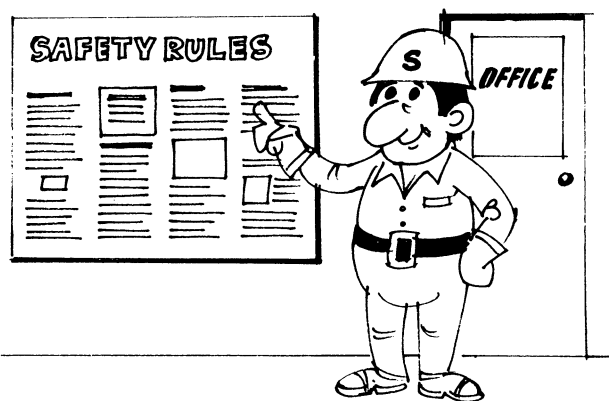


Figure 3

WARNING Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operators seat.

On roads, use flasher lights according to local laws.

Keep SMV emblem visible.

Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or doing any maintenance.

Before leaving tractor unattended, lower hydraulically raised equipment to ground.



WARNING Before starting the engine be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will prevent the accidental start up of PTO driven equipment.





Figure 4

 **WARNING** On roads, use flasher lights according to local laws. Keep SMV emblem visible.

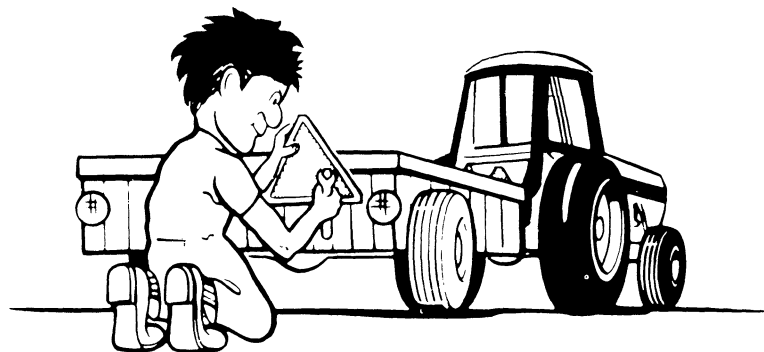


Figure 5



CAUTION Before leaving the tractor, stop the engine, place all controls in neutral and set the parking brake.

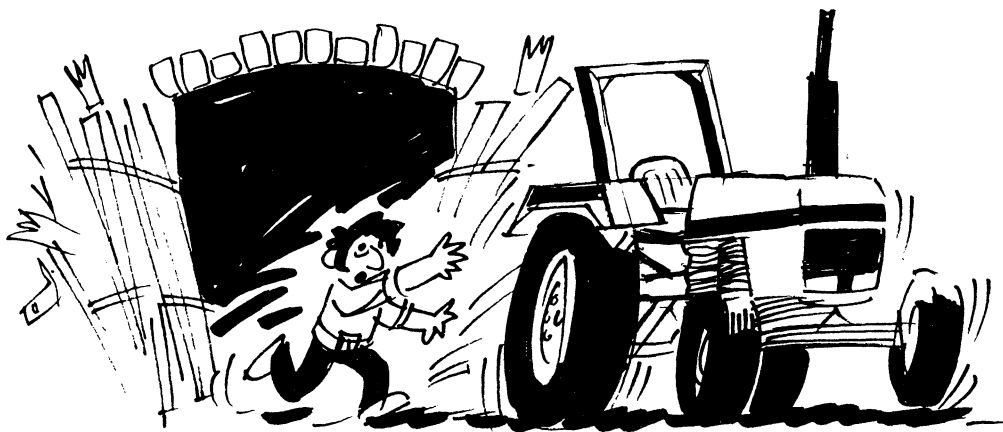


Figure 6

WARNING Operate controls only when seated in the Operators seat.



Figure 7



WARNING Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.

Buy Now



Our support email:

ebooklibonline@outlook.com