

# 2594 Tractor

## Operators Manual

9-9442

Reprinted

**CASE III**



***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

## ***Your Authorized Case Dealer***



**Figure 1**

**NOTE:** *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

# TABLE OF CONTENTS

TO THE OWNER .....	I	OPERATING INSTRUCTIONS (Cont'd)	
SAFETY .....	IV-XVIII	True Ground Speed .....	47
Safety Rules .....	IV	True Ground Speed Sensor .....	47,48
Before Starting .....	IV-V	Programming Attachment Width ..	51,52
Operation .....	VI-XIV	English/Metric Selection .....	53
Service .....	XV-XVIII	Operating Service Monitors and	
HAND SIGNALS .....	XIX-XX	Bar Indicators .....	54-59
DECALS .....	XXI-XXV	Automatic Shutdown System	
SERIAL NUMBERS .....	1	(If Equipped) .....	60
DIESEL ENGINE SPECIFICATIONS .....	2,3	Instrument Cluster	
GENERAL SPECIFICATIONS .....	4-6	Functional Checks .....	61
APPROXIMATE TRACTOR SPEEDS .....	7-9	Operating Controls .....	62-91
TIRE AND WHEEL EQUIPMENT .....	10,11	Steering Console .....	62-65
APPROXIMATE OVER ALL		Operators Console .....	66-71
MEASUREMENTS .....	12,13	Steering Column Tilt .....	72
APPROXIMATE TRANSPORT		Telescopic Steering Column .....	72
WEIGHT .....	12,13	Heater Stop Valve .....	73
OPERATORS CAB .....	12,13	Fuel Tank Water Trap .....	73
FRONT WHEEL TREAD POSITIONS ..	14,15	Rear View Mirrors .....	74
REAR WHEEL TREAD POSITIONS .....	16,17	Cab Window Lever .....	74
DUAL REAR WHEEL		Cab Headliner Controls .....	75,76
TREAD POSITIONS .....	18,19	Cab Air Flow Control .....	77
FUEL SPECIFICATIONS .....	20,21	Cab Defroster Control .....	77
LUBRICATION .....	22-33	Cab Air Flow Arrangements .....	78-80
Engine Hourmeter .....	22	Air Conditioner Operation .....	81
Diesel Engine .....	23	Cab Door Lock .....	81
Lubrication Chart .....	24,25	Operators Seat .....	82-85
Engine Oil Change .....	26,27	Seat Belts .....	86,87
Engine Oil Filters .....	27	Amber Warning Lamps, Direction	
Transmission Oil Level Check & Change .	28	Turn Signals & SMV Symbol .....	88,89
Hydraulic Oil Filters .....	29-31	Implement Warning Lamps,	
Steering & Brake System Air Removal ..	32	SMV Symbol .....	90
Front Wheel Bearings .....	33	Auxiliary Outlet Socket .....	91
ALTERNATOR CHARGING SYSTEMS ..	34	Starting Procedure .....	92,93
OPERATING INSTRUCTIONS .....	35-142	Stopping the Engine .....	94
Run-In Procedure .....	35	Cold Temperature Operation .....	95
Before Starting the Engine .....	36	Preparing Tractor For Operating in	
Towing .....	37	Cold Temperatures .....	96
How to Transport the Tractor .....	37	Cold Temperature Starting .....	97-100
Digital Instrument Cluster .....	38-61	Case Starting Fluid .....	97
Programming Tire Size .....	41-43	Coolant Heater .....	97
Programming Static Loader Radius ..	44	Ether Starting Fluid .....	98,99
Programming Dynamic		Starting Fluid Container	
Loaded Radius .....	45,46	Replacement .....	100
		Power Shift Transmission .....	101,102
		Differential Lock .....	103
		Power Takeoff .....	104-106
		Operating PTO .....	104
		Guards .....	105
		Operating Safety .....	106

# TABLE OF CONTENTS

## OPERATING INSTRUCTIONS (Cont'd)

Drawbar .....	107
Three Point Hitch System .....	108
Hitch System Adjustments .....	109-112
Hitch Operation .....	113-117
Anti-Sway Chain .....	113
Connect Implement .....	114
Hitch Control Lever .....	114,115
Sensing Control .....	116,117
Stationary Depth .....	117
Hydraulic Float Control .....	117
Hitch Coupler - Category III-II .....	118-121
Hitch Coupler - Category III .....	122
Remote Hydraulic Control .....	123-129
Remote Control Levers .....	123,124
Variable Flow Control .....	125,126
Operating the Remote System .....	127
Hydraulic Motors .....	127
Remote Valve With Lockcheck (If Equipped) .....	127
Hydraulic Hose Couplers .....	128
Hydraulic Hose Coupling .....	129
Remote Cylinder .....	130
Hydraulic Cylinder Jack Pads .....	131
Front Axle Adjustment .....	132
Rear Wheel Hub Adjustment .....	133-135
Dual Wheel Mounting .....	136
Rear Tire Mounting .....	137
Loads Matched to Tractor .....	137
Tractor Ballast .....	139-142
Measuring Slip Without True Ground Speed Sensor .....	138
Tractor and Equipment Weight .....	139
Front End Weights .....	140
Rear Wheel Weights .....	141
Tire Liquid Weight .....	142

## PREVENTIVE MAINTENANCE .....

Hood and Side Panels .....	144
Cooling System .....	145-154
Pressure Cooling System .....	145
Coolant Solutions .....	146
Engine Cooling System Treatment ..	146
Radiator Cleaning .....	147
Cooling System Service .....	148
Thermostat Check .....	149
Thermostat Replacement .....	149-151
Fan Belt Adjustment .....	152
Fan Belt Replacement .....	153
Water Filter & Conditioner (If Equipped) .....	154

## PREVENTIVE MAINTENANCE (Cont'd)

Fuel System .....	155-160
Service Intervals .....	155
Fuel Filter Replacement .....	156,157
Fuel Strainer .....	158,159
Air Removal .....	159,160
Air Induction System .....	161-170
Air Filter Service Interval .....	162
Final Air Filter Service .....	163-166
Aspirated Strata Tube Service ..	167-169
Tubes and Hoses .....	170
Neutral Start Switch Adjustment ..	171,172
Electrical System .....	173-176
Head Lamps .....	173
Flood Lamps .....	173
Flashing Amber Warning Lamps ....	174
Tail Lamps .....	174
Instrument Cluster Lamps .....	175
Fuse Panel - Tractor & Cab .....	175
Head Lamp Adjustment .....	176
Batteries .....	177-180
General Maintenance .....	177
When Batteries Are Not In Use .....	177
Access to Batteries .....	178
Battery Cables and Terminals .....	178
Battery Water .....	179
Removal and Installation of Batteries .	179
Auxiliary Battery Connections .....	180
Roll Over Protective Structure (ROPS) .....	181-183
Tractor Roll Over .....	182
Safety Rules .....	182
Maintenance and Inspection .....	182
ROPS Label .....	183
Operators Cab .....	184-196
Preventive Maintenance .....	184,185
Air Filter Service .....	186-188
Seat Belt Inspection and Maintenance .....	188
Operators Seat .....	189-190
Refrigerant Check .....	191-192
Compressor Belt Adjustment .....	193
Compressor Belt Replacement .....	194
Dome Lamp .....	195
Console Lamp .....	196
CASE TECHNICAL MANUALS .....	197

# SAFETY

## Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

**READ THIS MANUAL COMPLETELY** and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety: by making tractors with better protection and by giving these rules for safe operation.


## Before Starting



**CAUTION:** *To help prevent personal injuries during operation and maintenance, use safety shoes, a hard hat, safety glasses or goggles and good fitting clothing.*



**CAUTION** *Provide a first aid kit for use in case of accident.*

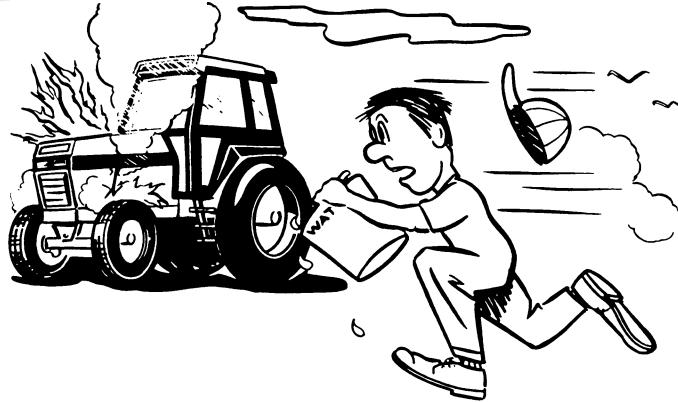

**CAUTION:** *It is good practice to carry a fire extinguisher on the machine. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*

**WARNING** Before starting engine study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.


Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



**CAUTION:** Check the machine for leaks or any parts that are broken, not working correctly, or not there at all. Before you start the machine, tighten all caps, dipsticks, battery covers, etc.

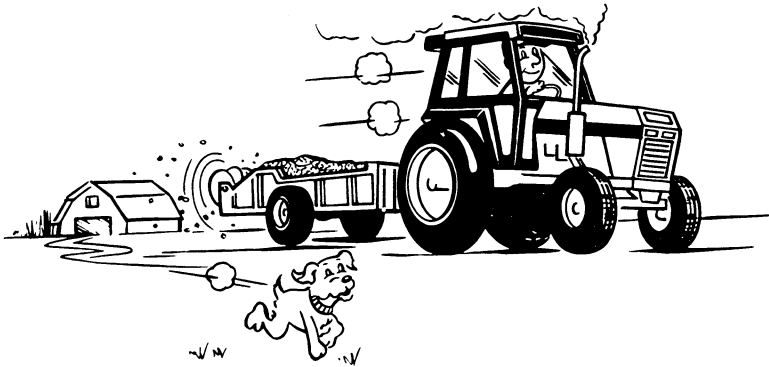

**WARNING:** To help prevent injury:  
**BEFORE STARTING ENGINE** - Put shields in place. Sit in the seat. Place controls in neutral.

**BEFORE OPERATING MACHINE** - Clear people away. No riders. Fasten seat belt.

**WHEN OPERATING MACHINE** - Keep away from power driven parts. Avoid steep slopes, embankments, ditches and rough terrain. Reduce speed when turning. In high speed travel, couple brake pedals together where applicable. On road travel, use flashing warning lights where permitted and keep SMV emblem visible from rear.

**WHEN MACHINE IS STOPPED** - Engage park lock or brake. Lower raised equipment to ground. Stop engine before dismounting to service or clear machine(s).



**WARNING:** Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of power driven equipment.




## Operation



**CAUTION:** With the engine running and the tractor in motion, if the ignition key switch is turned off and then back on, the tractor can move forward rapidly. The higher the throttle setting the more rapid the move forward will be. When the ignition key is turned off, electric solenoids close all valves to the hydraulic power shift clutches. When the key is turned back to on, oil will immediately flow to and close the clutches controlled by the power shift lever position and the tractor will move forward rapidly.



**CAUTION:** Do not turn off the switch to stop the tractor with the transmission in gear when the engine is running. Power shift clutch friction could cause tractor movement on a smooth, level surface. If the ignition key is turned off for any reason, the engine should also be shutoff using the engine stop control.

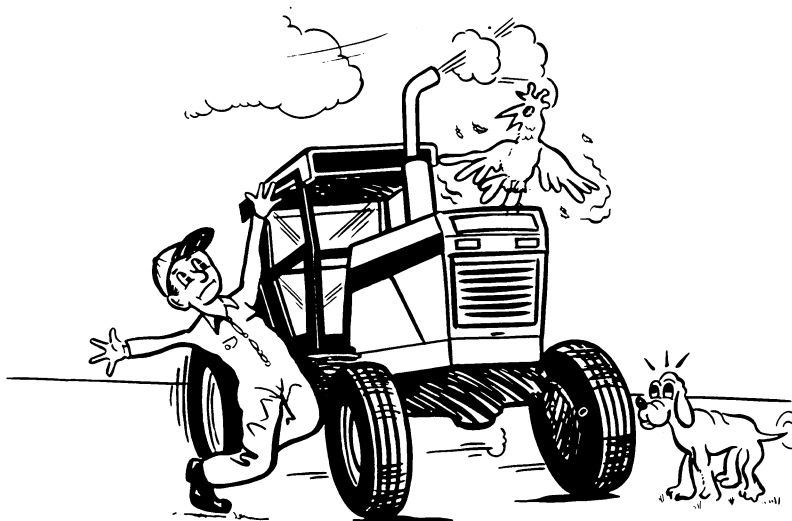

**WARNING:** Engine can start with transmission in gear when neutral safety switch is by-passed:

1. Do not connect across terminals on starter.
  2. Attach booster batteries according to safe method in Operators Manual. Then use recommended starting procedure from operators seat.
  3. When necessary, repair electrical system components promptly so that "jump starting" will not be attempted.
- Machine run-away can cause injury or death to operator and bystanders.




**WARNING:** Cab air filters remove dust in the air, but are not capable of removing chemicals used in spraying crops or in weed control. Many chemicals used for these purposes are toxic when improperly used, and can be hazardous to operators and others in the area. Follow the instructions of manufacturers of both the equipment and the chemicals regarding prohibitions against inhalation of dust or spray, personal hygiene practices, and other precautions noted by the manufacturers.



**WARNING:** Travel speed should be such that complete control and machine stability is maintained at all times. Where possible, avoid operating near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.




**WARNING:** Collision of high speed road traffic and slow moving machines can cause personal injury or death. On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

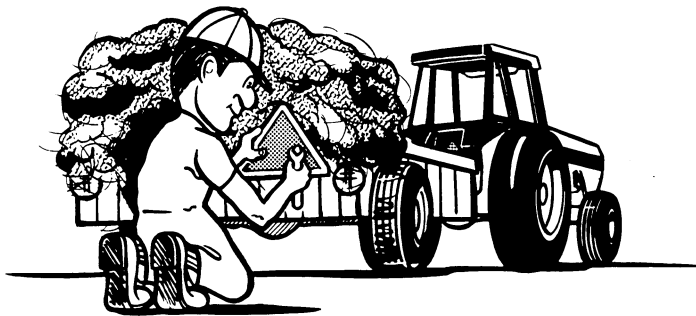




**CAUTION** Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.

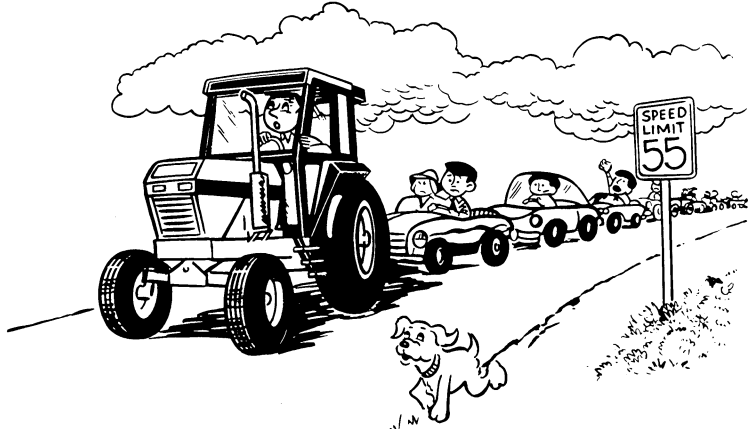


**CAUTION** Brake pedals must be locked together for road travel. This will insure uniform brake application and maximum stopping ability.

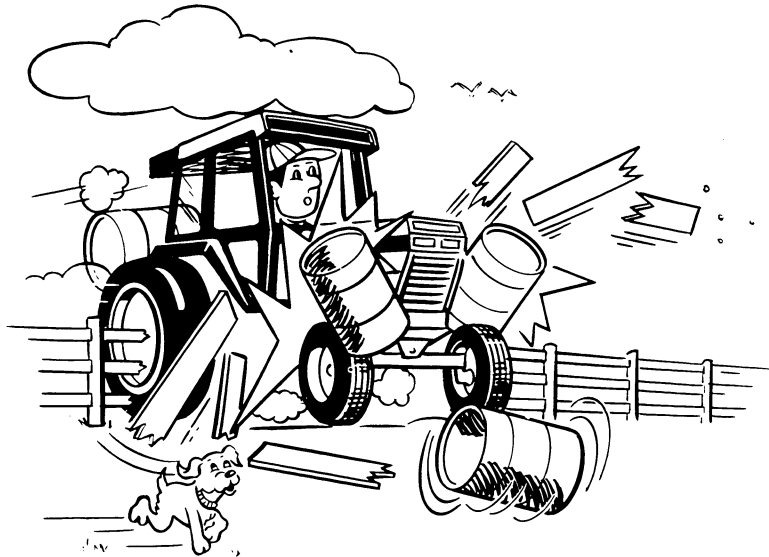

**WARNING:** Extra weight and bad traction conditions such as mud or ice increase your stopping distance. Remember that liquid in the tires, weights on the machine or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.


**CAUTION:** Make sure that the weight of a trailed vehicle that is not equipped with brakes, **NEVER EXCEEDS** the weight of the machine that is towing the vehicle. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.

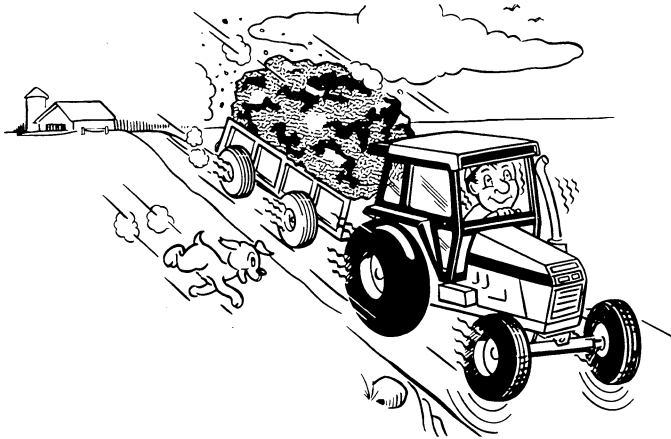

**WARNING:** Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".



**WARNING:** A frequent cause of personal injury or death is persons falling off and being run over. Do not permit others to ride. Only one person - the operator - should be on the machine when it is in operation.

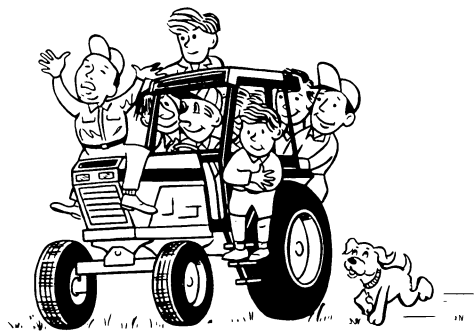

**CAUTION:** Do not drive on roads, or at high speed anywhere, with the differential lock engaged. Difficult steering will occur, and can result in an accident. In field operation, use the differential lock for traction improvement, but release for turning at row ends.





**CAUTION** Try to balance the load primarily on the implement wheels - as in loading a trailer or spreader. Avoid overloading the drawbar. Add front end weights for improved stability. Engage the clutch smoothly, avoid jerking and use the brakes cautiously to avoid jack-knifing.



**WARNING:** Be certain both latches are fully engaged across the implement lift pins before transporting or pulling the implement.




**WARNING** Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use 3 point hitch only with the implements designed for its use - not as a drawbar.



**WARNING:** Securely fasten your seat belt if the machine has a ROPS frame or cab. The seat belt can help insure your safety if it is used and maintained.



**CAUTION:** Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.

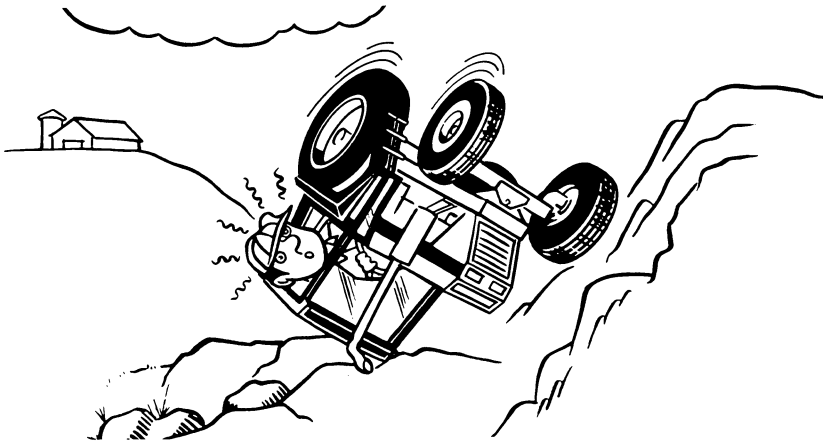

**WARNING:** Operate the machine with the door closed to provide proper ROPS protection and to properly utilize the heating, ventilating or cooling systems.



**CAUTION:** To provide more secure hand and foot mobility, preventing slipping and possible injury, always face the machine when mounting and dismounting.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)