

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS (Cont'd)	
SAFETY	IV-XVII	True Ground Speed Sensor	43,44
Safety Rules	IV	Programming Attachment Width ..	47,48
Before Starting	IV-V	Operating Service Monitors and	
Operation	VI-XIV	Bar Indicators	50-55
Service	XV-XVII	Automatic Shutdown System	
HAND SIGNALS	XVIII-XIX	(If Equipped)	56
DECALS	XX-XXIV	Instrument Cluster	
SERIAL NUMBERS	1	Functional Checks	57
DIESEL ENGINE SPECIFICATIONS	2,3	Operating Controls	58,87
GENERAL SPECIFICATIONS	4-7	Steering Console	58-61
APPROXIMATE TRACTOR SPEEDS	8	Foot Pedals	60,61
APPROXIMATE OVER ALL		Operators Console	62-66
MEASUREMENTS	9	Hand Brake	67
APPROXIMATE TRANSPORT		Steering Column Tilt	68
WEIGHT	9	Telescopic Steering Column	68
OPERATORS CAB STANDARDS	9	Heater Stop Valve	69
TIRE AND WHEEL EQUIPMENT	10,11	Fuel Tank Water Trap	69
TIRE SIZE ARRANGEMENTS	12	Cab Headliner Controls	70,71
FRONT WHEEL TREAD POSITIONS	13	Rear View Mirrors	72
REAR WHEEL TREAD POSITIONS	14,15	Cab Window Lever	72
FUEL SPECIFICATIONS	16	Cab Air Flow Control	73
LUBRICATION	17-30	Cab Defroster Control	73
Engine Hourmeter	17	Cab Air Flow Arrangements	74-76
Lubrication Chart	18,19	Air Conditioner Operation	77
Diesel Engine	20	Cab Door Lock	77
Engine Oil Change	21,22	Operators Seat	78-81
Engine Oil Filters	22	Seat Belts	82,83
Transmission Oil Level Check & Change ..	23	Amber Warning Lamps, Direction ..	84,85
Transfer Gear Box Oil Level	23	Turn Signals & SMV	
Hydraulic Oil Filters	24-26	Implement Warning Lamps,	
Differential Oil Level	27	SMV Symbol	86
Planetary Oil Level	28	Auxiliary Outlet Socket	87
Steering & Brake System Air Removal ..	29	Starting Procedure	88,89
Front Wheel Pivot Pin Bearing	30	Stopping the Engine	90
ALTERNATOR CHARGING SYSTEMS ...	30	Cold Temperature Operation	91
OPERATING INSTRUCTIONS	31-133	Preparing Tractor For Operating	
Run-In Procedure	31	in Cold Temperatures	92
Before Starting the Engine	32	Cold Temperature Starting	93-96
Towing	33	Case Starting Fluid	93
How to Transport the Tractor	33	Coolant Heater	93
Digital Instrument Cluster	34-57	Operating Ether Start	94,95
Programming Tire Size	37-39	Starting Fluid	
Programming Static Loaded Radius ..	40	Container Replacement	96
Programming Dynamic		Power Shift Transmission	97,98
Loaded Radius	41,42	Differential Lock	99
True Ground Speed	43	Power Takeoff	100-102
		Operating PTO	100
		Guards	101
		Operating Safety	102
		Drawbar	103
		Three Point Hitch System	104
		Hitch System Adjustments	105-107
		Hitch Operation	108-112
		Connect Implement	108

TABLE OF CONTENTS

OPERATING INSTRUCTIONS (Cont'd)

Hitch Control Lever	108,109
Sensing Control	110,111
Stationary Depth	111
Hydraulic Float Control	111
Anti-Sway Chain	112
Hitch Coupler - Category II	112
Hitch Coupler - Category III-II	113-115
Remote Hydraulic Control	116-122
Remote Control Levers	116,117
Variable Flow Control	118,119
Operating the Remote System	120
Hydraulic Motors	120
Remote Valve with Lockcheck (If Equipped)	120
Hydraulic Hose Couplers	121
Hydraulic Hose Coupling	122
Remote Cylinder	123
Hydraulic Cylinder Jack Pads	124
Rear Wheel Hub Adjustment	125-127
Front and Rear Tire Mounting	128
Loads Matched to Tractor	129
Tractor Ballast	130-133
Ballast	130
Measuring Slip Without True Ground Speed Sensor	130
Tractor and Equipment Weight	131
Front End Weights	132
Tire Liquid Weight	133

PREVENTIVE MAINTENANCE

Hood and Side Panels	135
Cooling System	136-145
Pressure Cooling System	136
Coolant Solutions	137
Engine Cooling System Treatment ..	137
Radiator Cleaning	138
Cooling System Service	139
Thermostat Check	140
Thermostat Replacement	140-142
Fan Belt Adjustment	143
Fan Belt Replacement	144
Water Filter and Conditioner	145
Fuel System	146-151
Service Intervals	146
Fuel Filter Replacement	147,148
Primary Fuel Filter	149,150
Air Removal	150,151
Air Induction System	152-161
Air Filter Service Interval	153
Final Air Filter Service	154-157
Aspirated Strata Tube Service ..	158-160
Tubes and Hoses	161
Neutral Start Switch Adjustment ..	162,163
Electrical System	164-167

PREVENTIVE MAINTENANCE (Cont'd)

Head Lamps	164
Flood Lamps	164
Flashing Amber Warning Lamps	165
Tail Lamps	165
Instrument Cluster Lamps	166
Fuse Panel - Tractor and Cab	166
Head Lamp Adjustment	167
Storage Battery	168-171
Access to Batteries	169
Battery Cables and Terminals	169
Battery Water	170
Removal and Installation of Batteries	170
Auxiliary Battery Connections	171
Roll Over Protective Structure (ROPS)	172-174
Tractor Roll Over	173
Safety Rules	173
Maintenance and Inspection	173
ROPS Label	174
Operators Cab	175-187
Preventive Maintenance	175,176
Air Filter Removal	177
Air Filter Service	178,179
Seat Belt Inspection and Maintenance	179
Operators Seat	180,181
Refrigerant Check	182,183
Compressor Belt Adjustment	184
Compressor Belt Replacement	185
Dome Lamp	186
Console Lamp	187

CASE TECHNICAL MANUALS

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety: by making tractors with better protection and by giving these rules for safe operation.

Before Starting



 
CAUTION: To help prevent personal injuries during tractor operation and maintenance, use safety shoes, a hard hat, safety glasses or goggles and good fitting clothing.



CAUTION Provide a first aid kit for use in case of accident.



CAUTION It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.

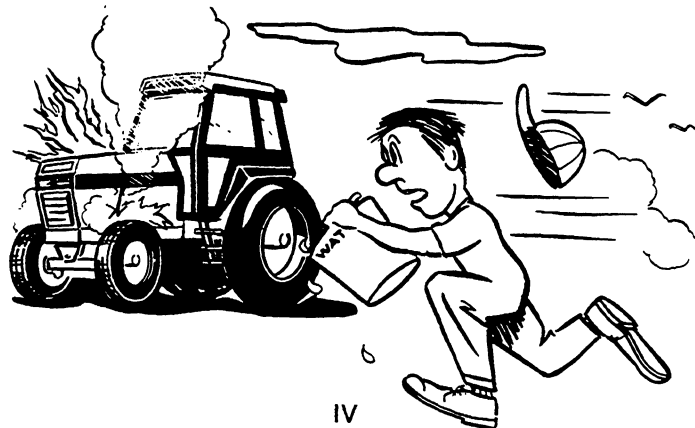

WARNING Before starting engine study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



WARNING: To help prevent injury before starting engine, put shields in place. Sit in the seat and place controls in neutral.

Before operating tractor clear people away, no riders and fasten seat belt. When operating tractor keep away from power driven parts, avoid steep slopes, embankments, ditches, rough terrain and reduce speed when turning.

In high speed travel couple brake pedals together where applicable. On road travel use flashing warning lights where permitted and keep SMV emblem visible from rear.

When stopped engage park lock or brake, lower implement to ground and stop engine before dismounting to service or clear machines.



WARNING Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.



Operation



CAUTION: With the engine running and the tractor in motion, if the ignition key switch is turned off and then back on, the tractor can move forward rapidly. The higher the throttle setting the more rapid the move forward will be. When the ignition key is turned off, electric solenoids close all valves to the hydraulic power shift clutches. When the key is turned back to on, oil will immediately flow to and close the clutches controlled by the power shift lever position and the tractor will move forward rapidly.

 


CAUTION: Do not turn off the switch to stop the tractor with the transmission in gear when the engine is running. Power shift clutch friction could cause tractor movement on a smooth, level surface. If the ignition key is turned off for any reason, the engine should also be shutoff using the engine stop control.



WARNING: Engine can start with transmission in gear when neutral safety switch is by-passed:

1. Do not connect across terminals on starter.
 2. Attach booster batteries according to safe method in Operators Manual. Then use recommended starting procedure from operators seat.
 3. When necessary, repair electrical system components promptly so that "jump starting" will not be attempted.
- Machine run-away can cause injury or death to operator and bystanders.

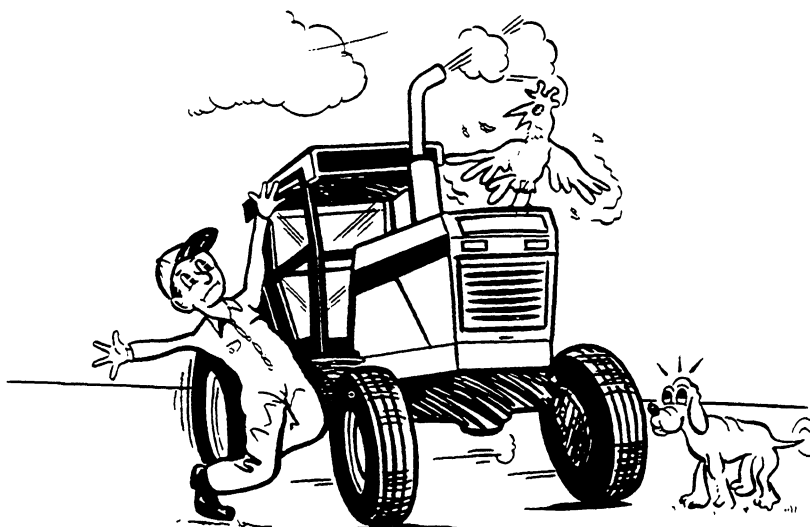





WARNING *Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.*



 CAUTION *Brake pedals must be locked together for road travel. This will insure uniform brake application and maximum stopping ability.*

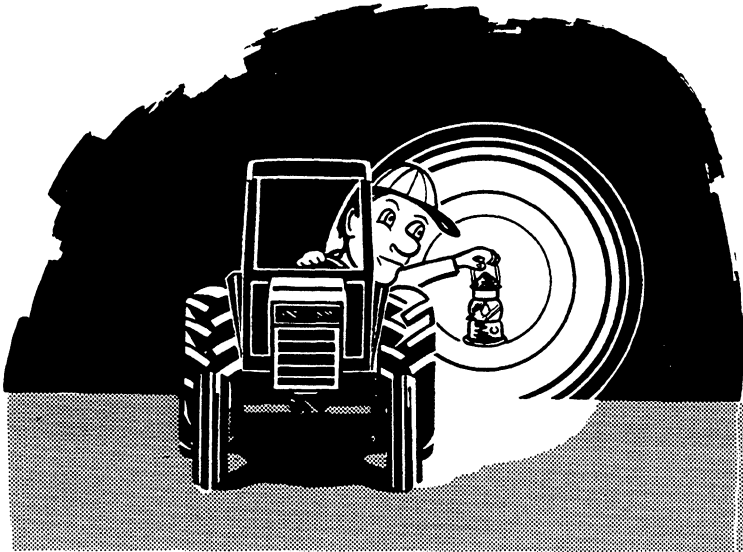


 WARNING: *Collision of high speed road traffic and tractors or implements can cause personal injury or death. On roads, use flasher/lights according to local laws. Keep SMV emblem visible.*

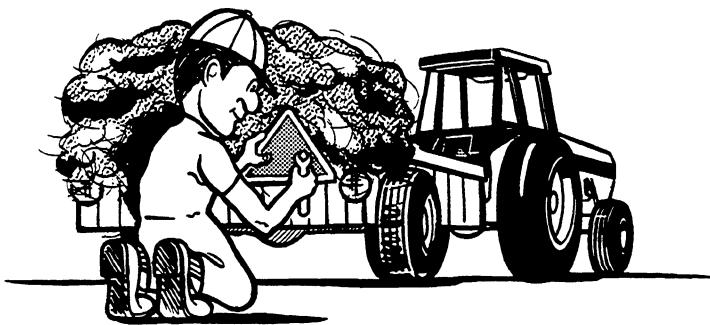




 CAUTION *Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.*

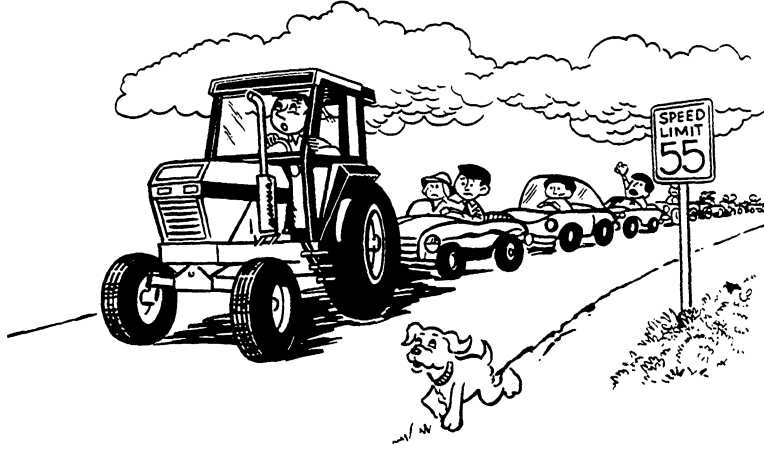


 WARNING: *Extra weight and bad traction conditions such as mud or ice increase your stopping distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*

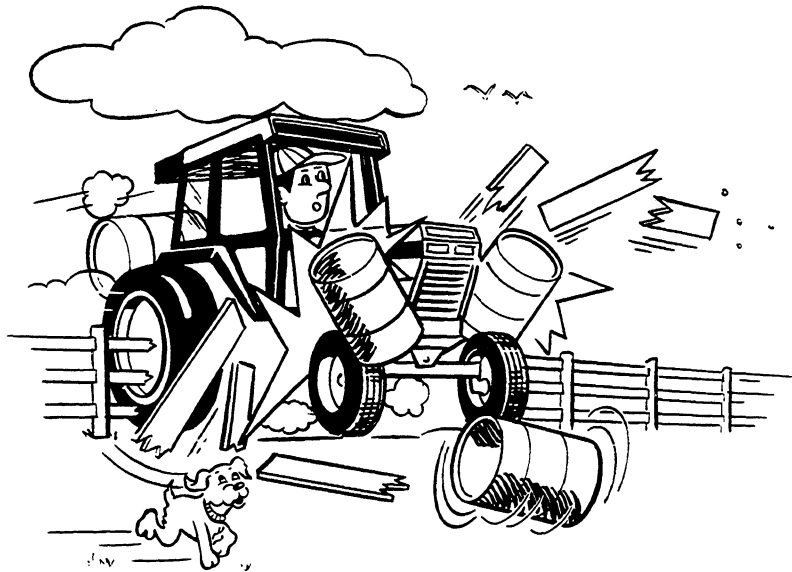




 CAUTION Make sure that the weight of a trailed vehicle that is not equipped with brakes **NEVER EXCEEDS** the weight of the tractor that is towing the vehicle. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.

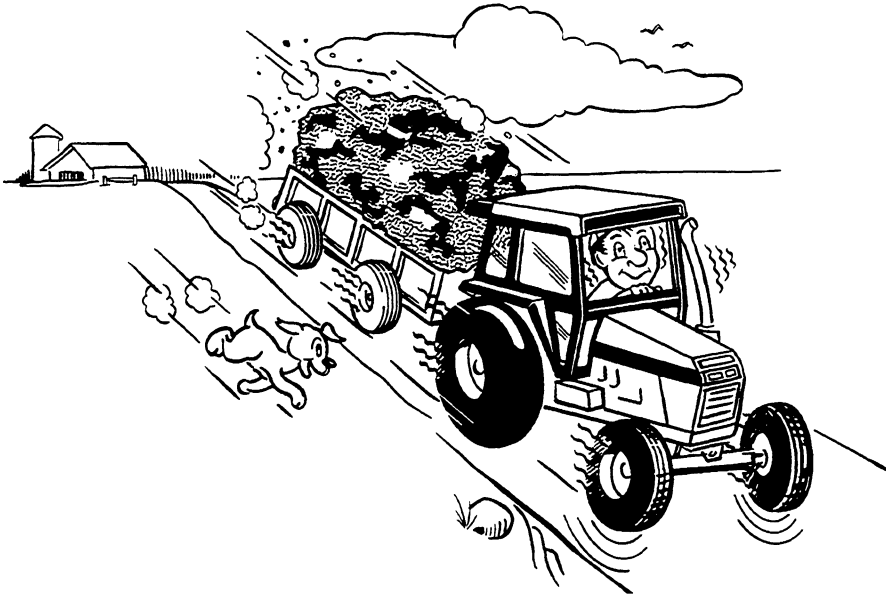

 WARNING: A frequent cause of personal injury or death is persons falling off and being run over. Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.

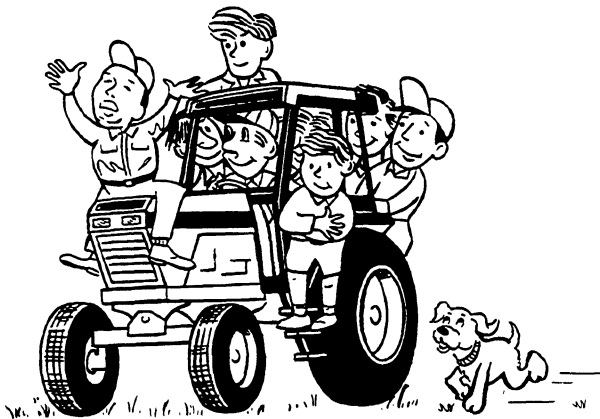

CAUTION Do not operate the tractor at high speeds or attempt to turn the tractor with the differential lock engaged.

Buy Now



Our support email:

ebooklibonline@outlook.com