

 
# **4994 Tractor**

## **Operators Manual**

**9-9870**

Reprinted



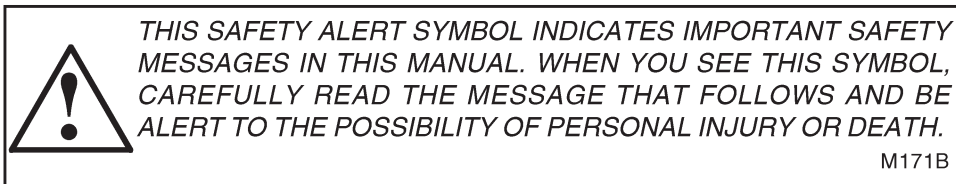




If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.

# **WARNING**

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

# TABLE OF CONTENTS

TO THE OWNER .....	III	ALTERNATOR CHARGING SYSTEM ..	32
SAFETY .....	IV-XVI	TOWING .....	32
Safety Rules .....	IV	OPERATING INSTRUCTIONS ....	33-137
Before Starting .....	IV-V	Run-In Procedure .....	33
Operation .....	VI-XIV	Before Starting the Engine .....	34
Service .....	XV-XVIII	Digital Instrument Cluster .....	35-60
HAND SIGNALS .....	XIX-XX	Programming Tire Size .....	38-40
DECALS .....	XXI-XXV	Programming Static Loaded Radius .	41
SERIAL NUMBERS .....	1	Programming Dynamic	
DIESEL ENGINE SPECIFICATIONS ...	2,3	Loaded Radius .....	42,43
GENERAL SPECIFICATIONS .....	4-7	True Ground Speed .....	44
APPROXIMATE TRACTOR SPEEDS ....	8	True Ground Speed Sensor ....	44,45
APPROXIMATE OVER ALL		Programming Attachment Width .	48,49
MEASUREMENTS .....	9	Programming Rear Wheel	
APPROXIMATE TRANSPORT WEIGHT	9	Position Monitor .....	50,51
OPERATORS CAB .....	9	Operating Service Monitors and	
TIRE AND WHEEL EQUIPMENT ....	10,11	Bar Indicators .....	52-57
WHEEL TREAD POSITIONS .....	12	Automatic Shutdown System	
TIRE PRESSURE .....	12	(If Equipped) .....	58
FUEL SPECIFICATIONS .....	13,14	English/Metric Selection .....	59
LUBRICATION .....	15-31	Instrument Cluster	
Engine Hourmeter .....	15	Functional Checks .....	60
Lubrication Chart .....	16,17	Transmission/Steering Diagnostic	
Diesel Engine .....	18	Monitor .....	61
Engine Oil Change .....	19	Transmission/Steering	
Engine Oil Cleaner .....	20-22	Diagnostic Codes .....	62-69
Turbocharger Oil Filter .....	23	Operating Controls .....	70-98
Rear Steering Valve Filter .....	24	Steering Console .....	70-74
Rear Steering Hydraulic Oil Filter ....	25	Steering Column Tilt .....	75
Transmission Oil Level		Telescopic	
Check & Change .....	26	Steering Column .....	75
Transmission Oil Filter .....	27	Operators Console .....	76-81
Hydraulic Oil Level		Park Brake Control .....	82
Check & Change .....	26	Fuel Tank Water Traps .....	83
Hydraulic Oil Filters .....	28	Cab Headliner Controls .....	84,85
Planetary Oil Level Check & Change .	29	Cab Air Flow Control .....	86
Differential Oil Level Check & Change .	30	Cab Defroster Control .....	86
Tractor Brakes .....	31	Cab Air Flow Arrangements ....	87-89
		Air Conditioner Operation .....	90
		Cab Door Lock .....	90
		Ash Tray .....	90
		Rear View Mirrors .....	91
		Cab Window Lever .....	91
		Operators Seat .....	92,93
		Seat Belts .....	94
		Amber Warning Lamps, Direction	
		Turn Signals & SMV .....	95,96
		Implement Warning Lamps and	
		SMV Symbol .....	97
		Auxiliary Outlet Socket .....	98

# TABLE OF CONTENTS

## OPERATING INSTRUCTIONS

Starting Procedure .....	99,100
Stopping The Engine .....	101
Cold Temperature Operation .....	102
Preparing Tractor For Operating in Cold Temperatures .....	103
Cold Temperature Starting .....	104-107
Ether Starting Fluid .....	104
Coolant Heater .....	106
Starting Fluid Container Replacement .....	107
Power Shift Transmission .....	108-111
Drawbar .....	112-114
Power Takeoff .....	115-117
Operating PTO .....	115
Guards .....	116
Operating Safety .....	117
Remote Hydraulic Control .....	118
Remote Control Levers .....	118,119
Variable Flow Control .....	120,121
Operating the Remote System ....	122
Hydraulic Hose Couplers .....	123
Hydraulic Hose Coupling .....	124
Remote Cylinder .....	125
Hydraulic Cylinder Jack Pads .....	126
Wheel Mounting .....	127
Dual Wheel Mounting .....	128
Tire Mounting .....	129
Loads Matched to Tractor .....	129
Tractor Ballast .....	130-136
Weight Distribution .....	130-132
Tractor and Equipment Weight ...	133
Front End Weights .....	134
Tire Liquid Weight .....	135
Measuring Slip .....	136
Hood and Side Panels .....	137

## PREVENTIVE MAINTENANCE ... 138-192

Cooling System .....	139-148
Pressure Cooling System .....	139
Coolant Solutions .....	140
Engine Cooling System Treatment .	140
Radiator Cleaning .....	141
Cooling System Service .....	142
Thermostat Check .....	143
Thermostat Replacement ....	143-145
Fan Belt Adjustment .....	146
Fan Belt Replacement .....	147
Water Filter and Conditioner (if Equipped) .....	148

## PREVENTIVE MAINTENANCE (CONT'D)

Fuel System .....	149
Service Intervals .....	149
Fuel Filter Replacement .....	150,151
Primary Fuel Filter .....	152,153
Air Removal .....	154,155
Air Induction System .....	156-164
Air Filter Service Interval .....	157
Air Filter Service .....	158-161
Aspirated Strata Tube Service .	162,163
Tubes and Hose .....	164
Electrical System .....	165-168
Head Lamps .....	165
Flood Lamps .....	165
Flashing Amber Warning Lamps ..	166
Tail Lamp .....	166
Instrument Cluster Lamps .....	167
Fuse Panel .....	167
Head Lamp Adjustment .....	168
Storage Battery .....	169-171
When Batteries Are Not in Use ...	169
Battery Cables and Terminals ....	169
Battery Water .....	170
Vent Caps .....	170
Removal & Installation of Batteries .	170
Auxiliary Battery Connections ....	171
Parking Brake Adjustment .....	172
Roll Over Protective Structure (ROPS) .....	173,175
Tractor Roll Over .....	174
Safety Rules .....	174
Maintenance and Inspection ....	175
Operators Cab .....	176-189
Preventive Maintenance .....	176,177
Air Filter Service .....	178-180
Seat Belt Inspection and Maintenance .....	180
Operators Seat .....	181,182
Refrigerant Check .....	183,184
Compressor Belt Adjustment .....	185
Compressor Belt Replacement ...	186
Compressor Belt Alignment .....	187
Dome Lamp .....	188
Console Lamp .....	189
Valve Tappet Adjustment .....	190-192

## CASE TECHNICAL MANUALS ..... 193

# TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can assist you with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

*Your Authorized Case Dealer*



**Figure 1**

**NOTE:** When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.

# SAFETY

## Safety Rules

Your safety and the safety of other persons is measured by how you service, and operate this machine. Before you start to operate this machine, know the position and operation of all controls. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

**READ THIS MANUAL COMPLETELY** and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.

## Before Starting



**CAUTION:** *To help prevent personal injuries during tractor operation and maintenance, use safety shoes, a hard hat, safety glasses or goggles and good fitting clothing.*



**CAUTION** *Provide a first aid kit for use in case of accident.*



**CAUTION** *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



**WARNING** Before starting engine study Operator's Manual safety messages.

 
Read all safety signs on machine.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.

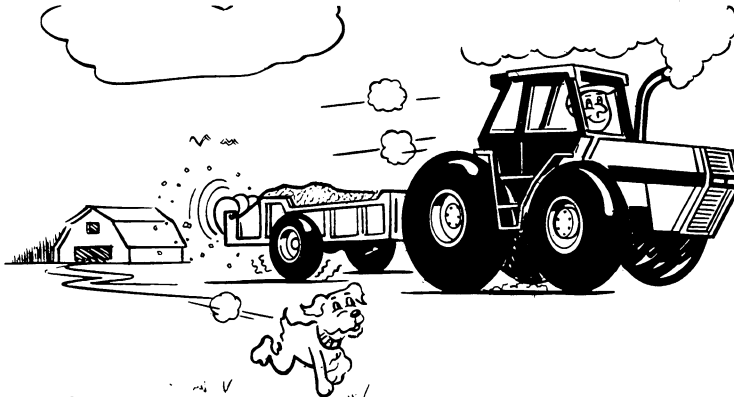

**WARNING:** If the steering mode selector switch is turned to another mode position while the tractor is not in operation, the rear wheels can move when the tractor is started again. To prevent possible injury from the rear tires moving, make sure no person is between the rear tires and tractor frame before you start the tractor engine.



**WARNING** Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operator's seat.

On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.

Before leaving tractor unattended, lower hydraulically lifted equipment to ground.



**WARNING** Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.

## Operation



**WARNING:** *Engine can start with transmission in gear when neutral safety switch is by-passed:*

- 1. Do not connect across terminals on starter.*
- 2. Attach booster batteries according to safe method in Operators Manual. Then use recommended starting procedure from operators seat.*
- 3. When necessary, repair electrical system components promptly so that "jump starting" will not be attempted.*

*Machine run-away can cause injury or death to operator and bystanders.*

 


**CAUTION:** *The cab air filter does not remove chemicals or fumes. When you use agricultural chemicals, follow the instructions given by the chemical manufacturer.*



**CAUTION:** *When remote cylinders are connected to the hydraulic system, cycle the control lever about three times to remove air from the cylinder and hoses. With air in the system raised equipment can drop accidentally and cause personal injury or machine damage.*



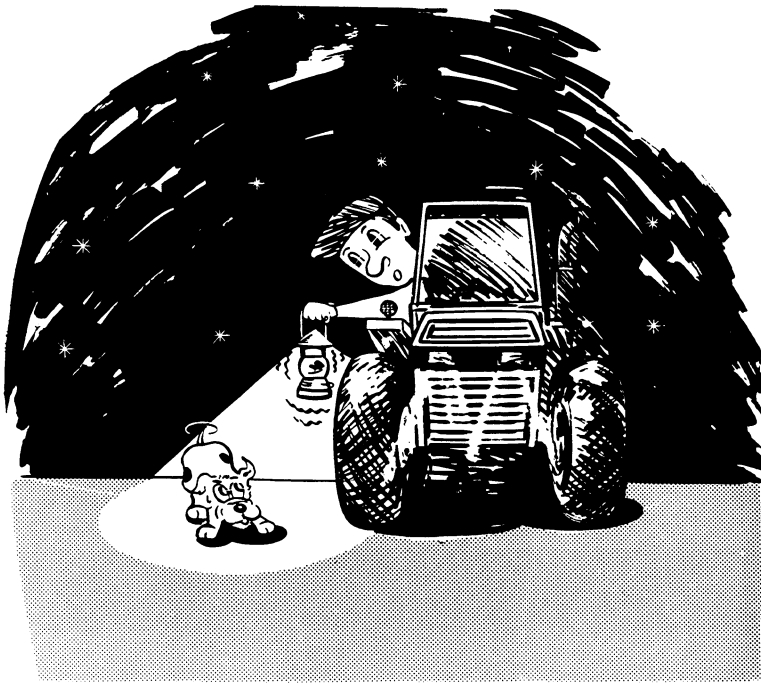


**WARNING:** Collision of high speed road traffic and tractors or implements can cause personal injury or death. On roads, use flasher/lights according to local laws. Keep SMV emblem visible.



**WARNING** On roads, use flasher/lights according to local laws. Keep SMV emblem visible.



 **CAUTION** *Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.*

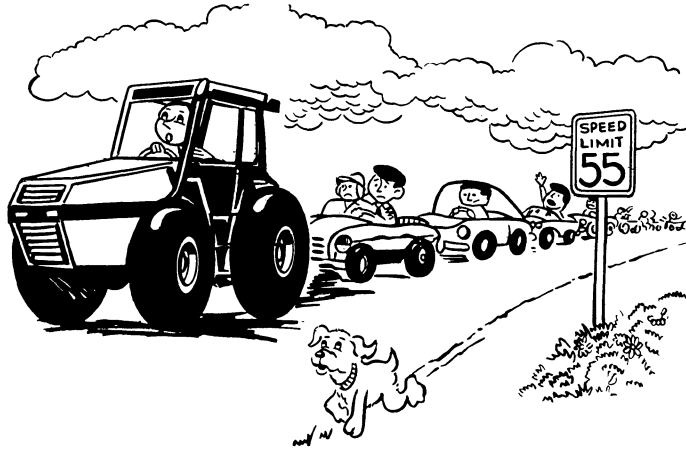


**CAUTION:** *During road transport use front steering only.*




**WARNING:** *Extra weight and bad traction conditions such as mud or ice increase your stopping distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*



 **CAUTION** Make sure that the weight of a trailed vehicle that is not equipped with brakes. **NEVER EXCEEDS** the weight of the tractor that is towing the vehicle. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.

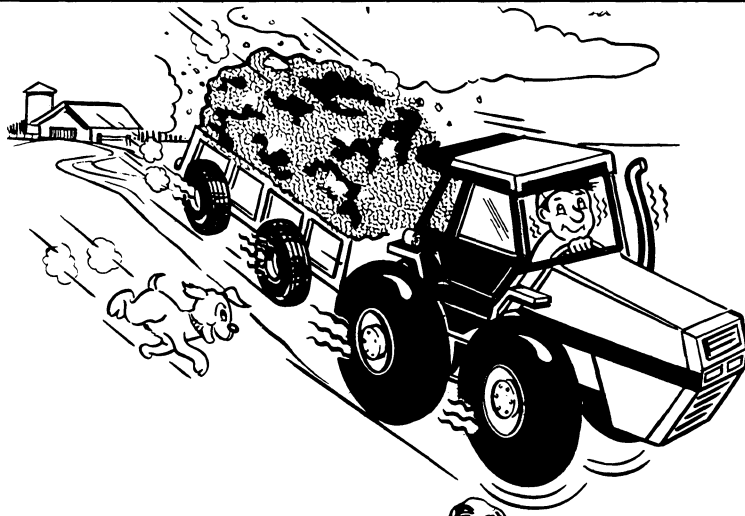

 
**WARNING:** A frequent cause of personal injury or death is persons falling off and being run over. Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.

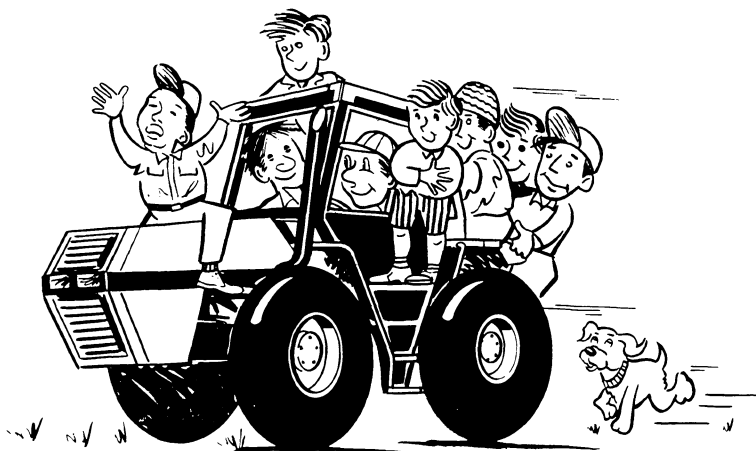

**WARNING:** Incorrect positioning of adjustable length drawbar can cause implement driveline separation or bottoming. See tractor and implement Operators Manuals for dimension from end of tractor PTO shaft to hitch pin hole in drawbar. Driveline separation or bottoming can cause machine damage or personal injury.



 **WARNING** *Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".*

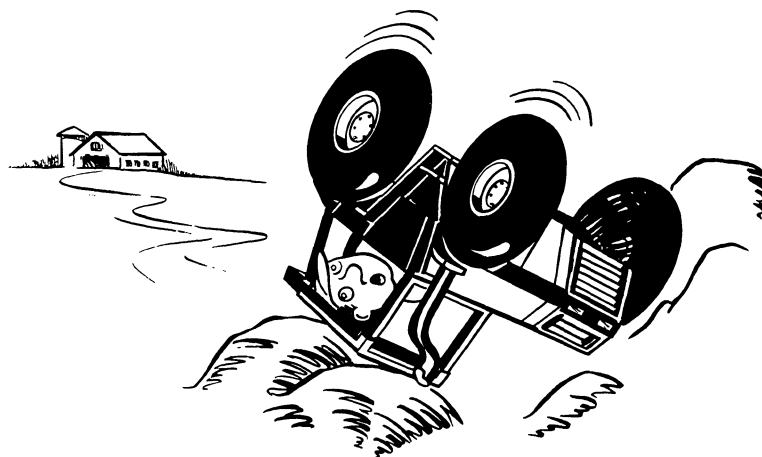

**WARNING:** *Securely fasten your seat belt as this tractor is equipped with a ROPS cab. The seat belts can help insure your safety if they are used and maintained.*



**CAUTION** *Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.*



**WARNING** *Rotating machine parts, stay clear, keep shields installed to help protect from clothing entanglement and injury. Wear close-fitted clothing.*



**WARNING** *Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.*



**WARNING** *Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use 3 point hitch only with the implements designed for its use - not as a drawbar.*



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)