



E0389 0102A010A 1

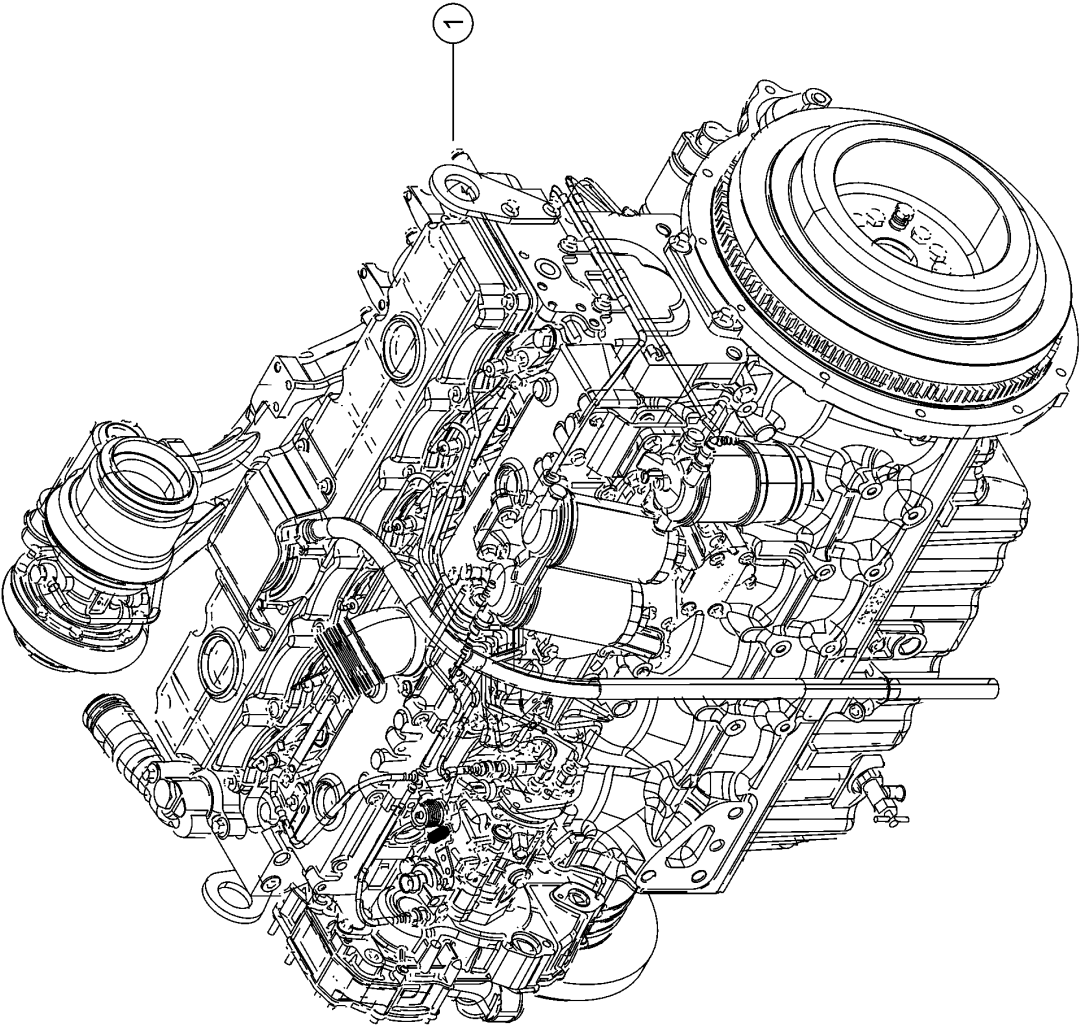

010 COMPLETE ENGINE

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0773 580 0	ENGINE	1106D-70TA 112KW	1	

E0389 0105A100A 1

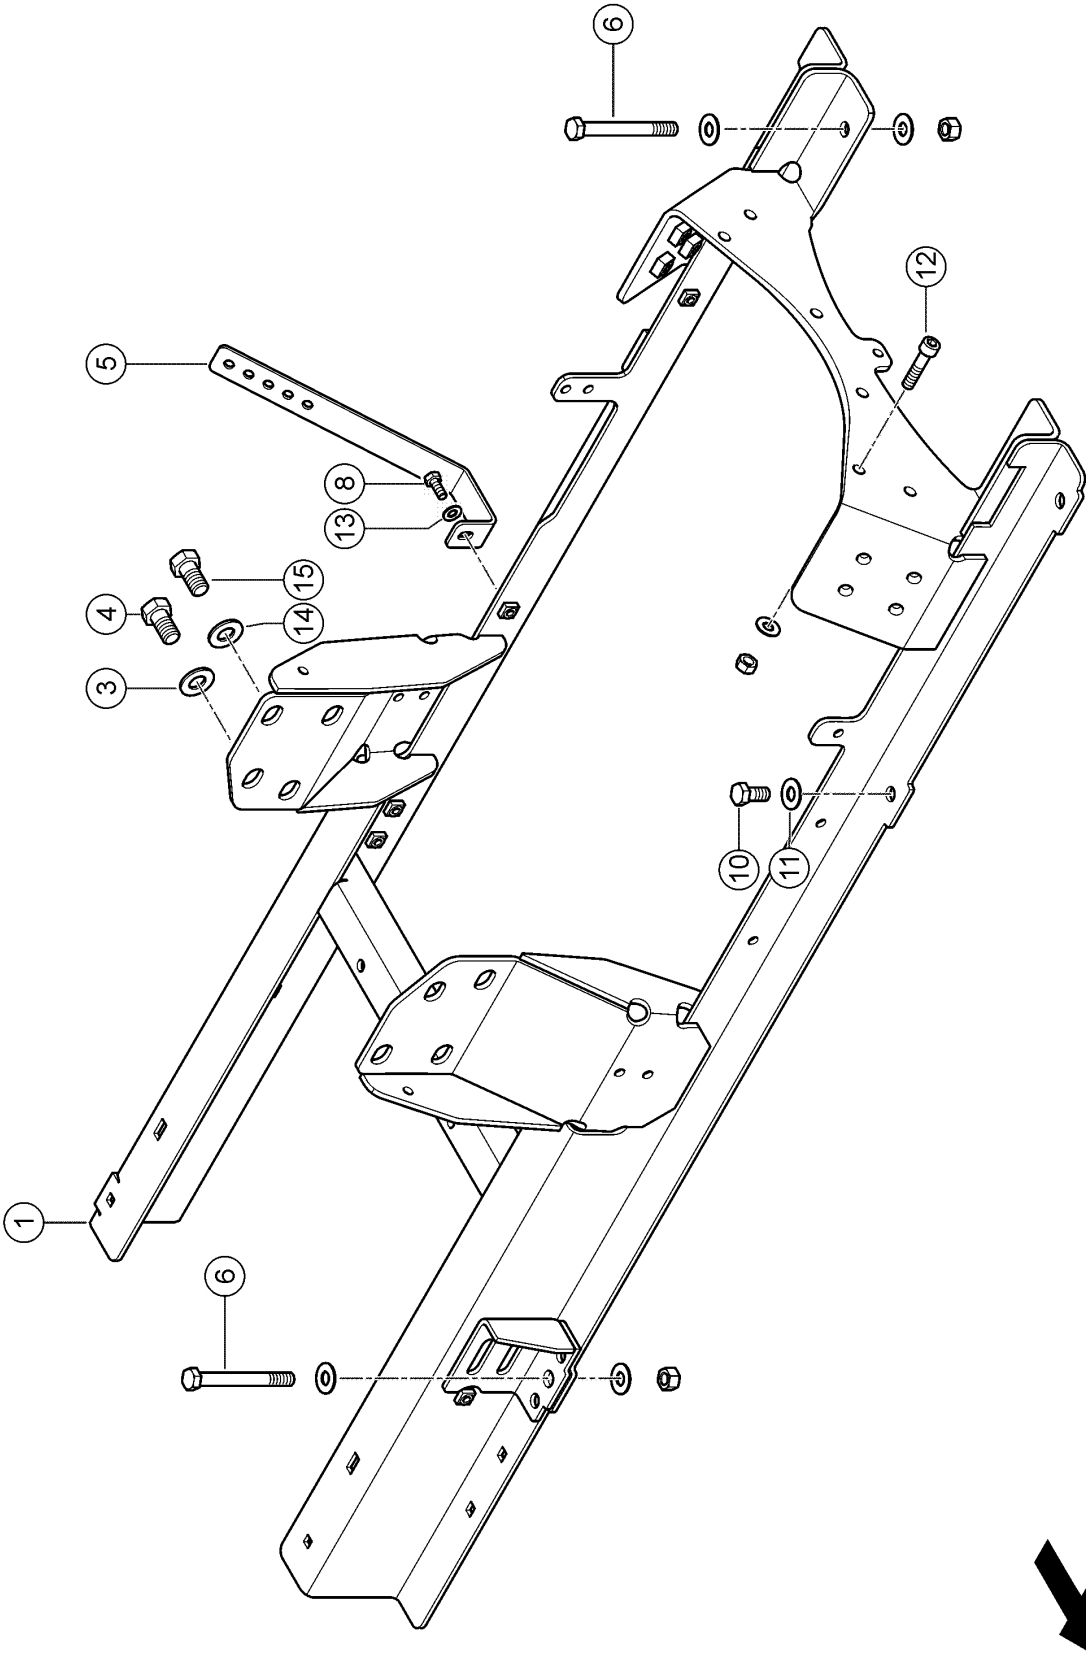

100 ENGINE SUSPENSION

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0781 702 3	ENGINE MOUNTING		1	
3	00 0239 391 0	CONTACT WASHER	A16	4	
4	00 0237 376 0	HEXAGON HEAD BOLT	M16X30	4	
5	00 0781 740 1	SUPPORT	4X30X354,9	3	
6	00 0217 205 0	HEXAGON HEAD BOLT	M12X100-MKL	5	
6	00 0239 389 0	CONTACT WASHER	A12	10	
6	00 0244 144 0	HEXAGONAL NUT	M12	5	
8	00 0236 200 0	HEXAGON HEAD BOLT	M8X20	3	
10	00 0236 056 0	HEXAGON HEAD BOLT	M12X25	2	
11	00 0239 389 0	CONTACT WASHER	A12	2	
12	00 0242 243 0	SOCKET HEAD SCREW	M10X45	4	
12	00 0239 388 0	CONTACT WASHER	A10-10,2X22,25X1,6	4	
12	00 0236 171 0	HEXAGONAL NUT	M10	4	
13	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	3	
14	00 0239 391 0	CONTACT WASHER	A16	2	1)
15	00 0237 376 0	HEXAGON HEAD BOLT	M16X30	2	2)

1) Equipment

MD_P02_0125

1106D-M R120/112 kW T3, Perkins

2) Equipment


MD_Q02_0010

Cab with ventilation system

MD_Q02_0030

Guard rail


PK3460818

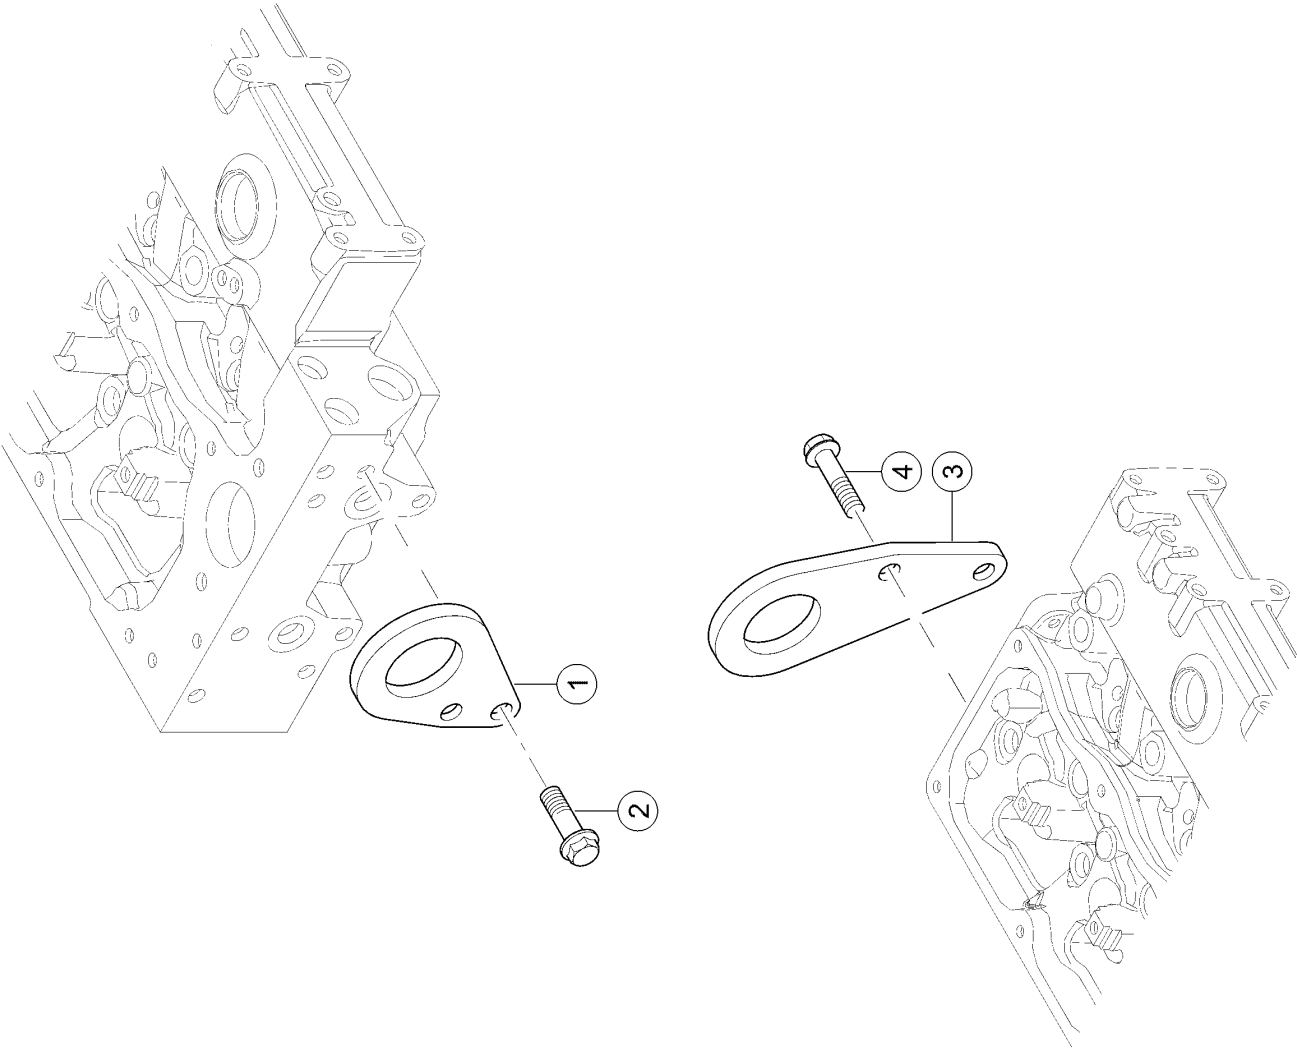

100 ENGINE SUSPENSION

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1996 957 0	SUSPENSION		1	1)
2	00 1996 843 0	SCREW		2	1)
3	00 1996 958 0	SUSPENSION		1	1)
4	00 1996 843 0	SCREW		2	1)
1)	Equipment				
		MD_P02_0125	1106D-M R120/112 kW T3, Perkins		
		MD_P02_0126	1106C-M R120/129KW T2		


PK3483283A

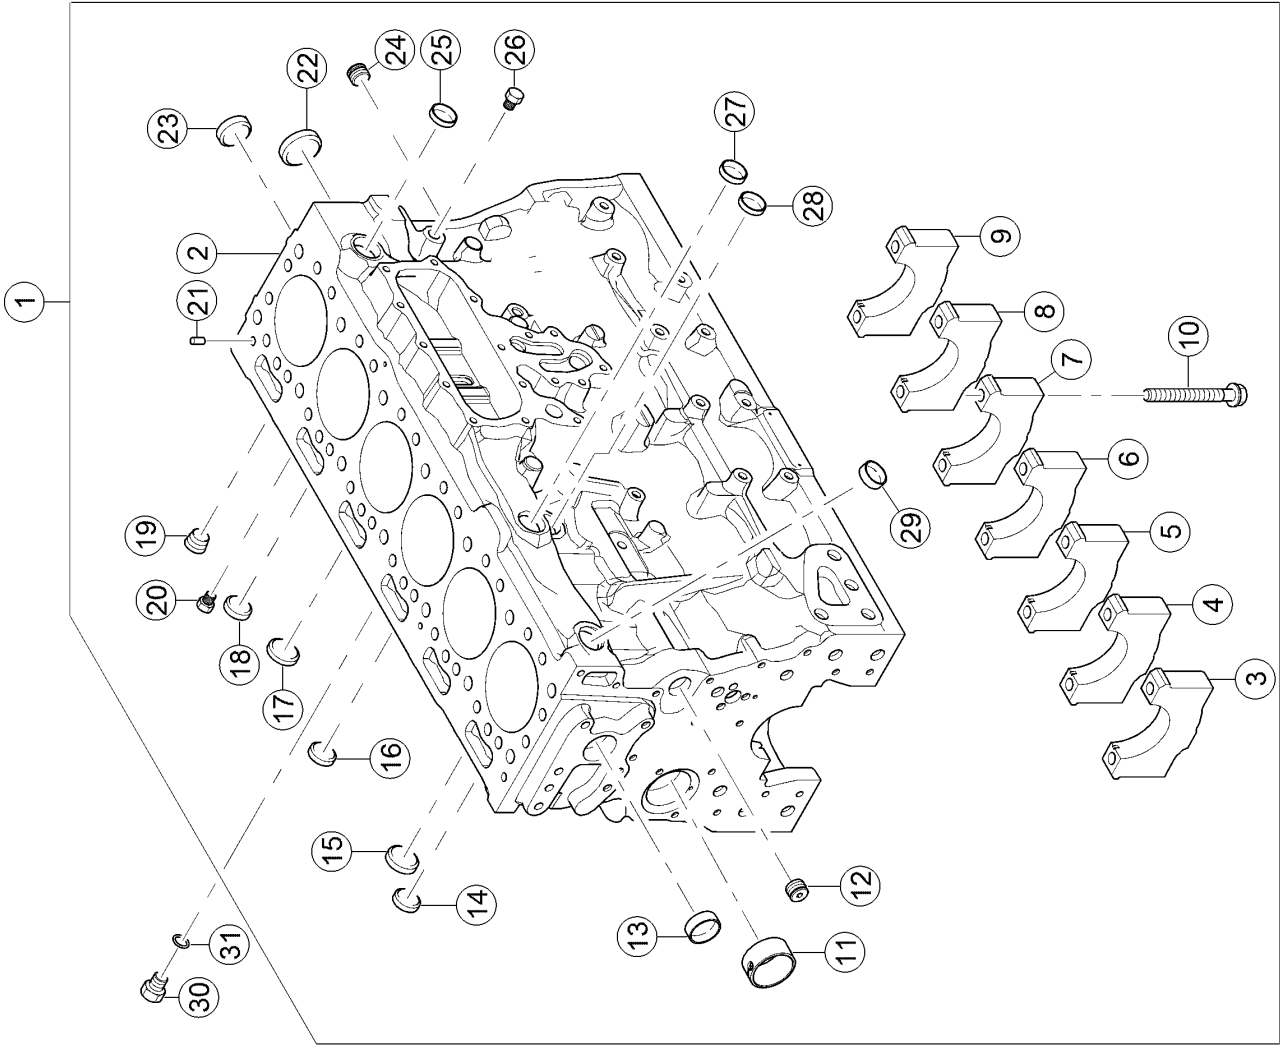

100 CRANKCASE 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
10	00 1996 933 0	SCREW		14	
11	00 1997 189 0	BUSHING		1	
12	00 1136 980 0	PLUG		1	
13	00 1996 897 0	PLUG		1	
14	01 2268 100 0	PLUG		1	
15	00 1136 994 0	PLUG		1	
16	01 2268 100 0	PLUG		1	
17	00 1136 994 0	PLUG		1	
18	01 2268 100 0	PLUG		1	
19	01 2261 970 0	PLUG		1	
20	00 1136 995 0	PLUG		1	
21	00 1136 993 0	LOCATING PIN		2	
22	00 1996 897 0	PLUG		1	
23	00 1136 979 0	PLUG		1	
24	00 1136 980 0	PLUG		1	
25	01 2268 100 0	PLUG		1	
26	00 1136 995 0	PLUG		1	
27	01 2268 100 0	PLUG		1	
28	01 2268 100 0	PLUG		1	
29	01 2268 100 0	PLUG		1	
30	00 1137 100 0	PLUG		1	
31	00 1996 880 0	O-RING		1	
1)	Equipment				
		MD_P02_0125	1106D-M R120/112 kW T3, Perkins		
		MD_P02_0126	1106C-M R120/129KW T2		


PK3483283B

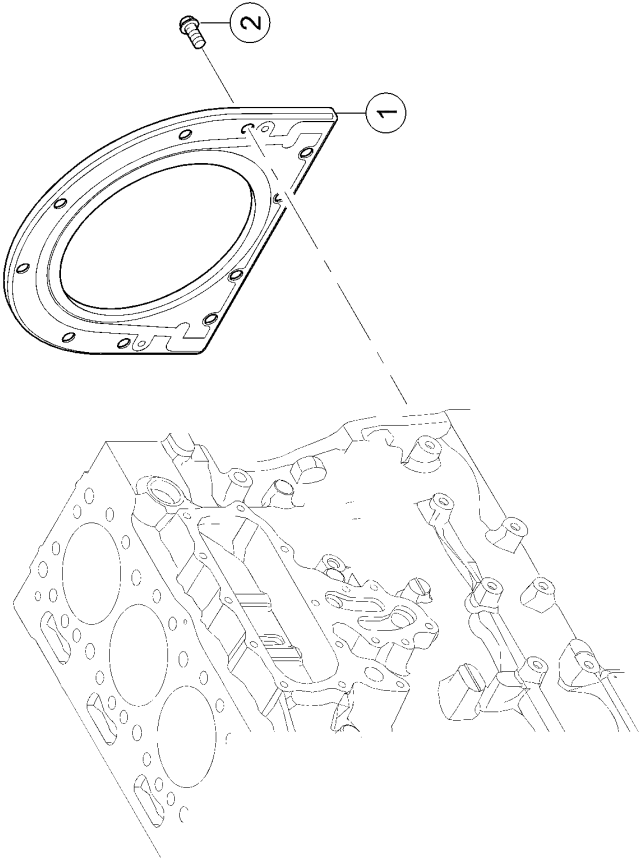

100 CRANKCASE 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1137 071 0	SEALING RING		1	
2	00 1137 072 0	SCREW		10	
1) Equipment					
		MD_P02_0125	1106D-M R120/112 kW T3, Perkins		
		MD_P02_0126	1106C-M R120/129KW T2		

PK4250779

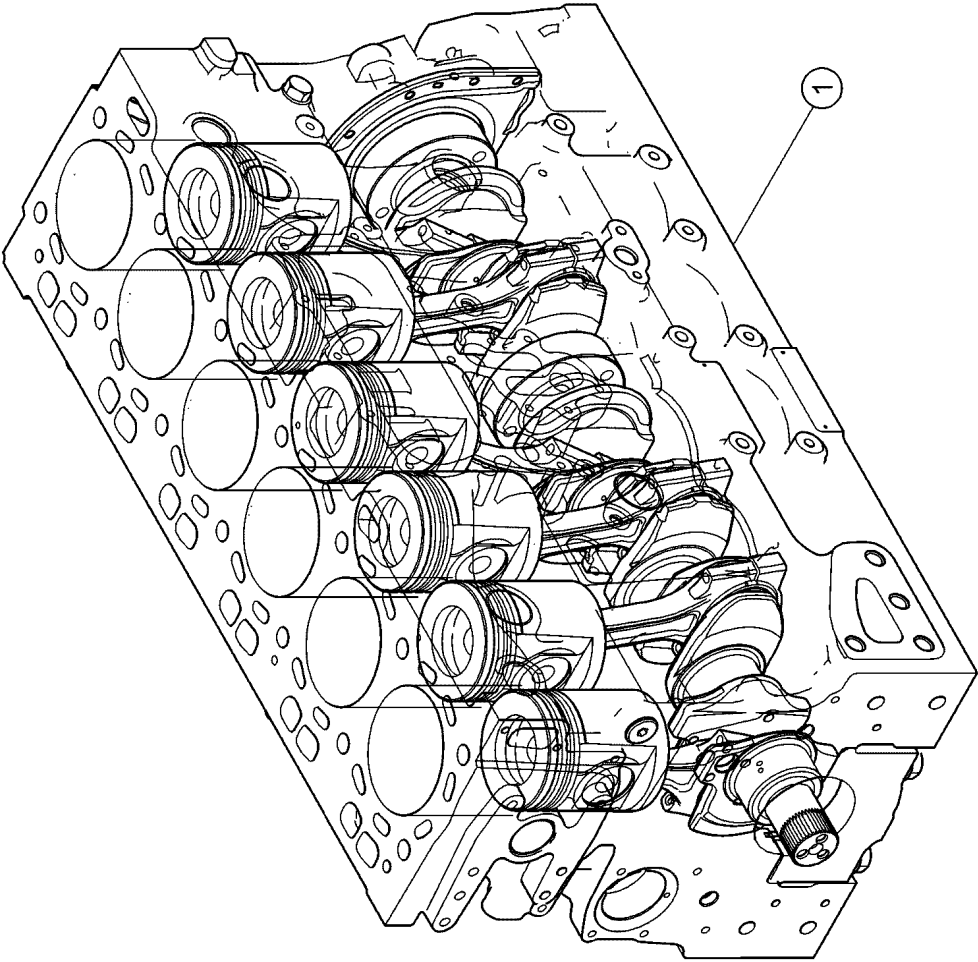


100 CRANKCASE 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1987 417 0	ENGINE BLOCK	SHORT ENGINE	1	2)
2	00 1987 418 0	CYLINDER BLOCK		1	
3	00 1137 071 0	SEALING RING		1	
4	00 1137 072 0	SCREW		10	
5	00 1997 252 0	CRANKSHAFT		1	
6	00 1984 821 0	BEARING SHELL	STANDARD	1	3)
6	00 1984 819 0	BEARING SHELL	(-)0,762MM	1	3)
6	00 1984 820 0	BEARING SHELL	(-)0,508MM	1	3)
6	00 1984 822 0	BEARING SHELL	(-)0,254MM	1	3)
7	00 1997 165 0	THRUST WASHER		2	
8	00 1996 916 0	GEAR		1	
9	77 0103 158 4	WOODRUFF KEY		1	
10	00 1997 026 0	PIPE		6	
11	00 1136 983 0	SCREW		6	
12	00 1987 428 0	PISTON RING SET	STANDARD	6	
12	00 1987 429 0	PISTON RING SET	OVERSIZE +0,5MM	6	
12	00 1987 430 0	PISTON RING SET	OVERSIZE +1,0MM	6	
13	00 1984 792 0	CONNECTING ROD	GRADE: G	6	4)
13	00 1984 793 0	CONNECTING ROD	GRADE: R	6	5)
13	00 1997 055 0	CONNECTING ROD	GRADE: B	6	6)
14	00 1984 811 0	BEARING SHELL	STANDARD	1	3)
14	00 1984 837 0	BEARING SHELL	(-)0,762MM	1	3)
14	00 1984 838 0	BEARING SHELL	(-)0,508MM	1	3)
14	00 1984 839 0	BEARING SHELL	(-)0,254MM	1	3)
15	00 1137 045 0	BRACE		1	
16	00 1137 044 0	SCREW		2	

1)	Equipment	MD_P02_0126	1106C-M R120/129KW T2
2)	Remarks	with Item 2 - 16	
3)	Remarks	set	
4)	Remarks	green	
5)	Remarks	red	
6)	Remarks	blue	


PK3460012B

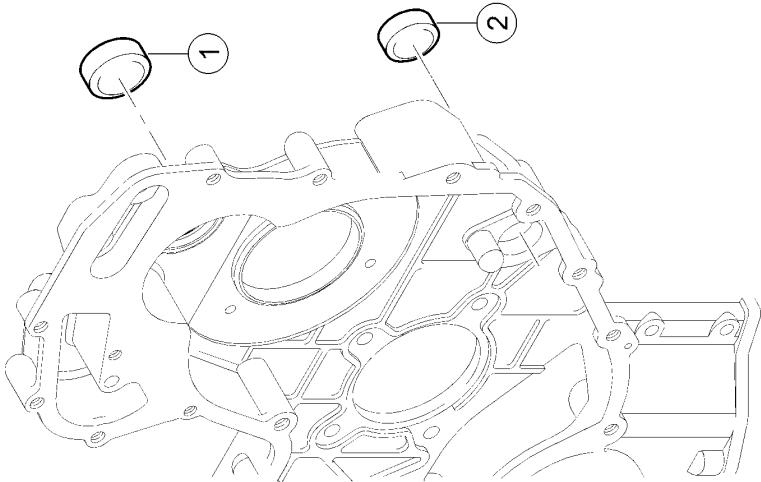

120 TIMING CASE 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1996 891 0	PLUG		1	
2	00 1137 003 0	PLUG		1	
1)	Equipment				
		MD_P02_0125	1106D-M R120/112 kW T3, Perkins		
		MD_P02_0126	1106C-M R120/129KW T2		

PK3460495A

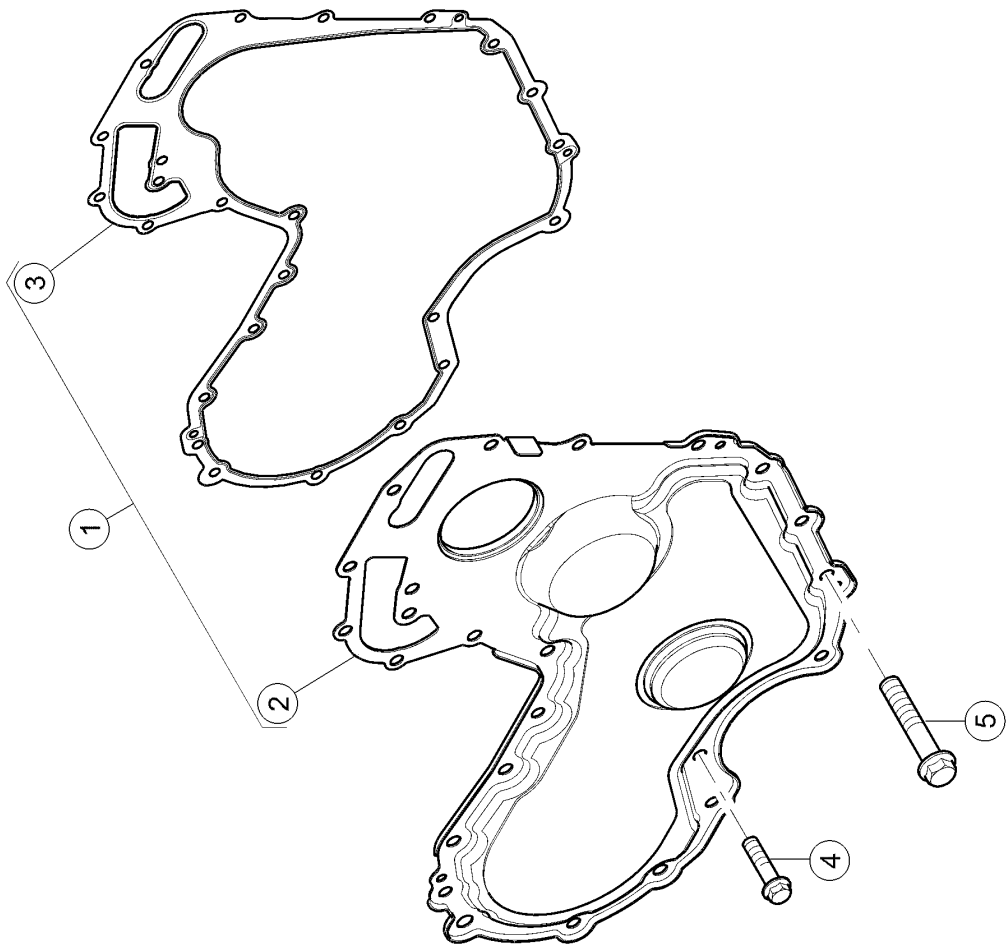

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com