



Service Repair Manual

Models

12M Motor Grader

Product: MOTOR GRADER

Model: 12M MOTOR GRADER B92

Configuration: 12M Motor Grader B9200001-UP (MACHINE) POWERED BY C7.2 Engine

Disassembly and Assembly 12M Motor Grader Power Train

Media Number -UENR3472-02

Publication Date -01/08/2012

Date Updated -29/10/2018

i05000357

Transmission - Disassemble

SMCS - 3030-015; 3159-015; 3176-015

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7575	Link Bracket	3
B	308-3470	Jack Stand Gp	3
C	1U-9202	Lever Puller Hoist Gp	1
D	1P-1863	Retaining Ring Pliers	1
E	308-3470	Jack Stand Gp	2
F	140-7742	Sleeve	1
G	154-6181	Forcing Screw	2
H	FT-2769	Table	1
J	4C-8156	Lifting Fixture	1
K	1U-6410	Three Jaw Puller	1
	1P-0510	Driver Gp	1
L	9U-7480	Compressing Tube	1
	5C-7201	Nut	1
	8T-4224	Hard Washer	1
	-		1

		Bolt M10 - 1.5 by 460mm	
M	8B-7548	Push-Puller Tool Gp	1
N	2P-8312	Retaining Ring Pliers	1
P	1P-2321	Combination Puller	1
	1P-0510	Driver Gp	1
R	189-0408	Shackle As	1
	3E-3882	Eyebolt	1
S	126-7175	Push-Puller Tool Gp	1
	4C-5653	Threaded Adapter	1
	1P-0510	Driver Gp	1

Start By:

- a. Remove the transmission.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.

Dispose of all fluids according to local regulations and mandates.

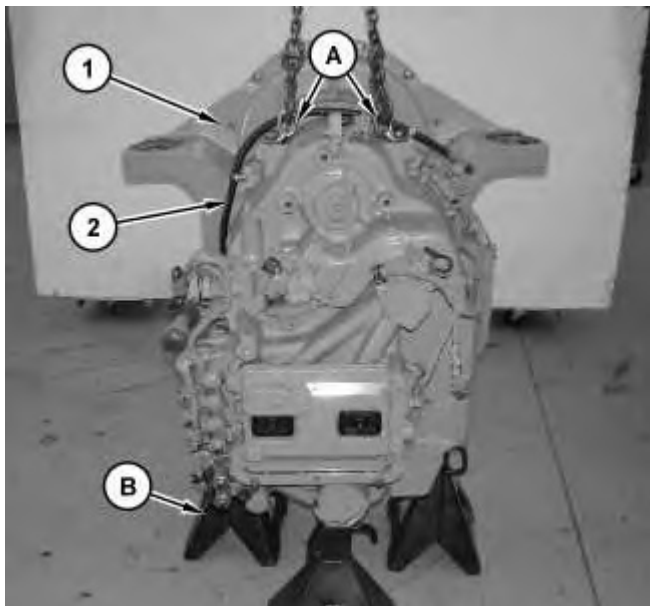


Illustration 1

g01386565


1. Attach Tooling (A) and a suitable lifting device to transmission (1). The weight of transmission (1) is approximately 862 kg (1900 lb). Use Tooling (A) and the suitable lifting device in order to position transmission (1) onto Tooling (B). Remove hose assembly (2).




Illustration 2

g01386568


2. Remove bolts (3) in order to remove control module (4) and spacers (5).

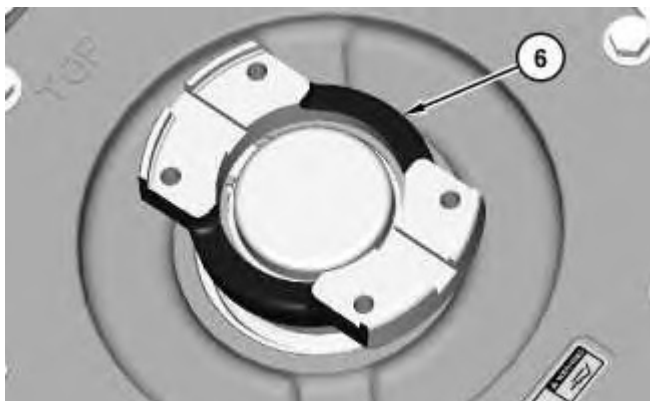

3. Remove yoke assembly (6).

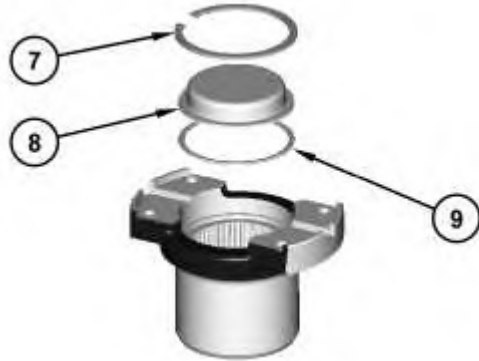

4. Remove retaining ring (7).
5. Remove cup (8). Remove O-ring seal (9).

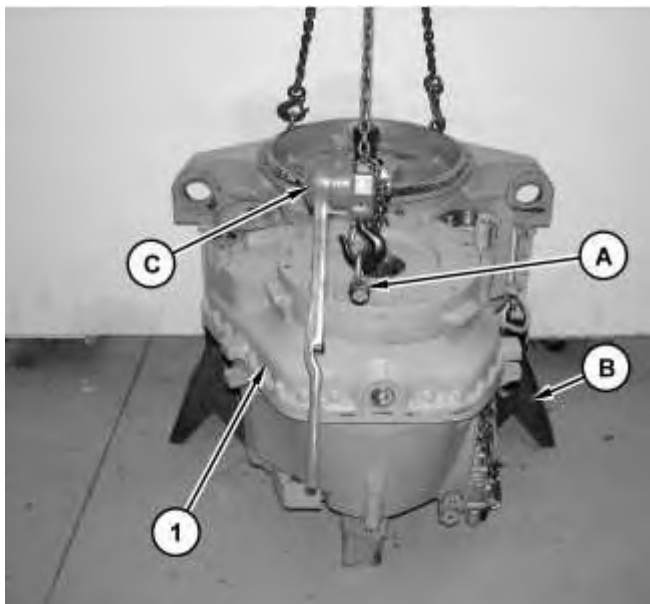

6. Attach Tooling (A), Tooling (C), and a suitable lifting device to transmission (1). Use Tooling (A), Tooling C, and () the suitable lifting device in order to position transmission (1) onto Tooling (B) and suitable cribbing. Position transmission (1) with the output shaft upward.
-

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com