CATERPILLAR®

Service Repair Manual

Models

14L Motor Grader

Product: MOTOR GRADER
Model: 14L MOTOR GRADER B94
Configuration: 14L Motor Grader - All Wheel Drive B9400001-UP (MACHINE) POWERED BY C9 Engine

Disassembly and Assembly 14L Motor Grader Machine Systems Media Number -UENR4606-01 Pul

Publication Date -01/04/2015

Date Updated -02/04/2015

i02649334

Piston Pump (Hydraulic and Steering) - Disassemble

SMCS - 4306-015; 5070-015

Disassembly Procedure

Table 1			
Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-0510	Driver Gp	1
В	1P-1857	Retaining Ring Pliers	1
С	1P-1861	Retaining Ring Pliers	1

Start By:

a. Remove the piston pump. Refer to Disassembly and Assembly, "Piston Pump (Hydraulic and Steering) - Remove".

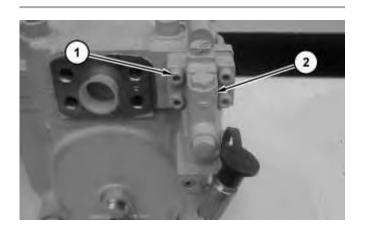


Illustration 1

1. Remove bolts (1) and valve (2).

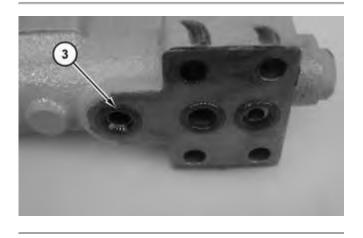


Illustration 2

g01329900

2. Remove O-ring seals (3).

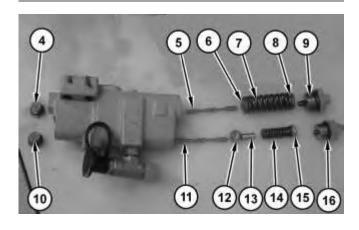


Illustration 3

g01329901

A WARNING

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

^{3.} Remove plug (9), the O-ring seal, retainer (8), spring (7), retainer (6), spool (5), plug (4), and the O-ring seal.

4. Remove plug (16), the O-ring seal, retainer (15), spring (14), rod (13), retainer (12), spool (11), plug (10), and the O-ring seal.

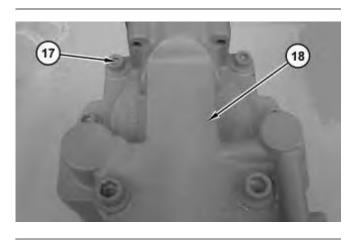


Illustration 4

g01329902



Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

5. Remove bolts (17) and head (18).

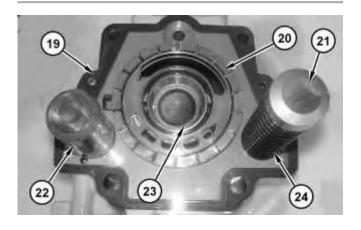


Illustration 5

g01329908

6. Remove piston (22), piston (21), spring (24), gasket (19), port plate (20), and bearing cup (23).



Illustration 6

g01329909

7. Remove bearing cone (25).

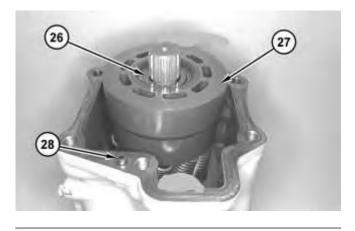



Illustration 7

Illustration 8

g01329910

g01329911

8. Remove shim (26), barrel (27), and dowel (28).

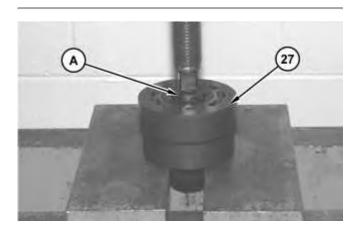

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com