CATERPILLAR®

Service Repair Manual

Models

312 EXCAVATOR

Model: 312-A EXCAVATOR 6BL

Configuration: 312 Excavator 6BL00001-UP (MACHINE) POWERED BY 3054 Engine

Disassembly and Assembly 3054 Engine for Caterpillar Built Machines

Media Number -SENR6241-13

Publication Date -01/08/2008

Date Updated -04/08/2008

i01745933

Lifter Group - Remove and Install

SMCS - 1209-010

Removal Procedure

Table 1

Required Tools				
Tool	Part Number	Part Description	Qty	
A	1U-7262	Telescoping Magnet	1	

Start By:

a. Remove the camshaft. Refer to Disassembly and Assembly, "Camshaft - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

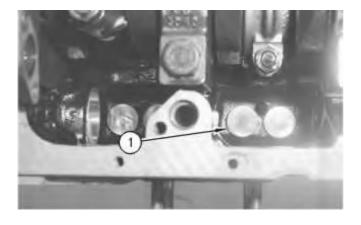


Illustration 1 g00540954

1. Use Tooling (A) to remove lifters (1).

Note: Ensure that the lifters are marked with the appropriate cylinder number for installation purposes.

Installation Procedure

Table 2

Required Tools				
Tool	Part Number	Part Description	Qty	
A	1U-7262	Telescoping Magnet	1	

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

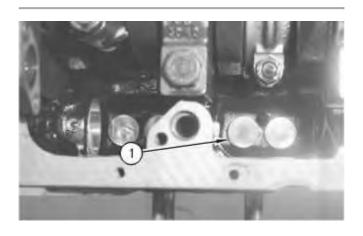


Illustration 2 g00540954

1. Use Tooling (A) to install lifters (1).

Note: Ensure that the lifters are seated correctly and that the lifters are in the correct cylinders.

End By:

a. Install the camshaft. Refer to Disassembly and Assembly, "Camshaft - Remove and Install".

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Sat Jul 4 21:01:31 UTC+0800 2020

Model: 312-A EXCAVATOR 6BL

Configuration: 312 Excavator 6BL00001-UP (MACHINE) POWERED BY 3054 Engine

Disassembly and Assembly3054 Engine for Caterpillar Built Machines

Media Number -SENR6241-13

Publication Date -01/08/2008

Date Updated -04/08/2008

i01164529

Camshaft - Remove and Install

SMCS - 1210-010

Removal Procedure

Start By:

- A. Remove the rocker shaft and the pushrods. Refer to Disassembly and Assembly, "Rocker Shaft and Pushrods Remove".
- B. Remove the fuel transfer pump. Refer to Disassembly and Assembly, "Fuel Transfer Pump Remove".
- C. Remove the front housing. Refer to Disassembly and Assembly, "Housing (Front) Remove".
- D. Remove the camshaft gear. Refer to Disassembly and Assembly, "Camshaft Gear Remove and Install".

NOTICE Keep all parts clean from contaminants. Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com