CATERPILLAR®

Service Repair Manual

Models

313F and 313F L Excavator

Product: EXCAVATOR
Model: 313F EXCAVATOR NLG
Configuration: 313F & 313F L Excavators NLG00001-UP (MACHINE) POWERED BY C4.4 Engine

Disassembly and Assembly

C4.4 Engines for Caterpillar Built Machines

Media Number -UENR4516-11

Publication Date -01/06/2015

Date Updated -29/10/2018

i05820291

Idler Gear - Install

SMCS - 1206-012

Installation Procedure

Table 1

| Required Tools | | | |
|------------------|-------------|-------------------------------------|-----|
| Tool | Part Number | Part Description | Qty |
| A ⁽¹⁾ | 9U-6198 | Crankshaft Turning Tool | 1 |
| A ⁽²⁾ | 5P-7306 | Housing | 1 |
| | 5P-7305 | Engine Turning Tool | 1 |
| В | 364-9107 | Timing Pin (Fuel Injection Pump) | 1 |
| С | 230-6284 | Timing Pin (Camshaft) | 1 |
| D | 136-4632 | Timing Pin (Crankshaft) | 1 |
| | 268-1966 | Adapter | 1 |
| E | 298-5564 | T40 Torx Socket | 1 |
| F | 9U-7324 | Indicator Bracket | 1 |
| | 7H-1942 | Dial Indicator | 1 |
| | 38-3268 | Indicator Contact Point | 1 |
| | 7H-1940 | Universal Attachment | 1 |

⁽¹⁾ The Crankshaft Turning Tool is used on the front pulley.

⁽²⁾ This Tool is used in the aperture for the electric starting motor.

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Ensure that number one piston is at top dead center on the compression stroke. Refer to System Operation, Testing and Adjusting, "Finding Top Center for No. 1 Piston" for the correct procedure.


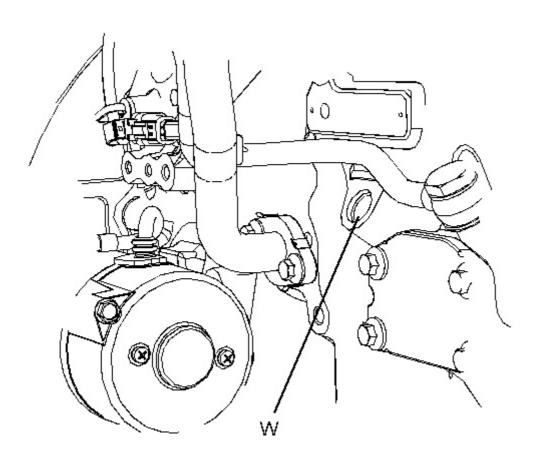


Illustration 1

g02491276

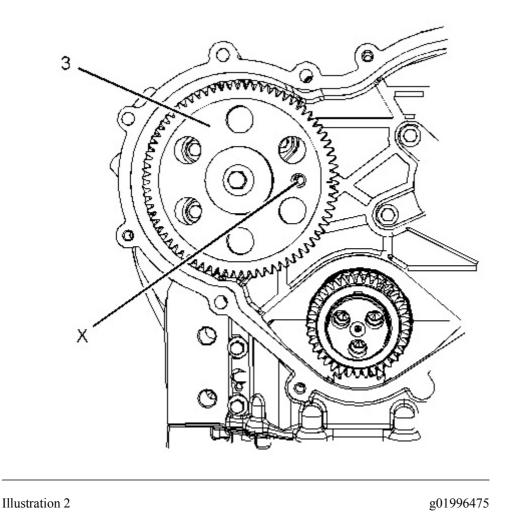

- 2. Ensure that Tooling (D) is installed in Hole (W) in the cylinder block. Use Tooling (D) in order to lock the crankshaft in the correct Position. Refer to System Operation, Testing and Adjusting, "Finding Top Center Position for No.1 Piston" for the correct procedure.
- 3. Ensure that Tooling (C) is installed into Hole (X) in camshaft gear (3).
- 4. Use Tooling (B) in order to lock the fuel injection pump gear in the correct position. Refer to Disassembly and Assembly, "Fuel Injection Pump Remove" for the correct procedure.

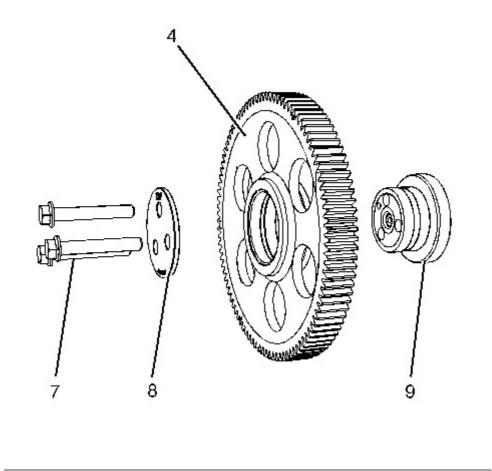


Illustration 3

g01996477

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com