CATERPILLAR®

Service Repair Manual

Models

325C FM EXCAVATOR

Product: EXCAVATOR
Model: 325C FM EXCAVATOR M2K
Configuration: 325C FOREST SWING MACHINES M2K00001-UP (MACHINE) POWERED BY 3126B Engine

Disassembly and Assembly

3126B Engines for Caterpillar Built Machines

Media Number -SENR9581-06 P

Publication Date -01/08/2018

Date Updated -17/08/2018

i01196611

Camshaft - Install

SMCS - 1210-012

Installation Procedure

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

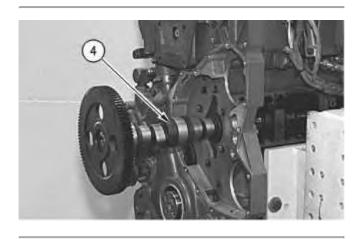


Illustration 1

g00640030

1. Carefully install camshaft (4) in the engine.

When installing the camshaft, make sure the number one cylinder is at top center of the compression stroke with the timing bolt installed in the flywheel. The camshaft timing is very important. The timing mark on the camshaft drive gear must line up with the timing mark on the idler gear. Refer to the Specifications Manual for more information.

2. Ensure that the timing marks on the following gears are aligned: the camshaft drive gear, the idler gear and the crankshaft gear.

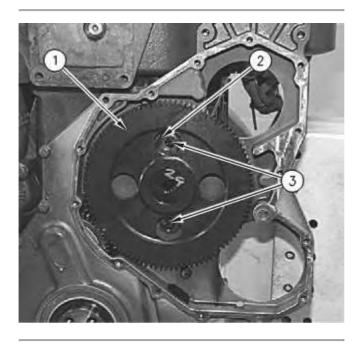


Illustration 2

g00640035

3. Install camshaft retainer plate (2) and two bolts (3) on camshaft gear (1).

End By:

- a. Install the front cover. Refer to Disassembly and Assembly, "Front Cover Install".
- b. Install the lifter group. Refer to Disassembly and Assembly, "Lifter Group Remove and Install".

Copyright 1993 - 2020 Caterpillar Inc. All Rights Reserved. Private Network For SIS Licensees. Tue Jun 30 23:21:39 UTC+0800 2020

Disassembly and Assembly 3126B Engines for Caterpillar Built Machines

Media Number -SENR9581-06 Publication Date -01/08/2018

Date Updated -17/08/2018

i01983227


Camshaft Gear - Remove and Install

SMCS - 1210-010-GE

Removal Procedure

Start By:

- a. Remove the camshaft. Refer to Disassembly and Assembly, "Camshaft Remove".
- 1. Wrap the camshaft with a protective covering in order to prevent damage to the camshaft.

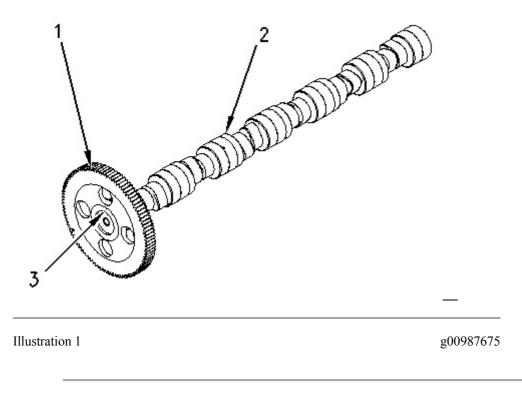


NOTICE

Do not allow the camshaft to fall to the floor when pressing it from the drive gear. Also make sure that the camshaft lobes do not catch on the press plates.

- 2. Place camshaft (2) and camshaft gear (1) in a suitable press. Press camshaft (2) from camshaft gear (1).
- 3. If necessary, remove the key (3) from the camshaft.

Installation Procedure

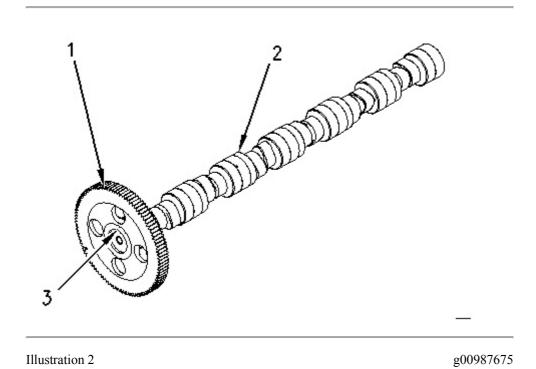

- 1. Raise the temperature of camshaft gear (1).
- 2. Align key (3) in the camshaft with the groove (keyway) in the camshaft gear.
- 3. Install camshaft gear (1) on the end of camshaft (2).

End By:

a. Install the camshaft. Refer to Disassembly and Assembly, "Camshaft - Install".

Copyright 1993 - 2020 Caterpillar Inc. All Rights Reserved. Private Network For SIS Licensees. Tue Jun 30 23:22:35 UTC+0800 2020

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com