# **CATERPILLAR®**

# Service Repair Manual

## **Models**

330B L and 330B LN Excavator

Model: 330B L EXCAVATOR 3YR

Configuration: 330B L, 330B LN Excavators 3YR00001-UP (MACHINE) POWERED BY 3306 Engine

## Disassembly and Assembly

3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SENR5598-09 Publication Date -01/01/2013

Date Updated -25/01/2013

i00921612

## **Compression Brake - Install**

**SMCS - 1119-012** 

### **Installation Procedure**

#### **NOTICE**

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

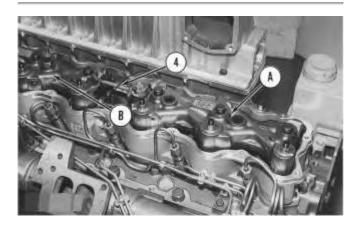


Illustration 1

g00471010

- 1. Install Compression Brake (B) and oil tube (4) .
- 2. Install Compression Brake (A).

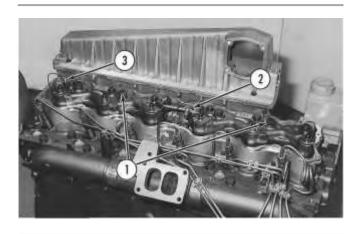


Illustration 2 g00471009

3. Connect wires (3) and (2). Install four bolts (1).

**End By:** Install the valve mechanism cover. Refer to Disassembly and Assembly, "Valve Mechanism Cover - Remove and Install".

<u>Copyright 1993 - 2020 Caterpillar Inc.</u> <u>All Rights Reserved.</u>

Private Network For SIS Licensees.

Wed Sep 30 12:37:16 UTC+0800 2020

Model: 330B L EXCAVATOR 3YR

Configuration: 330B L, 330B LN Excavators 3YR00001-UP (MACHINE) POWERED BY 3306 Engine

### Disassembly and Assembly

#### 3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SENR5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i00999978

#### **Rocker Shaft and Pushrod - Remove**

**SMCS -** 1102-011; 1208-011

#### **Removal Procedure**

#### **Start By:**

A. Remove the valve mechanism cover. Refer to Disassembly and Assembly, "Valve Mechanism Cover - Remove and Install".

#### **NOTICE**

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

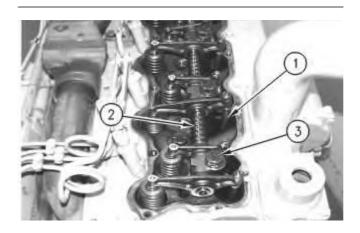


Illustration 1 g00539802

- 1. Remove six bolts (3) and rocker shaft assembly (2). Remove the O-ring seal from the rear rocker shaft support.
- 2. Put identification marks on pushrods (1) in order to identify the location of the pushrods in the engine. Remove pushrods (1) from the engine. Repeat this process for each pushrod.

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Wed Sep 30 12:38:12 UTC+0800 2020

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com