



# Service Repair Manual

## **Models**

# 330D L Excavator

---

Product: EXCAVATOR

Model: 330D L EXCAVATOR T2Y

Configuration: 330D L Excavator T2Y00001-UP (MACHINE) POWERED BY C-9 Engine

## **Disassembly and Assembly**

### **330D, 336D, 336D2, 340D and 340D2 Excavators and 336D MHPU Mobile Hydraulic Power Unit Machine Systems**

Media Number -REN8648-30

Publication Date -01/03/2015

Date Updated -15/08/2018

i07561081

## **Final Drive - Assemble - Type-One**

SMCS - 4050-016

S/N - B6H1-567

S/N - EAH1-UP

S/N - EDX1-UP

S/N - ERN1-274

S/N - FFK1-UP

S/N - GGE1-UP

S/N - GGH1-UP

S/N - HAS1-UP

S/N - JLP1-291

S/N - MEY1-261

S/N - MWP1-823

S/N - NBD1-623

S/N - NBN1-UP

S/N - PTB1-UP

S/N - RAS1-572

S/N - T2Y1-225

## Assembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2420	Transmission Repair Stand	1
B	138-7573	Link Bracket	2
C	1P-1863	Retaining Ring Pliers	1
D	208-6033	Spanner Socket As	1
	208-6034	Spacer	1
E	138-7574	Link Bracket	2
H	6V-7030	Micrometer Depth Gauge Group	1
J	FT-2770	Leak Down Test Tool	1
K	1U-6396	O-Ring Assembly Compound	1
L	5P-3931	Anti-Seize Compound	1
M	1U-8846	Gasket Sealant	1
N	8T-9206	Duo-Cone Seal Installer As	1
P	5P-3931	Anti-Seize Compound	1
Q	235-4848	Drill Fixture Gp	1
R	9S-3263	Thread Lock Compound	1

**Note:** Cleanliness is an important factor. Before assembly, all parts should be thoroughly cleaned in cleaning fluid. Allow the parts to air dry. Wiping cloths or rags should not be used to dry parts. Lint may be deposited on the parts which may cause later trouble. Inspect all parts. If any parts are worn or damaged, use new parts for replacement. All disassembly and all assembly procedures must be performed on a clean work surface and in a clean hydraulic area. Keep cleaned parts covered and protected at all times.

**Note:** O-ring seals, gaskets, and seals should always be replaced. A used O-ring seal may not have the same sealing properties as a new O-ring. Use Tooling (K) during the assembly procedure.

**Note:** Apply a light film of hydraulic oil to all components before assembly.

**Note:** Some of the images that are in this procedure do not show the sprocket assembly that is attached to the final drive housing. If necessary, the weights that are given include the weight of the sprocket assembly.

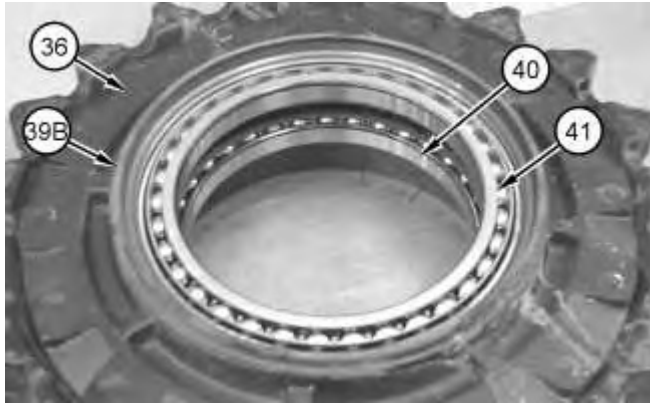


Illustration 1

g01147975

1. Apply Tooling (P) to the outer diameter of the bearings.
2. Use a suitable press to Install bearings (40) and (41). Make sure that bearing (41) and bearing (40) contact the counterbore in housing (36).
3. Use Tooling (N) to install Duo-Cone seal (39B).



Illustration 2

g01147981

4. Use Tooling (N) to install Duo-Cone seal (39A) onto housing (38).

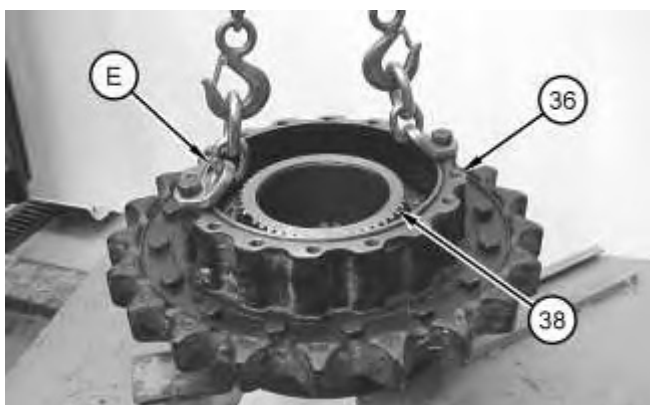


Illustration 3

g01147930

5. Use Tooling (E) and a suitable lifting device to install housing (36) onto housing (38). The weight of housing (36) is approximately 100 kg (220 lb).
6. Remove Tooling (E) from housing (36).



Illustration 4

g01147724

7. Install stopper plate (35). Do not tighten stopper plate assembly (35) at this time.
- Note:** Stopper plate (35) will secure housing (36) to housing (38).
8. Install Tooling (E) and a suitable lifting device to housing (36). The combined weight of housing assembly (36) and (38) is approximately 120 kg (265 lb). Install housing assembly (36) and (38) in a suitable press.
  9. Remove stopper plate (35).



Illustration 5

g01147727

10. Assemble Tooling (D), as shown.
-

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)