



# Service Repair Manual

## **Models**

# 336D L Excavator

---

Product: MOBILE HYD POWER UNIT

Model: 336D L MOBILE HYD POWER UNIT J6D

Configuration: 336D L Mobile Hydraulic Power Unit J6D00001-UP (MACHINE) POWERED BY C9 Engine

## Disassembly and Assembly

### 330D, 336D, 336D2, 340D and 340D2 Excavators and 336D MHPU Mobile Hydraulic Power Unit Machine Systems

Media Number -REN8648-30

Publication Date -01/03/2015

Date Updated -15/08/2018

i05271119

## Final Drive - Disassemble

SMCS - 4050-015

S/N - GGH1-UP

S/N - HHK1-UP

S/N - J6D1-UP

S/N - JRX1-UP

S/N - NBN1-UP

## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7575	Link Bracket	3
B	8T-0226	Bolt	2
C	5F-7366	Forcing Screw	1
	1A-1935	Full Nut	1
D	150-1782	Crossblock	1
E	5P-8713	Plate	1
F	1P-0510	Driver Gp	1
G	384-8910	Torque Wrench	1

	3S-6224	Electric Hydraulic Pump Gp	1
	8H-8535	1 1/4 Socket	1
H	1U-9895	Crossblock	1
J	126-7183	Crossblock	1
K	c	M14 X 2.0 X 254mm	-
L	417-6239	Lifting Adapter	1

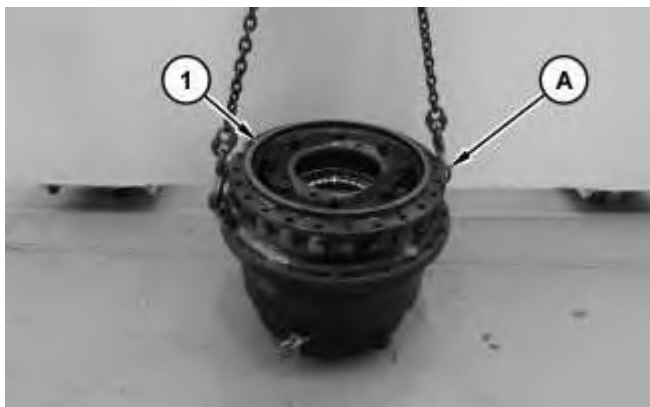


Illustration 1

g03032222

1. Use Tooling (A) and a suitable lifting device in order to position final drive (1) . The weight of final drive (1) is approximately 435 kg (960 lb).



Illustration 2

g03353849

2. Remove bolts (2) .

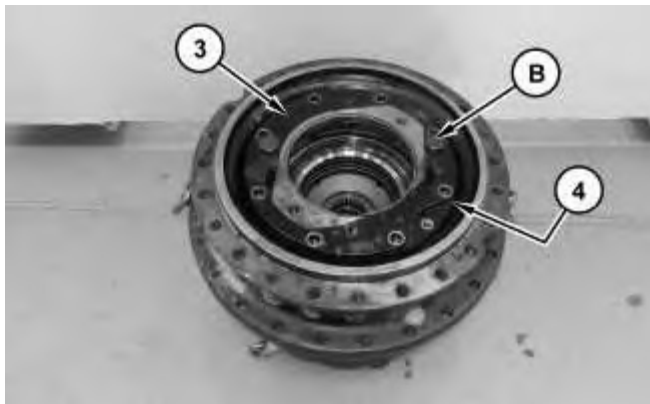


Illustration 3

g03034835

3. Use Tooling (B) and suitable pry bar to remove flange (3) . Remove o-ring (4) from flange (3) .

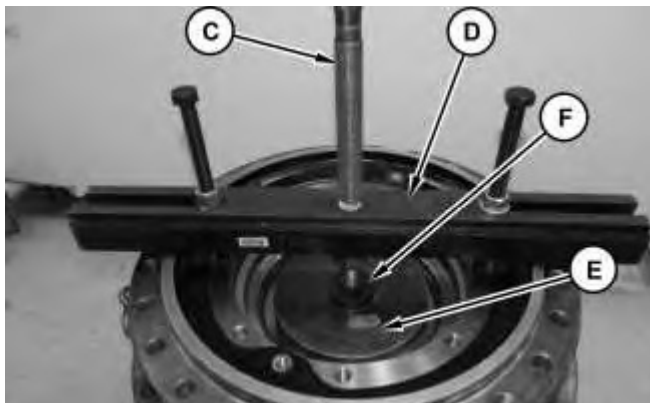


Illustration 4

g03353852



Illustration 5

g03353878



## WARNING

**Personal injury can result from being struck by parts propelled by a released spring force.**

**Make sure to wear all necessary protective equipment.**

**Follow the recommended procedure and use all recommended tooling to release the spring force.**

4. Use Tooling (C) , (D) , (E) , and (F) to compress spring retainer (6) .
5. Remove retaining ring (5) .
6. Remove spring retainer (6) .

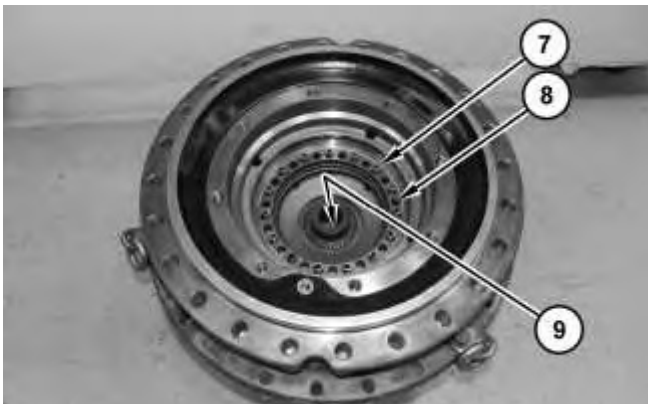
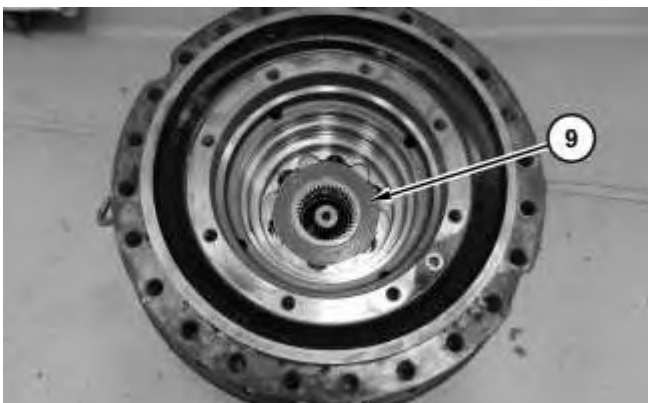


Illustration 6

g03353908

7. Remove springs (7) and piston (8) . Remove gear (12) (not shown) .



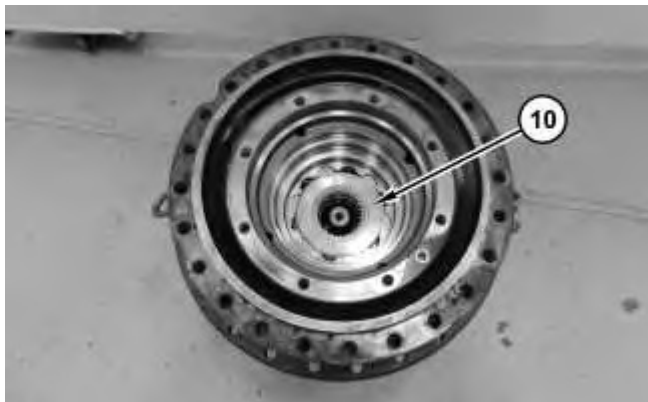



Illustration 8

8. Remove discs (9) and plates (10) .



Illustration 9

9. Remove seals (11) and gear (12) .

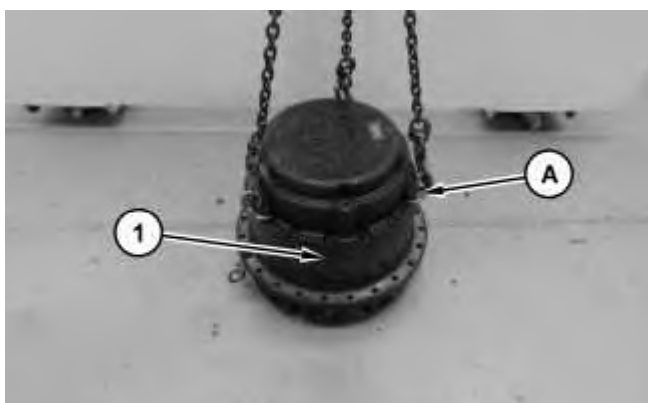

10. Use Tooling (A) and a suitable lifting device to reposition final drive (1) . The weight of final (1) is approximately 435kg (960 lb).

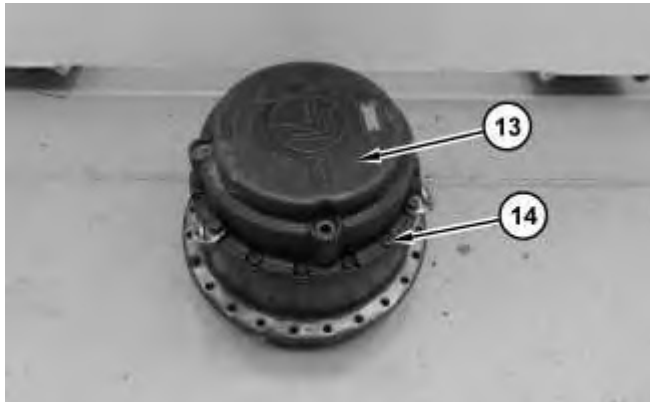


Illustration 11

g03033065

11. Remove bolts (14) . Use a suitable lifting device to remove cover (13) .



Illustration 12

g03353916

12. The weight of cover (13) is approximately 73 kg (160 lb).
-

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.  
You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:  
[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)