



Service Repair Manual

Models

336D L Excavator

Product: MOBILE HYD POWER UNIT

Model: 336D L MOBILE HYD POWER UNIT L5X

Configuration: 336D L Mobile Hydraulic Power Unit L5X00001-UP (MACHINE) POWERED BY C9 Engine

Disassembly and Assembly C9 Engines for Caterpillar Built Machines

Media Number -REN9579-20

Publication Date -01/02/2015

Date Updated -15/08/2018

i03582800

Gear Group (Rear) - Remove and Install

SMCS - 1206-010; 1212-010

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-0520	Driver Gp	1
B	1P-0510	Driver Gp	1

Start By:

- A. Remove the flywheel and pump drive gear. Refer to Disassembly and Assembly, "Flywheel - Remove".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.



Illustration 1

g01383883

1. Remove bolts (1) and remove retainer (2). Remove gear assembly (3) .



Illustration 2

g01383924

2. Use Tooling (A) in order to remove bushing (4) from gear assembly (3) .
3. Repeat Steps 1 and 2 for the opposite side.

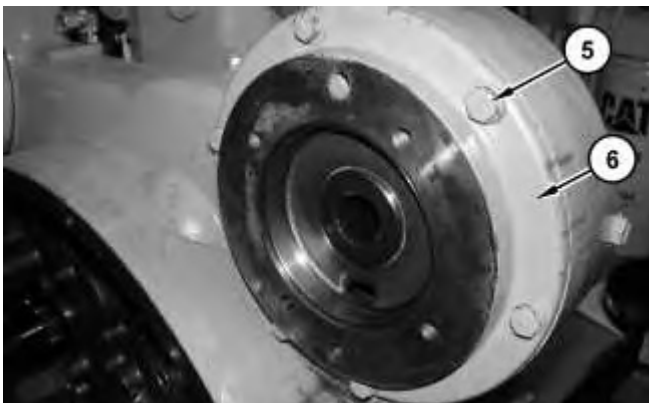


Illustration 3

g01383927

4. Remove bolts (5). Remove adapter (6) and the O-ring seal.

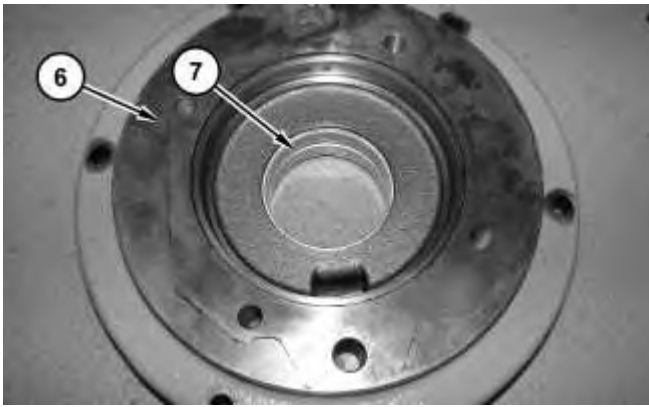


Illustration 4

g01384414


5. Use Tooling (B) in order to remove bearing (7) from adapter assembly (6) .



Illustration 5

g01384424

6. Remove gear assembly (8) .

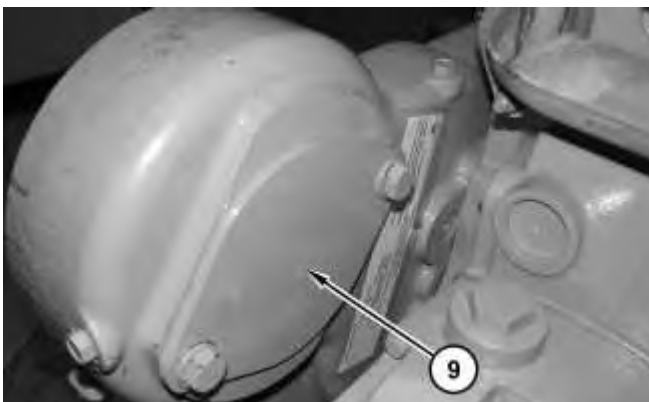

7. Remove cover (9) and the O-ring seal.

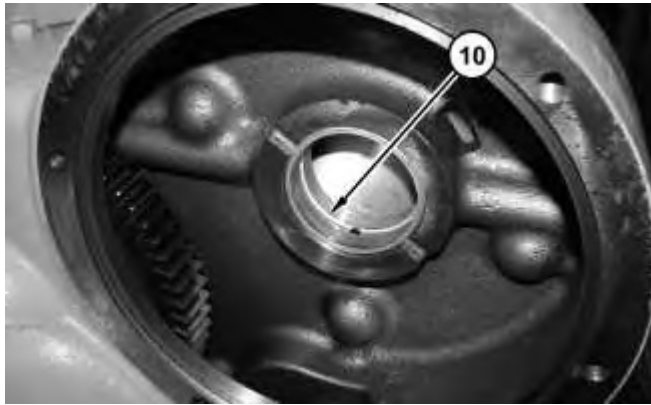


Illustration 7


8. Use Tooling (B) in order to remove bearing (10) .
9. Repeat Steps 4 through 8 for the opposite side.

Installation Procedure

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

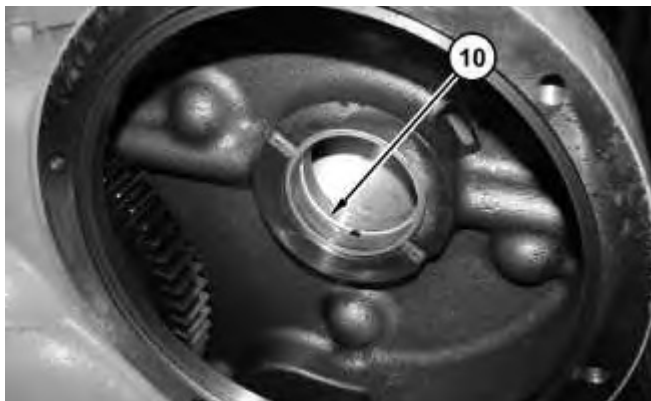

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com