



Service Repair Manual

Models

349E L HVG UHD Mobile
Hydraulic

Product: MOBILE HYD POWER UNIT

Model: 349E L HVG MOBILE HYD POWER UNIT JAE

Configuration: 349E L HVG UHD Mobile Hydraulic Power Unit JAE00001-UP (MACHINE) POWERED BY C13 Engine

Disassembly and Assembly

C13

Engines for Caterpillar Built Machines

Media Number -KENR8150-05

Publication Date -01/01/2014

Date Updated -22/01/2014

i03531892

Electronic Unit Injector Sleeve - Remove and Install

SMCS - 1713-010

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	9U-6891	Injector Tool Group	1
B	9U-6862	Tapered Brush	1
	9U-6863	Small Bore Brush	1
	9U-7244	End Brush	1
	9U-7237	Brush Extension	1
	4C-5552	Large Bore Brush	1
C	4C-9507	Retaining Compound	-

Start By:

- Remove the electronic unit injectors.
- Refer to Operation and Maintenance Manual, "Cooling System Coolant (ELC) - Change" for the correct draining and filling procedures.
-



Illustration 1

g01261663

2. Install Tooling (A) into electronic unit injector sleeve (1).
 3. Tighten the nut until electronic unit injector sleeve (1) is pulled free of the cylinder head assembly.
-

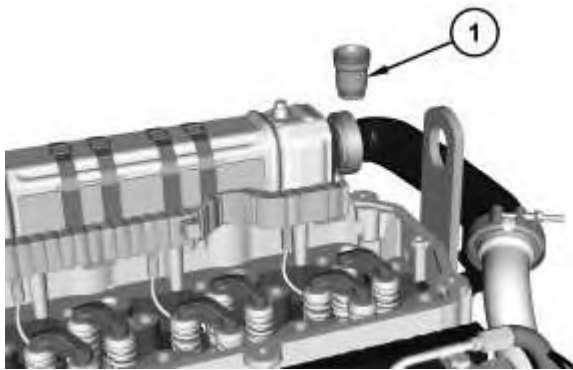


Illustration 2

g01860393

4. Remove electronic unit injector sleeve (1).

Installation Procedure

1. Use Tooling (B) to clean the bore in the cylinder head for the electronic unit injector sleeve.

NOTICE

Ensure that the electronic unit injector sleeve and the cylinder head bore are completely free of oil, dirt, and sealant debris.

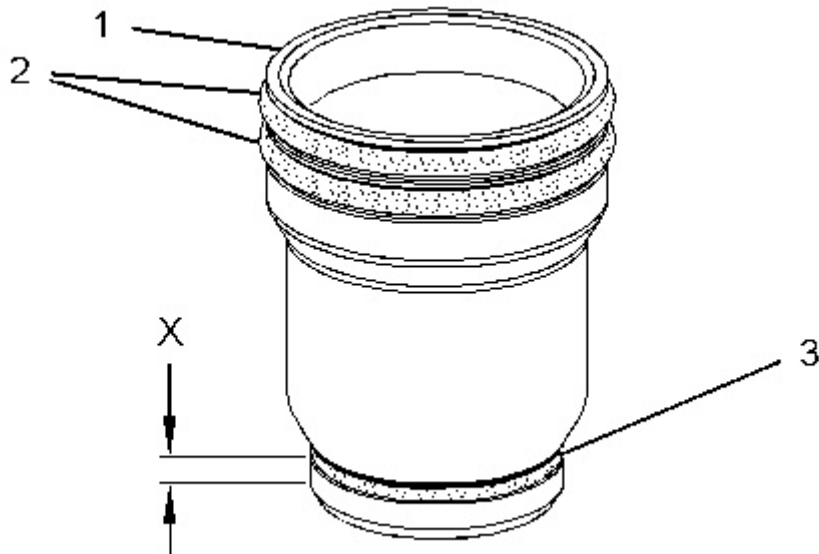


Illustration 3

g01261773

2. Install new O-ring seals (2) and (3) on electronic unit injector sleeve (1).

Note: Do not apply Tooling (C) to the cylinder head surfaces. Apply Tooling (C) on the electronic unit injector sleeve only.

3. Apply a thin coat of Tooling (C) to O-ring seal (3) and the contact surface of electronic unit injector sleeve (1) on the surface that is Marked "X".



Illustration 4

g01261802

4. Install Tooling (A) into the threads of electronic unit injector sleeve (1).
5. Position Tooling (A) and the electronic unit injector sleeve in the cylinder head. Use care not to damage the O-ring seal on the electronic unit injector sleeve.

NOTICE

Ensure that the electronic unit injector sleeve is properly seated in the cylinder head. The Tooling will "RING" when the electronic unit injector sleeve is fully seated in the bore of the cylinder head.

6. Use Tooling (A) and a hammer to install electronic unit injector sleeve (1) in the cylinder head.
7. Refer to Operation and Maintenance Manual, "Cooling System Coolant (ELC) - Change" for the correct draining and filling procedures.

End By:

- a. Install the electronic unit injectors.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com