



# Service Repair Manual

## **Models**

365C and 365C L Excavator

---

Product: EXCAVATOR

Model: 365C EXCAVATOR ELC

Configuration: 365C L Excavator ELC00001-UP (MACHINE) POWERED BY C-15 Engine

## Disassembly and Assembly 365C Excavator Machine Systems

Media Number -REN8616-03

Publication Date -01/08/2012

Date Updated -24/08/2012

i02387244

## Travel Motor - Disassemble

SMCS - 4351-015


## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-1857	Retaining Ring Pliers	1
B	138-7573	Link Bracket	2
C	5P-4758	Retaining Ring Pliers As	1

### Start By:

- A. Remove the travel motor. Refer to Disassembly and Assembly, "Travel Motor - Remove".

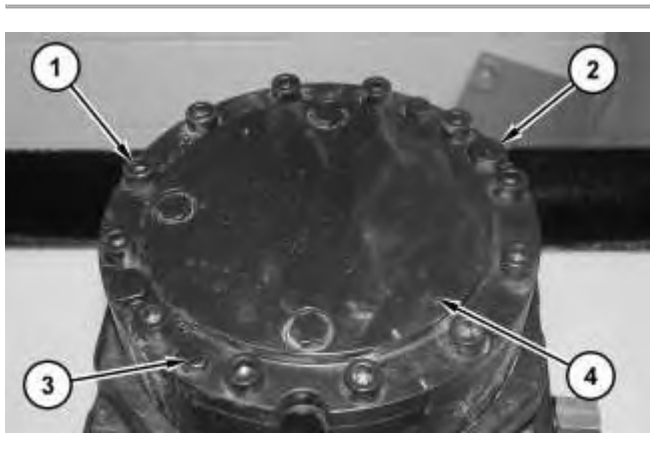

 **WARNING**

**Personal injury can result from being struck by parts propelled by a released spring force.**

**Make sure to wear all necessary protective equipment.**

**Follow the recommended procedure and use all recommended tooling to release the spring force.**

1. Remove bolts (1) and bolts (3) .
2. Remove bolts (2) and cover (4) .



Illustration 2

g01191521

3. Remove springs (5) and brake assembly (6) .



4. Remove retaining ring (7) and plate (8) .

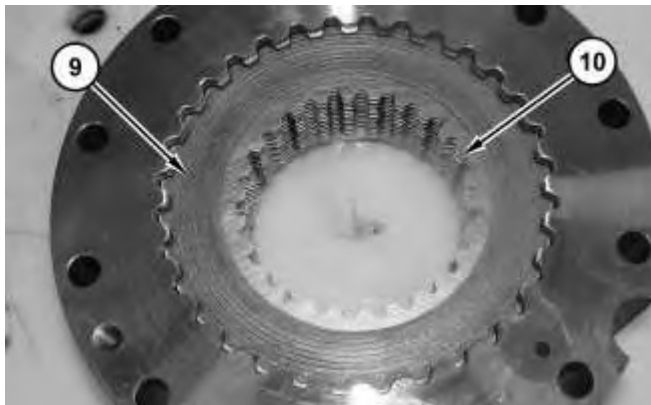


Illustration 4

5. Remove plates (9) and discs (10) .

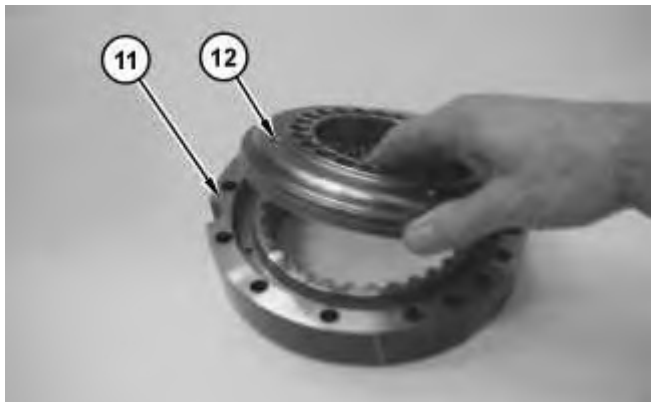


Illustration 5

6. Remove piston (12) from housing (11) .
-

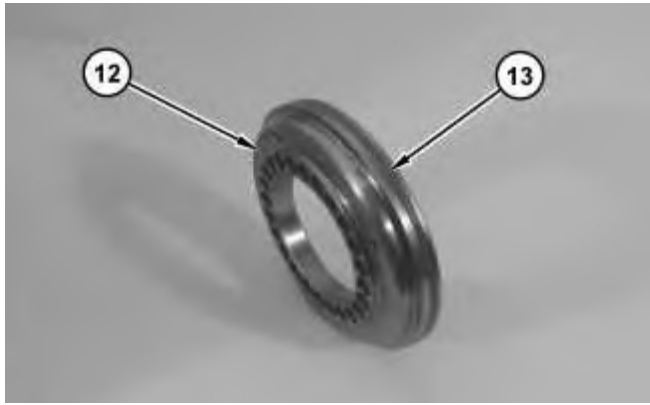


Illustration 6

g01191528

7. Remove seals (13) from piston (12) .

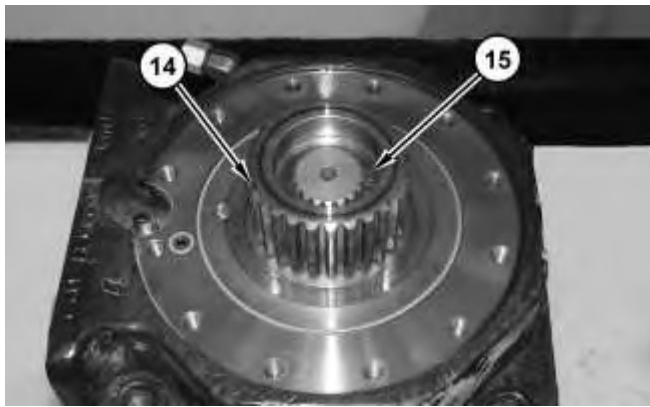


Illustration 7

g01191530

8. Use Tooling (A) in order to remove retaining ring (15) .
9. Remove gear (14) .

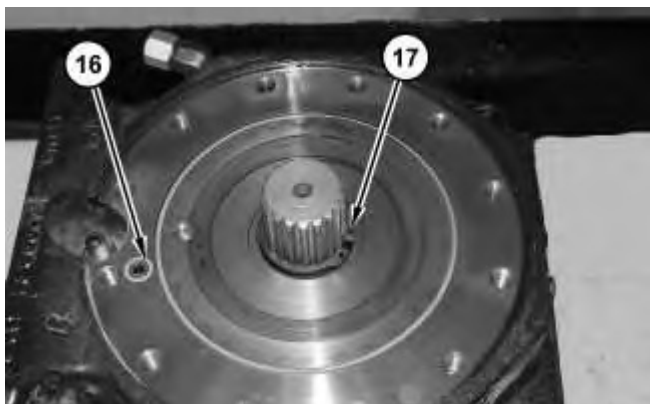


Illustration 8

g01191531

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)