

Product: WHEEL SCRAPER

Model: 637D WHEEL SCRAPER 22W

Configuration: 637D SCRAPERS 22W00001-01067 (MACHINE) POWERED BY 3306 ENGINE

Disassembly and Assembly

SCROLL FUEL SYSTEM FOR 3306 DIRECT INJECTION VEHICULAR ENGINE

Media Number -SEN2066-00

Publication Date -01/12/1979

Date Updated -18/07/2003

SEN20660004

Governor

SMCS - 1264-16; 1264-15


Disassemble Governor

	Tools Needed	A	B	C
†P510	Driver Group	1		
6V2163	Clamp Assembly-Spring Compressor		1	
1P1855	Snap Ring Pliers			1


start by:

- a) remove fuel injection pump housing and governor
- b) remove fuel transfer pump


NOTE: If it is desired to only remove the governor so the fuel injection pump housing can be disassembled, do only Steps 1, 13, 19, 23-26, 29, 31, 32 and 35.

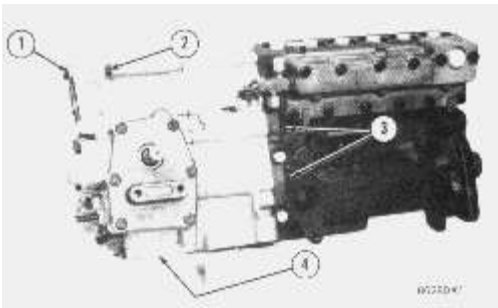


1. Remove bolt (1), six bolts (2), two top bolts (3), housing (4) and the gasket.

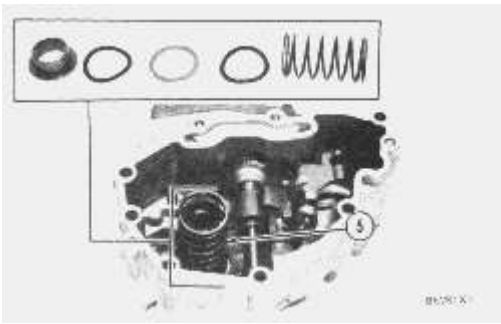


2. Remove governor spring (5), the two wave washers, one flat washer and seat from the guide in the housing.

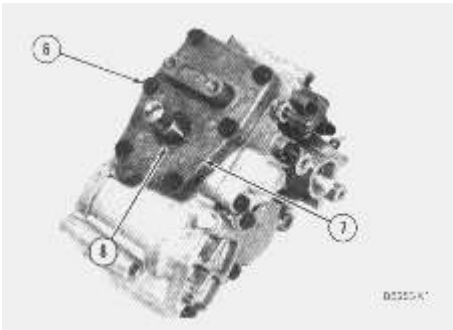


3. Remove bolts (6), cover (7) and the gasket from the housing. Use tooling (A) to remove seal (8) from the cover.

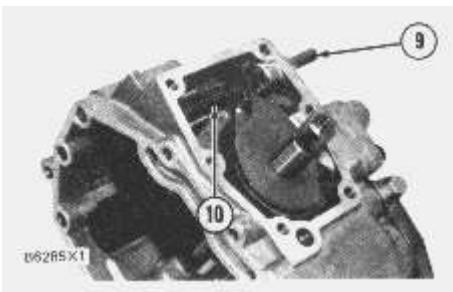


4. Remove low idle adjustment screw (9) and spring (10) from the housing.

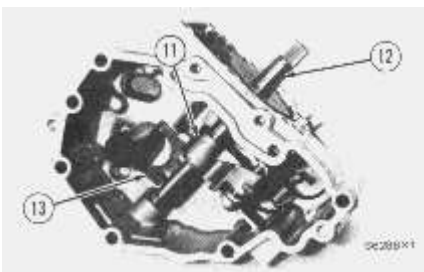


5. Remove shaft assembly (12), lever (11) and lever (13) from the housing.

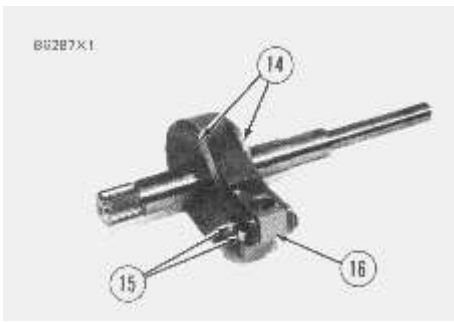

6. Remove two snap rings from pins (15) and remove pins (15). Remove plates (14) and stop (16) from the shaft assembly.

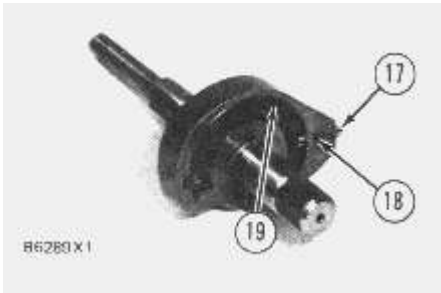


7. Remove pin (18), pin (17) and spring (19) from the shaft assembly.

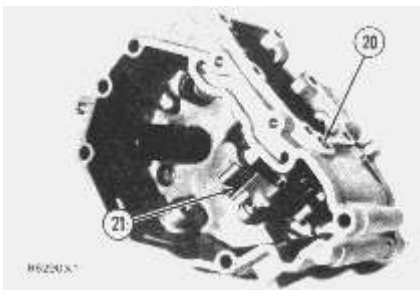


8. Remove shaft (20) and lever (21) from the housing.

NOTICE

Remove check valve (22) only if a replacement is necessary because the check valve will be damaged during removal.

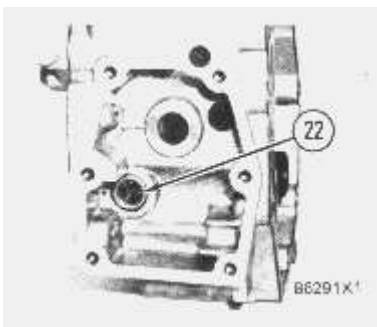


9. Remove check valve (22) if a replacement is necessary.

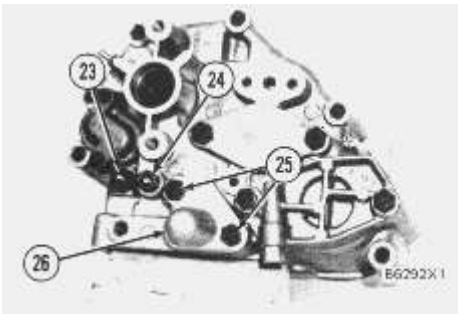


10. Remove contact (23) and body (24) for the governor dashpot adjustment screw from the housing.


11. Remove bolts (25), cover (26) and the gasket from the housing.

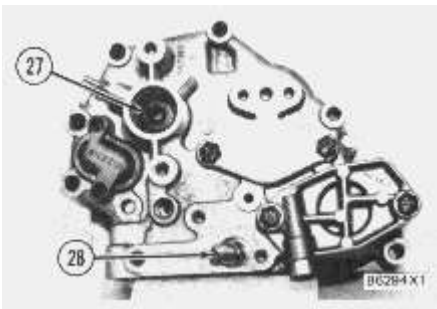

12. Remove seal (27) and adjustment screw (28) for the high idle.

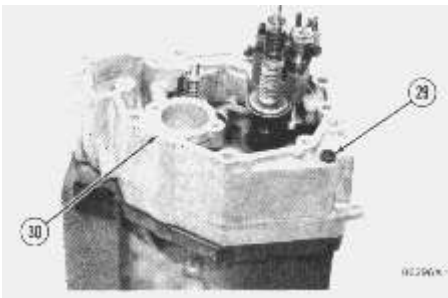


13. Remove two bolts (29), housing (30) and the gasket from the fuel injection pump housing.

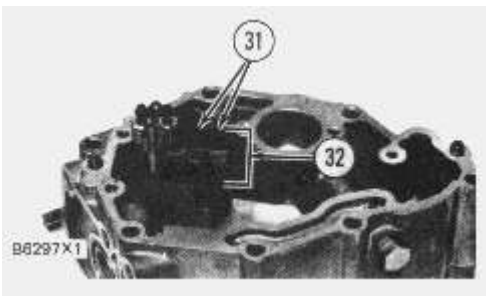


14. Remove bolts (31) and torque control group (32).

15. Disassemble the torque control group and inspect the spacer, spring and insulator for damage or wear.

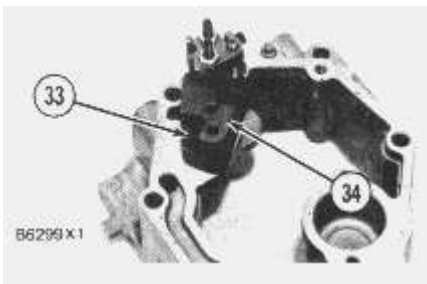


16. Remove bolts (33) and block (34) for the full load stop from the housing.

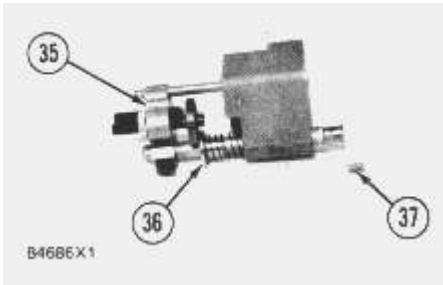


17. Remove the bolt that holds collar (35) to bolt (37). Remove collar (35), collar (36) and the spring from bolt (37). Remove bolt (37) from the block.


18. Remove the stop screws from collar (35) if a replacement is necessary.

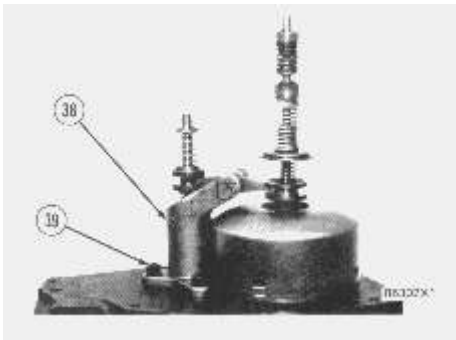

19. Remove bolts (39) and governor servo (38) from the fuel injection pump.


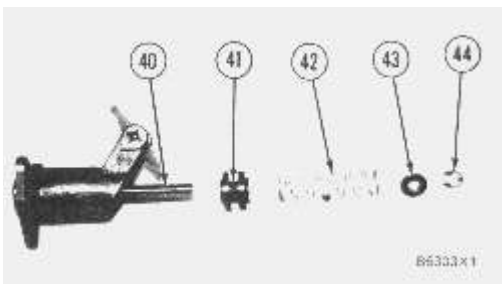


20. Remove locking ring (44), seat (43), spring (broken link spring) (42) and sleeve (41) from valve (40). Remove the other locking ring (44) from the groove in the center of valve (40).

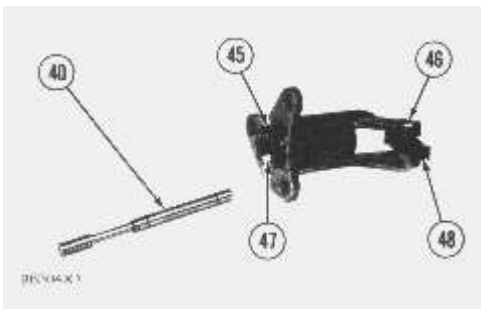

21. Remove valve (40), sleeve (45) and piston (47) from the governor servo. Remove the O-ring seal from sleeve (45).


22. Remove pin (46) and lever (48) from the governor servo.

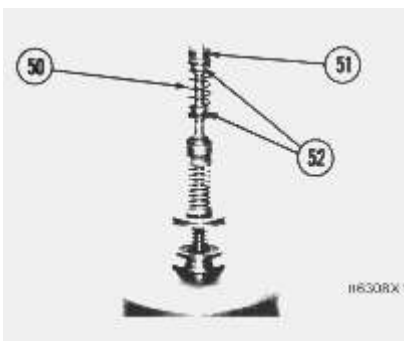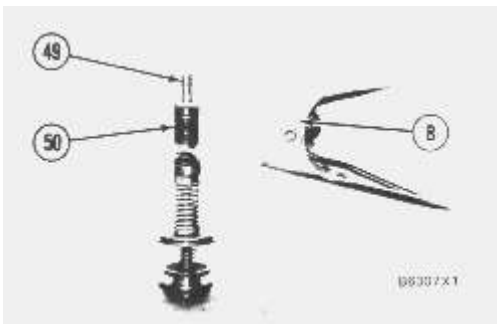


23. Use tool (B) to hold spring (50) in compression so ring (49) can be removed. Spring (50) is used to put a preload on the thrust bearing for the camshaft in the fuel injection pump housing.

24. Remove ring (49) then remove tool (B).


25. Remove bearing (51), sleeves (52) and spring (50) from the governor shaft.

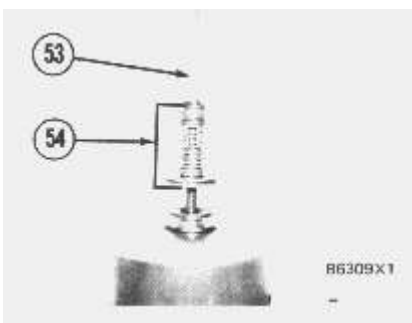


26. Remove ring (53) and dashpot assembly (54) from the governor shaft.

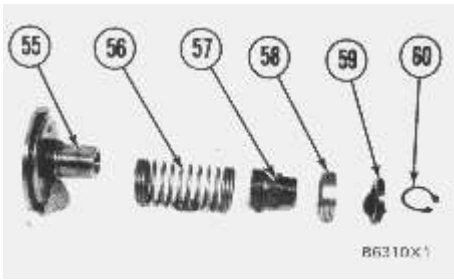


27. Use tool (C) to remove snap ring (60) from seat (57). Remove ring (59) and spool (58) from seat (57).
28. Remove seat (57) from spring (56) and remove spring (56) from seat (55).

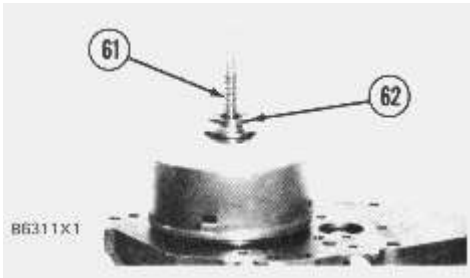

29. Remove spring (overfueling spring) (61) and riser (62) from the governor shaft.

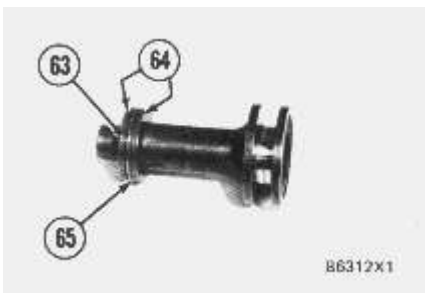

30. Remove ring (63), races (64) and bearing (65) from the riser.

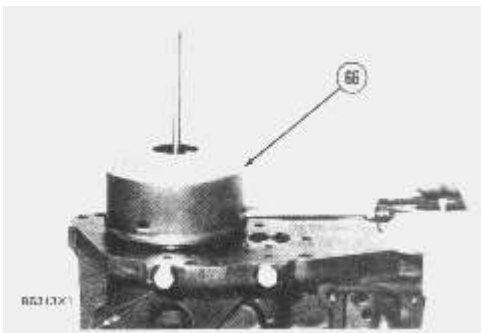

31. Use a screwdriver to remove shield (66) as shown.

NOTE: Make a replacement of shield (66) any time it is removed.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com