



# Service Repair Manual

## **Models**

930K Wheel Loader

---

Product: WHEEL LOADER

Model: 930K WHEEL LOADER RHN

Configuration: 930K Wheel Loader RHN00001-UP (MACHINE) POWERED BY C6.6 Engine

## Disassembly and Assembly 924K, 930K and 938K Wheel Loaders Power Train

Media Number -UENR0281-03

Publication Date -01/04/2017

Date Updated -24/04/2017

i05142776

## Transmission

SMCS - 3030


## Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1U-7505	Hydraulic Jack	1
B	138-7575	Link Bracket	3
	1U-9200	Lever Puller Hoist Gp	1

### Start By:

- A. Remove the front hydrostatic piston motor and the rear hydrostatic piston motor.

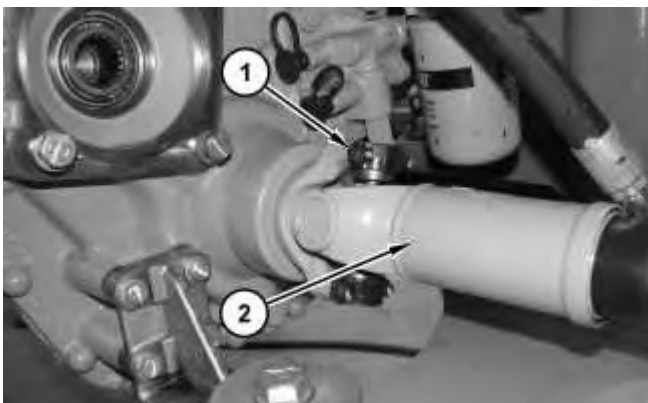

1. Remove bolts (1) and the caps in order to disconnect drive shaft (2) from the yoke. Discard bolts (1) .

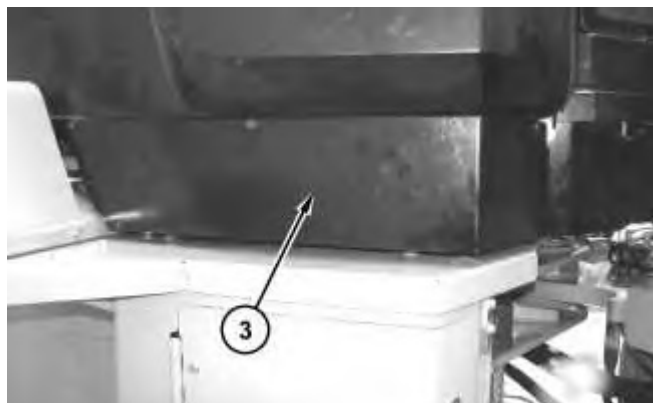


Illustration 2

2. Remove cover (3) .



Illustration 3

3. Disconnect harness assemblies (4) and (5) . Reposition harness assemblies (4) and (5) out of the way.
-




---

Illustration 4

g02802564

4. Disconnect harness assembly (6) and reposition harness assembly (6) out of the way.

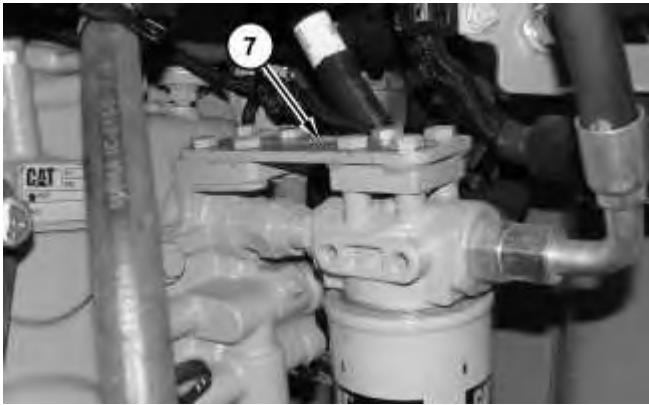


---

Illustration 5

g02802576

5. Remove bracket (7) .

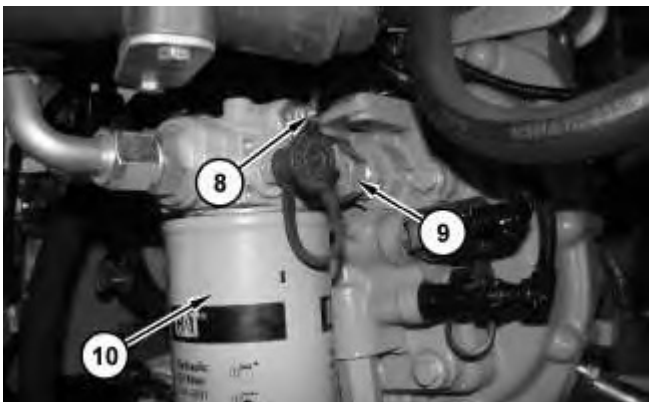

---

Illustration 6

g02802636

6. Disconnect harness assembly (8) . Disconnect tube assembly (9) . Reposition filter base (10) out of the way.

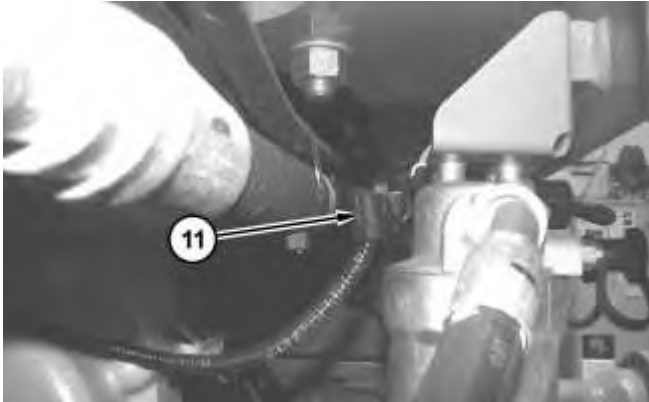


Illustration 7

g02802997

7. Disconnect harness assembly (11) .



Illustration 8

g02803036

8. Disconnect hose assembly (12) .
-

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)