



Service Repair Manual

Models

972M Wheel Loader

Product: WHEEL LOADER

Model: 972M WHEEL LOADER LSJ

Configuration: 972M Wheel Loader LSJ00001-UP (MACHINE) POWERED BY C9.3 Engine

Disassembly and Assembly 966M and 972M Wheel Loaders Power Train

Media Number -UENR0378-12

Publication Date -01/09/2015

Date Updated -05/10/2017

i06909991

Transmission Planetary - Disassemble

SMCS - 3160-015


Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2420	Transmission Repair Stand	1
B	439-3940	Bracket As	3
C	1P-0520	Driver Gp	1
D	8H-0663	Bearing Puller	1

Start By:

- a. Separate the transmission from the output transfer gears.

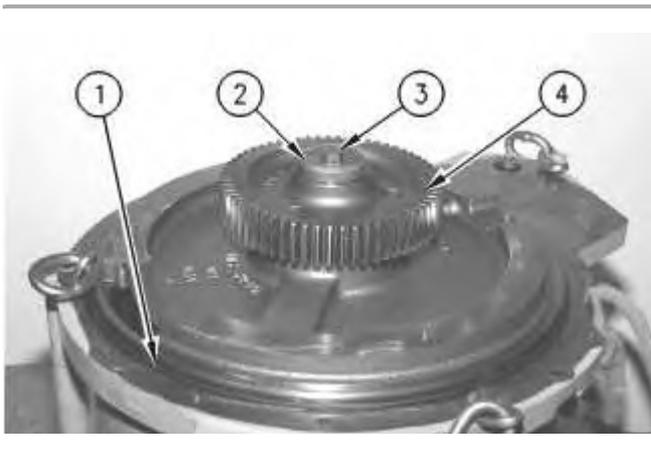

1. Remove O-ring seal (1) from the housing.
2. Remove bolt (3), retainer (2), and drive gear (4) from the end of the input shaft.

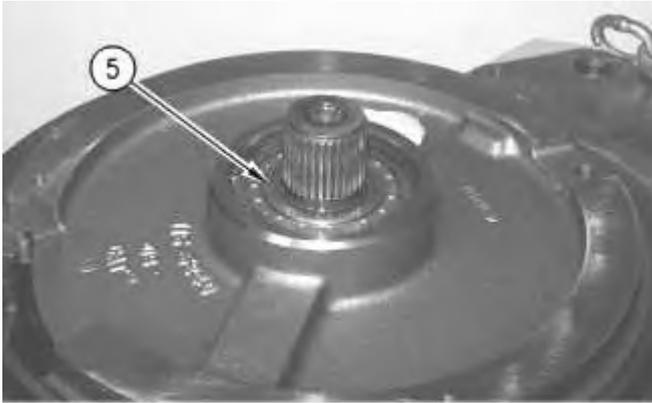


Illustration 2

3. Remove plate (5).

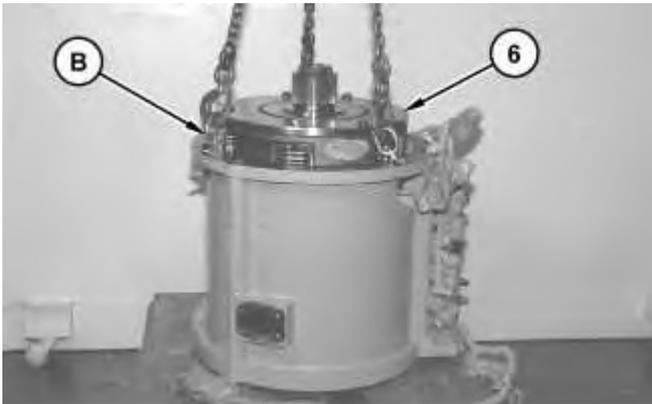


Illustration 3

4. Attach Tooling (B) and a suitable lifting device to the transmission, as shown. The weight of the transmission is approximately 544 kg (1200 lb).
 5. Carefully position the planetary group on the opposite end so that No. 6 clutch housing (6) is facing upward, as shown.
-

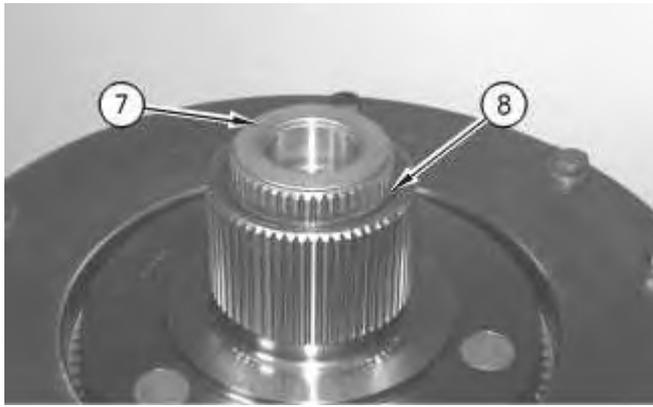


Illustration 4

g00459073

6. Remove retaining ring (8) from output shaft (7).



Illustration 5

g00459075

WARNING

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

7. Remove bolts (9) and No. 6 clutch housing (6). Mark the location of the long bolts.

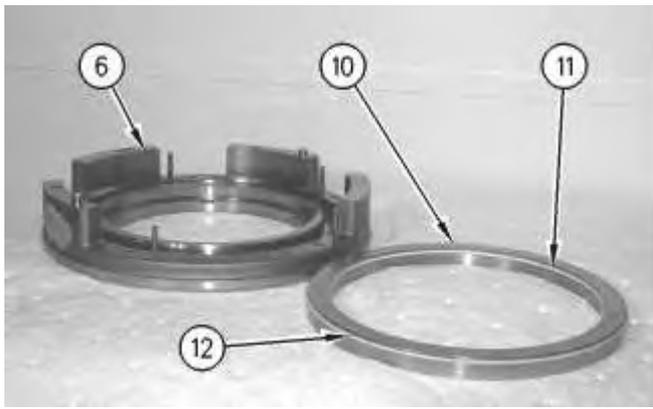


Illustration 6

g00459079

8. Remove clutch piston (10) from No. 6 clutch housing (6).
9. Remove seal rings (11) and (12) from clutch piston (10).



Illustration 7

g00459087

10. Remove clutch plate (14) and springs (13).



Illustration 8

g00459090

11. Remove clutch plates (15) and friction discs (16).

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com