



Service Repair Manual

Models

CB534B and CB534C Roller

PROPEL SPEED RANGE SWITCH REPLACEMENT

0074 00

THIS WORK PACKAGE COVERS

Removal, Installation

INITIAL SETUP

Tools and Special Tools

Tool kit, general mechanic's (Item 36, WP 0220 00)

Materials/Parts

Lockwasher (3)

References

TM 5-3895-379-23P, Figure 4

Equipment Condition

Engine off (TM 5-3895-379-10)


Drums chocked (TM 5-3895-379-10)

Battery disconnect switch in OFF position (TM 5-3895-379-10)

Right-side door assembly opened (TM 5-3895-379-10)

REMOVAL


1. Remove two screws (1) and washers (2) from operator station (3).
2. Remove seven screws (1) and washers (4) from operator station (3).
3. Lift panel assembly (5) and pull away from operator station (3).

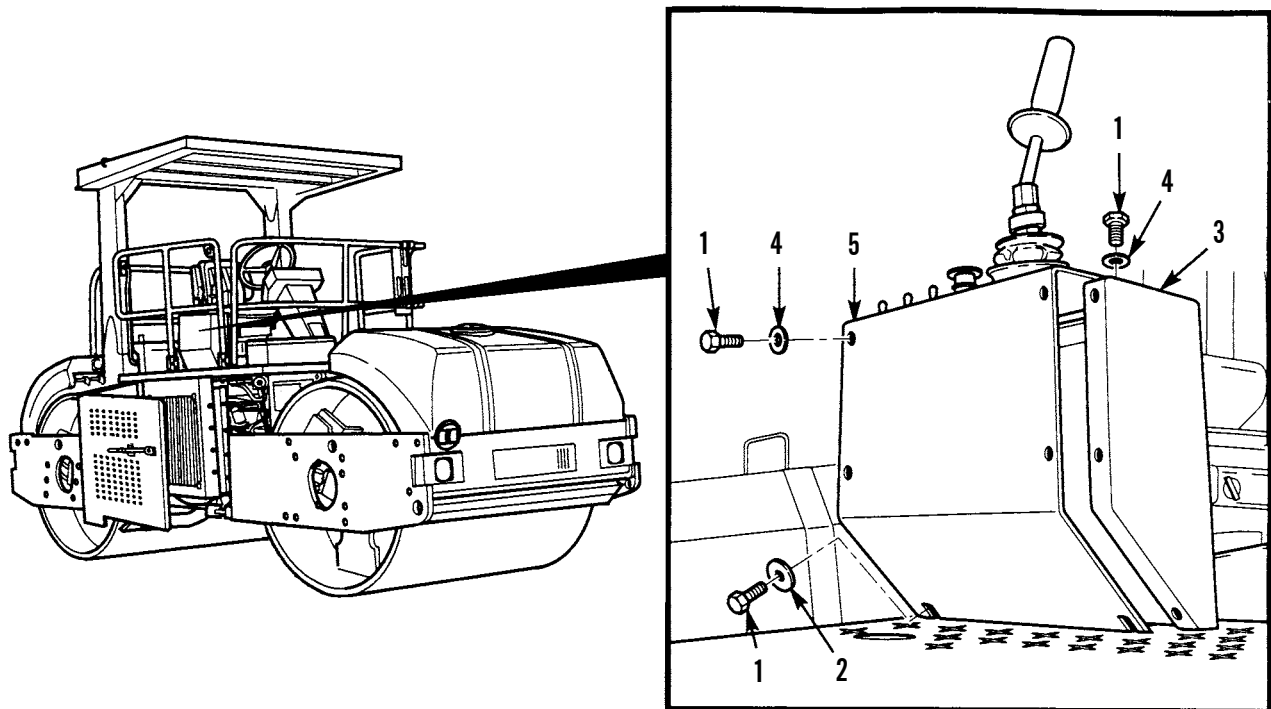

401-446

REMOVAL - CONTINUED

4. Remove nut (6), lockwasher (7), propel speed range switch (8) and ring (9) from panel assembly (5). Discard lockwasher.

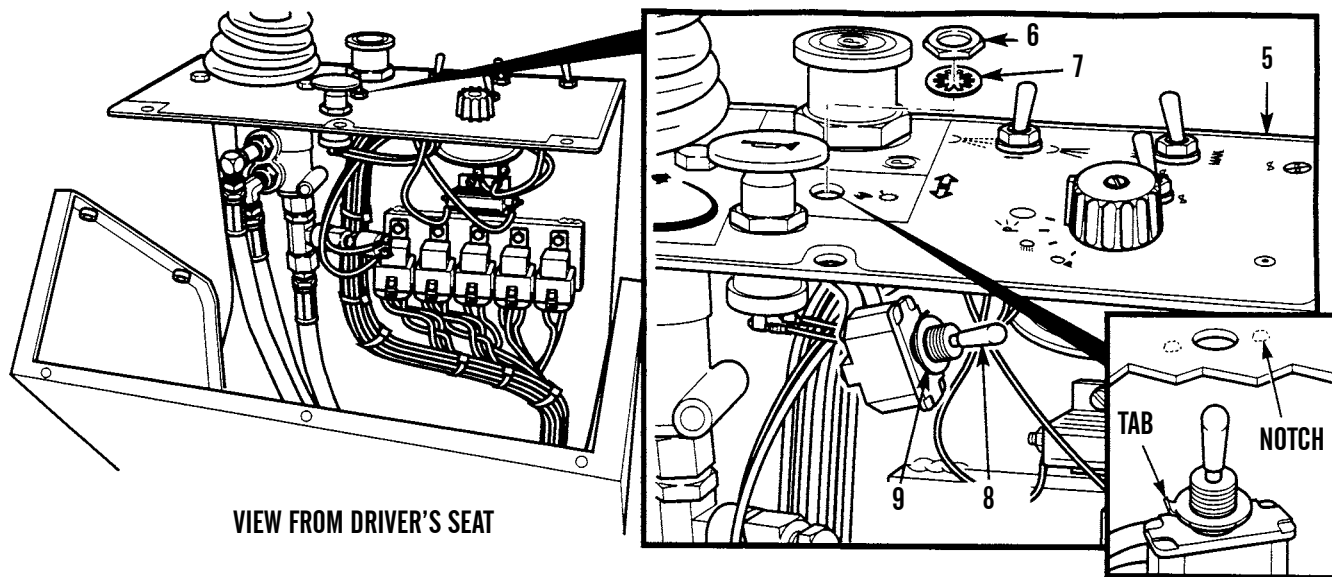


401-461

NOTE

Tag and mark all wires prior to removal.

5. Remove two screws (10), lockwashers (11) and wires (12) and (13) from propel speed range switch (8). Discard lockwashers.

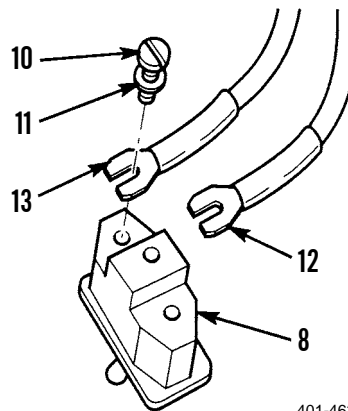

401-462

INSTALLATION

1. Install two wires (12) and (13) on propel speed range switch (8) with new lockwashers (11) and screws (10).


NOTE

Tab of ring fits in notch of panel assembly to properly align propel speed range switch in panel assembly.

2. Install propel speed range switch (8) on panel assembly (5) with ring (9), new lockwasher (7) and nut (6).

INSTALLATION - CONTINUED

3. Install panel assembly (5) on operator station (3) with two washers (2), seven washers (4) and nine screws (1).

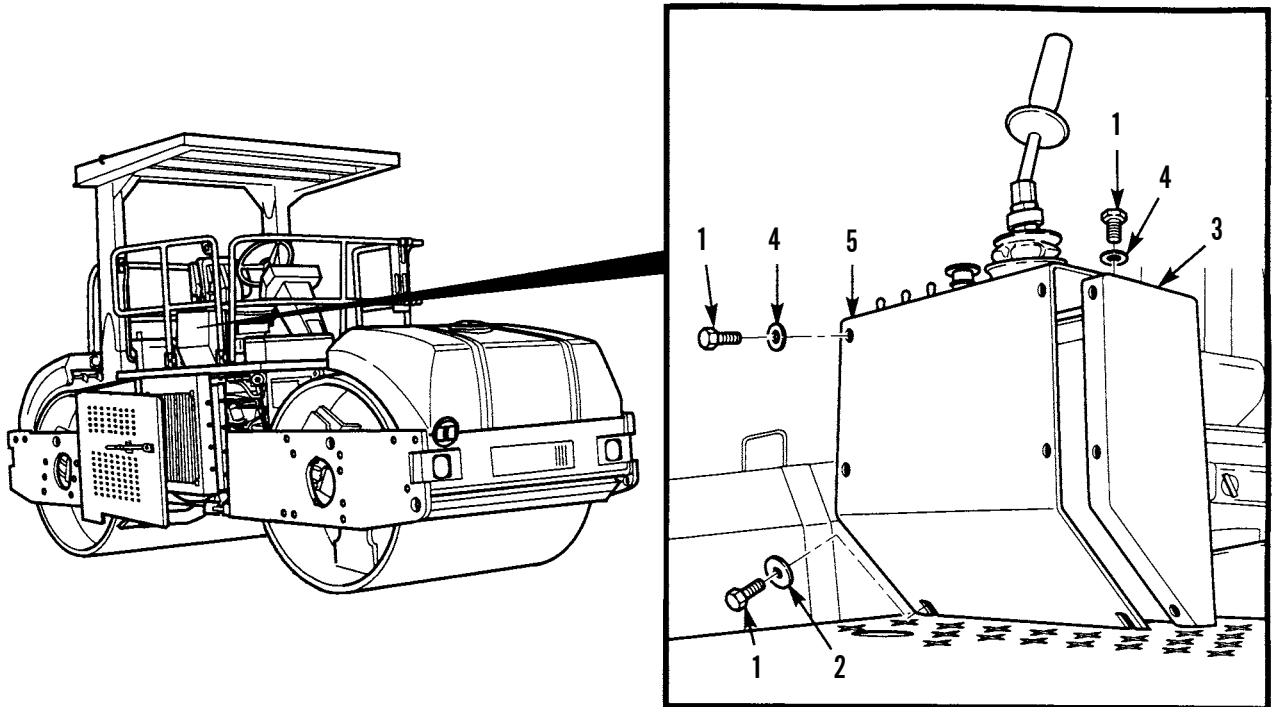

401-446

4. Close right-side door assembly (TM 5-3895-379-10).
5. Remove chocks (TM 5-3895-379-10).

END OF WORK PACKAGE

WORK LIGHT CONTROL SWITCH REPLACEMENT

0075 00

THIS WORK PACKAGE COVERS

Removal, Installation

INITIAL SETUP**Tools and Special Tools**

Tool kit, general mechanic's (Item 36, WP 0220 00)

Materials/Parts

Strap, tiedown (Item 36, WP 0219 00)

Lockwasher (2)

References

TM 5-3895-379-23P, Figure 51

Equipment Condition

Engine off (TM 5-3895-379-10)


Drums chocked (TM 5-3895-379-10)

Battery disconnect switch in OFF position (TM 5-3895-379-10)

Right-side door assembly opened (TM 5-3895-379-10)

REMOVAL

1. Remove two screws (1) and washers (2) from operator station (3).
2. Remove seven screws (1) and washers (4) from operator station (3).
3. Lift panel assembly (5) and pull away from operator station (3).

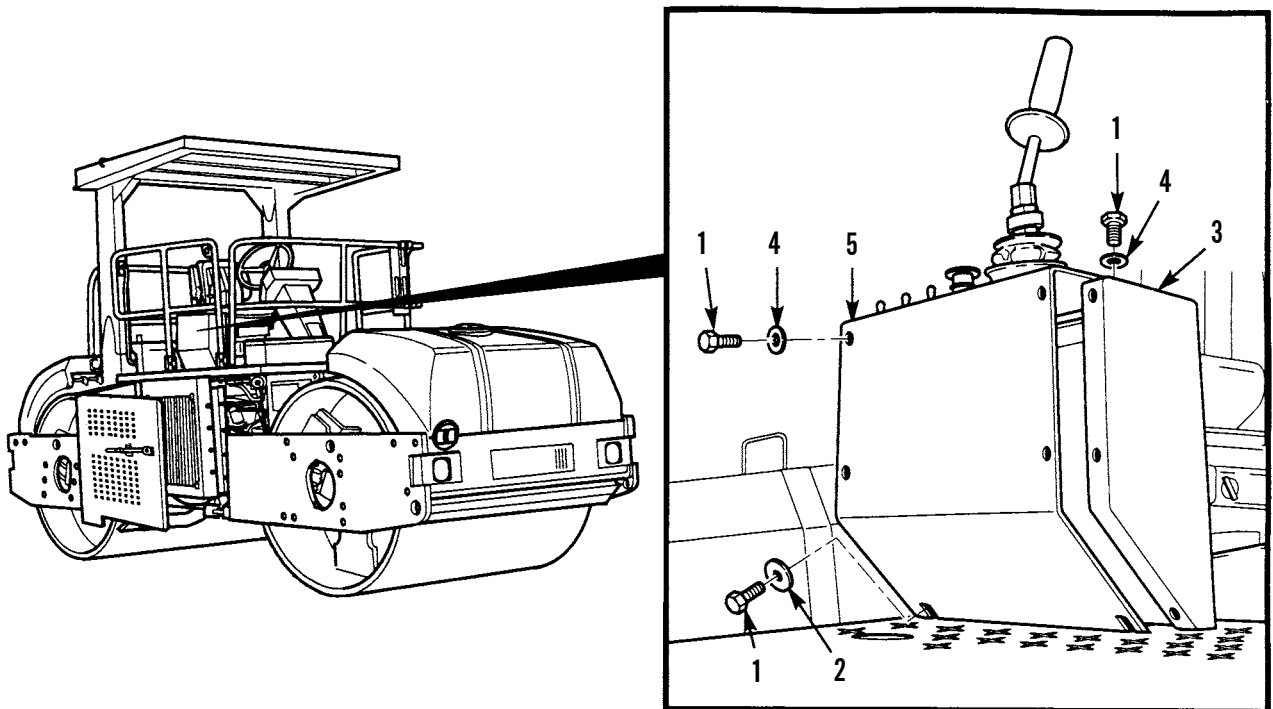

401-446

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com