Product: TRACK-TYPE TRACTOR
Model: D6T TRACK-TYPE TRACTOR HYT
Configuration: D6T XL, XW, LGP VPAT Track-Type Tractor HYT00001-UP (MACHINE) POWERED BY C9.3 Engine

Disassembly and Assembly

D6T Track Type Tractor Power Train

Media Number -M0073303-04

Publication Date -01/09/2018

Date Updated -06/09/2018

i06788640

Final Drive - Disassemble

SMCS - 4050-015


Disassembly Procedure

Table 1

Required Tools				
Tool	Part Number	Part Description	Qty	
A	439-3938	Link Bracket	3	
	1A-2029	Bolt	1	
В	1P-0510	Driver Group	1	
C 6V	FT-1934	Beam	1	
	6V-3160	Double Acting Cylinder	1	
	4C-4865	Pump Group	1	
	1D-4621	Bolt	4	
D	439-3939	Link Bracket	2	
	2A-1538	Bolt	2	

Start By:

a. Remove the final drive.

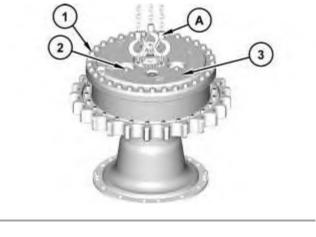

g01195912

- 1. Install Tooling (A) and a suitable lifting device to planetary carrier (3).
- 2. Remove bolts (1). Remove planetary carrier (3) and the two O-ring seals from the hub. The weight of planetary carrier (3) is approximately 137 kg (302 lb).
- 3. Remove retainers (2).


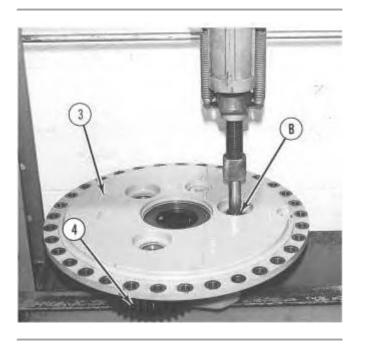


Illustration 2

g00841089

- 4. Place support under planetary carrier (3) to prevent damage. Use Tooling (B) and a suitable press to remove the planetary gear shafts.
- 5. Remove planetary gears (4) from planetary carrier (3).

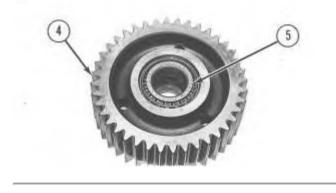

g00841091

- 6. Remove bearing cones (5) from gears (4).
- 7. Remove the bearing cups from each side of the gears.

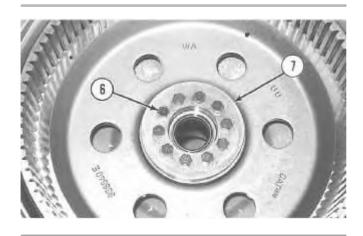


Illustration 4

g00841092


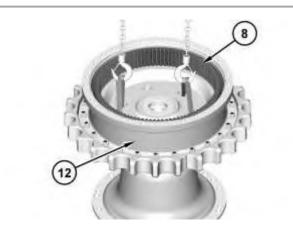


Illustration 5


g01195913

- 8. Remove bolts (6) and retainer (7).
- 9. Attach a suitable lifting device to hub (12) and ring gear (8). The weight of hub (12) and ring gear (8) is approximately 68 kg (150 lb). Remove hub (12) and ring gear (8).

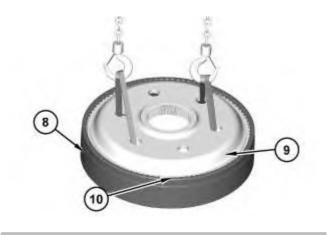

g01195915

10. Turn over hub (9) and ring gear (8). Remove retaining ring (10). Attach a suitable lifting device to hub (9). The weight of hub (9) is approximately 37 kg (82 lb). The weight of ring gear (8) is approximately 32 kg (71 lb). Remove hub (9).

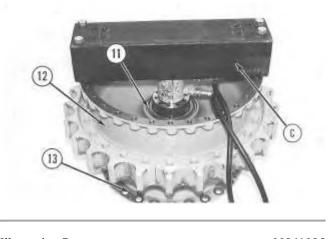




g00841095


11. Install Tooling (C) on hub (12).

Note: Do not lift hub (12) too high. Do not allow hub (12) to contact the fitting on the hydraulic cylinder.

- 12. Use Tooling (C) to loosen hub (12) from spindle (13). Remove Tooling (C).
- 13. Remove bearing cone (11).

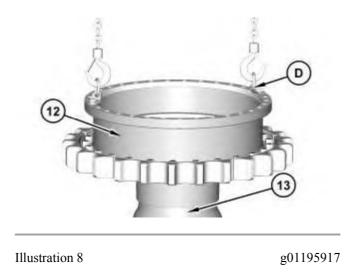


14. Install Tooling (D) and a suitable lifting device to hub (12). Remove hub (12) from spindle (13). The weight of hub (12) is approximately 180 kg (397 lb).

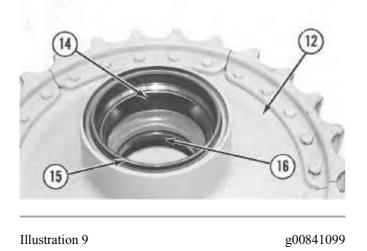

- 15. Turn over hub (12). Remove Duo-Cone seal kit (15). Use a hammer and a punch to remove bearing cup (16).
- 16. Turn over the hub. Remove bearing cup (14) from the hub.

Note: If the Duo-Cone seal will be reused, mark the seal kits for installation purposes.

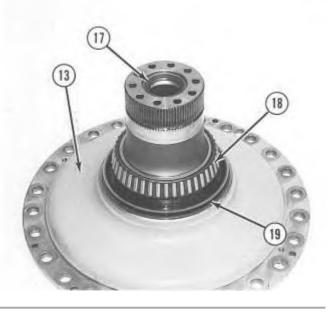

g00841101

Note: Bearing cone (18) may be damaged if the bearing cone is removed from spindle (13).

- 17. Remove Duo-Cone seal (19) from spindle (13).
- 18. If necessary, remove bearing cone (18) from the spindle.
- 19. Remove lip seal (17) from spindle (13).

Product: TRACK-TYPE TRACTOR
Model: D6T TRACK-TYPE TRACTOR HYT
Configuration: D6T XL, XW, LGP VPAT Track-Type Tractor HYT00001-UP (MACHINE) POWERED BY C9.3 Engine

Disassembly and Assembly

D6T Track Type Tractor Power Train

Media Number -M0073303-04

Publication Date -01/09/2018

Date Updated -06/09/2018

i06788886


Final Drive - Assemble

SMCS - 4050-016

Assembly Procedure

Table 1					
Required Tools					
Tool	Part Number	Part Description	Qty		
А	439-3938	Link Bracket	3		
	1A-2029	Bolt	3		
В	1P-0510	Driver Group	1		
D	439-3939	Link Bracket	2		
	2A-1538	Bolt	2		
E	1U-6437	Duo-Cone Seal Installer As	1		

1. Apply clean oil to all the parts during assembly.

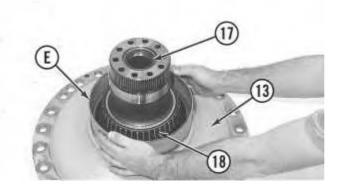

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com