



Service Manual

Models

TL1055

TL1255

S/N TBM00100 & After
S/N TBN00100 & After

31200293

Revised
May 21, 2012

SECTION CONTENTS

Section	Subject	Page
Section 1		
Safety Practices		1-1
1.1	Introduction	1-2
1.2	Disclaimer	1-2
1.3	Operation & Maintenance Manual	1-2
1.4	Do Not Operate Tags	1-2
1.5	Safety Information	1-2
1.6	Safety Instructions	1-3
1.7	Safety Decals	1-4
Section 2		
General Information and Specifications		2-1
2.1	Replacement Parts and Warranty Information	2-2
2.2	Torque Charts	2-3
2.3	Specifications	2-11
2.4	Fluids and Lubricant Capacities	2-14
2.5	Service and Maintenance Schedules	2-17
2.6	Lubrication Schedules	2-20
Section 3		
Boom		3-1
3.1	Boom System Component Terminology	3-3
3.2	Boom System - Four Section	3-4
3.3	Boom Assembly Maintenance	3-4
3.4	Complete Boom Removal/Installation	3-5
3.5	Boom Section Removal/Installation	3-6
3.6	Boom Section Separation Adjustment	3-16
3.7	Hose Carrier Assembly Removal/Installation	3-18
3.8	Quick Coupler Assembly	3-21
3.9	Boom Head - Mounted Winch	3-22
3.10	Boom Wear Pads	3-22
3.11	Boom Chain Removal/Installation	3-23
3.12	Boom Chain Inspection and Lubrication	3-25
3.13	Forks	3-29
3.14	Troubleshooting	3-30
Section 4		
Cab and Covers		4-1
4.1	Operator Cab and Covers Component Terminology	4-2
4.2	Operator Cab	4-3
4.3	Cab Components	4-3
4.4	Cab Removal	4-8
4.5	Cab Installation	4-9

Section	Subject	Page
Section 5		
Axles, Drive Shafts, Wheels and Tires		5-1
5.1	Axle, Drive Shaft and Wheel Component Terminology	5-2
5.2	General Information	5-3
5.3	Axle Assemblies	5-3
5.4	Drive Shafts	5-9
5.5	Wheels and Tires	5-10
5.6	Brakes	5-11
5.7	Towing a Disabled Machine	5-11
Section 6		
Transmission		6-1
6.1	Transmission Assembly Component Terminology	6-2
6.2	Transmission Serial Number	6-3
6.3	Transmission Specifications And Maintenance Information	6-3
6.4	Transmission Replacement	6-3
6.5	Torque Converter Diaphragm	6-6
6.6	Transmission Cooler Thermal Bypass Valve	6-6
6.7	Troubleshooting	6-8
Section 7		
Engine: CAT C4.4		7-1
7.1	Introduction	7-2
7.2	Engine Serial Number	7-4
7.3	Engine Specifications and Maintenance Information	7-4
7.4	Engine Cooling System	7-4
7.5	Engine Electrical System	7-9
7.6	Fuel System	7-9
7.7	Engine Exhaust System	7-11
7.8	Air Cleaner Assembly	7-12
7.9	Engine Replacement	7-14
7.10	Engine Indicator Lamps	7-16
7.11	Troubleshooting	7-17
Section 8		
Hydraulic System		8-1
8.1	Hydraulic Component Terminology	8-2
8.2	Safety Information	8-3
8.3	Hydraulic Pressure Diagnosis	8-3
8.4	Hydraulic Circuits	8-4
8.5	Hydraulic Reservoir	8-12
8.6	Implement Pump	8-13
8.7	Control Valves	8-14
8.8	Hydraulic Cylinders	8-20

Section 9

Electrical System		9-1
9.1	Electrical Component Terminology	9-2
9.2	Specifications	9-4
9.3	Safety Information	9-4
9.4	Fuses and Relays	9-4
9.5	Electrical System Schematics	9-7
9.6	Circuit Breakdowns	9-16
9.7	Engine Start Circuit	9-20
9.8	Charging Circuit	9-21
9.9	Window Wiper/Washer Windshield Wiper Motor	9-22
9.10	Cab Heater and Fan	9-23
9.11	Solenoids, Sensors and Senders	9-24
9.12	Display Monitor and Gauges	9-28
9.13	Dash Switches	9-29
9.14	Engine Diagnostic	9-31



Section 1

Safety Practices

Contents

PARAGRAPH	TITLE	PAGE
1.1	Introduction	1-2
1.2	Disclaimer	1-2
1.3	Operation & Maintenance Manual	1-2
1.4	Do Not Operate Tags	1-2
1.5	Safety Information	1-2
1.5.1	Safety Alert System and Signal Words	1-2
1.6	Safety Instructions	1-3
1.6.1	Personal Hazards	1-3
1.6.2	Equipment Hazards	1-3
1.6.3	General Hazards	1-3
1.6.4	Operational Hazards	1-4
1.7	Safety Decals	1-4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com