

Mogul
12-25 Opposed Cylinder
Kerosene Tractor

Operators Manual

INT-2152





This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.


INT. 2152. 2½M—6-5-17

(T.)

(DOMESTIC)

 KEEP THIS BOOK AND REFER TO SAME WHEN IN NEED OF INFORMATION

INSTRUCTIONS
FOR OPERATING THE
MOGUL
12-25-H. P. OPPOSED CYLINDER
KEROSENE TRACTOR

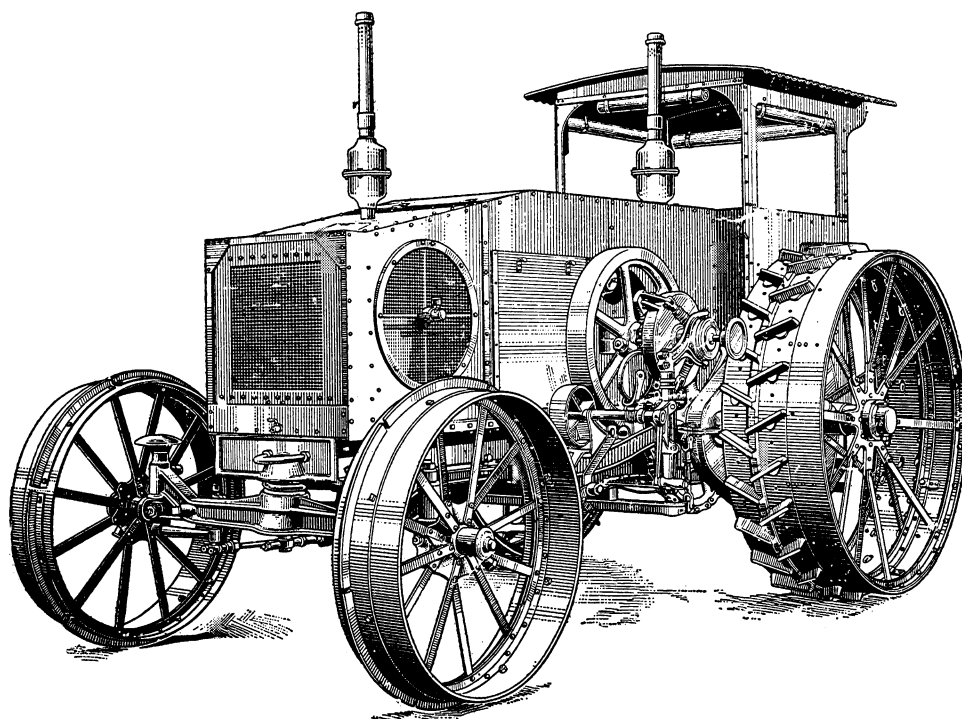

MANUFACTURED BY
INTERNATIONAL HARVESTER CORPORATION
CHICAGO, U. S. A.

HARVESTER PRESS, CHICAGO, U. S. A.

INDEX

(General)

	PAGE		PAGE
Advancing the spark	7	Low speed forward	8
Bearings (main, crank shaft, connect- ing rod)	12	Lubricator (mechanical) adjusting...	22
Bearings, adjusting	12	Magneto	16
Bearings, testing	12	Needle valves, fuel and water	6-7
Bumping	7	Oil, how and when	4-5
Carbon deposit on piston rings	15	Oils recommended	21
Care of engine and tractor	11	Overloading	20
Changing from gasoline to kerosene	7	Pistons and rings, removing and cleaning	15
Chains, main drive	16	Preparations for starting	4
Clutch adjustment	11	Price list of repair parts	28
Clutch lever	8	Priming	6-7
Clutch pulley	11	Relief lever	6
Clutch ring bearing grease cup	11	Retarding the spark	6
Clutch shoes	11	Reverse speed	8
Compression	13	Running	7
Cylinder flooded	7	Spark	6-7
Engine fails to start	10	Spark plugs	16
Fuel	5-7	Starting the engine	6-7
Fuel needle valves	6-7-9	Starting the tractor	8
Fuel pump	6-10	Steering device (special)	17-19
Governor	5	Stopping the engine	9
Grease cups	24	Stopping the tractor	8
Greases recommended	25	Timing of valves	14
High speed forward	8	Transmission	13
Ignition	16	Troubles and remedies	10
Joints (repacking)	14	Valves, regrinding	14
Levers, hand	8	Valves, leaking	14
Liners, removing	12	Valves, sticky	14
Load	7-20	Water, tank and water pump	5
Loss of power	10	Water needle valves	7
		Wiring	16

INDEX TO ILLUSTRATIONS

SUBJECT	ILLUSTRATING	CUT No.	PAGE No.
Bearings	Adjustment (removing liners)	11	12
Clutch	Adjustment	9	11
Clutch shoe	Detail	10	11
Complete tractor	Left side		Title
Complete tractor	Right side	28	52
Detail	Cylinder jacket drain	8	9
Extension tires (special)	Front and rear wheels	20	17
Fly wheel	Timing of valves, dead center, etc.	16	14
Fuel pump	Operating	3	6
Governor	Detail	2	5
Grease cups	Right and wrong way to fill and operate	25 to 27	24-25
Hand starter	Detail	6	7
Levers	Clutch forward and reverse hand levers, etc.	7	8
Lubricator—mechanical	Oiler	1	4
Magneto	Detail	19	16
Mixer	Needle valves, damper, priming, etc.	4	6
Oiler	Mechanical lubricator	24	22
Piston	Cleaning and replacing piston rings	18	15
Priming	Mixer	4	6
Rear view	Levers, etc.	7	8
Relief lever	Operating	5	7
Spark advance lever	Detail	7	8
Speed change lever	Detail	7	8
Steering device (special)	Attaching, adjusting, operating	20 to 23	17-19
Timing of valves	Fly wheel	16	14
Transmission	High speed	12	18
Transmission	Low speed	18	13
Transmission	Neutral position	14	13
Transmission	Reverse position	15	13
Valves (how to regrind)	Grinding valves	17	14
Wiring	Magneto	19	16

TECHNICAL PUBLICATIONS AVAILABLE

Your International Harvester Dealer and his factory trained servicemen are best qualified to service your equipment. Up-to-date instructions and adequate special tools are also a part of your Dealer's service facilities.

This Operator's Manual was prepared to instruct you in proper operation and maintenance of your equipment. If you desire additional information you may purchase Service Manuals and/or Parts Catalogs. Additional copies of the Operator's Manual are also available.

Fill out the order blank and forward together with your check or money order in the appropriate amount (U.S. Funds) to:

International Harvester Company

PRINTING AND
DISTRIBUTION SERVICES

807 Blackhawk Drive

Westmont, Illinois 60559

Attention: Cashier

----- Cut Along This Line -----

Title	Number	Qty.	Price Each
Operator's Manual			
Mogul 12-25 H.P. (Opposed cylinder) Kerosene Tractor	INT. 2152		1.60
Parts Catalog			
Not Available			
Service Manual			
Not Available			

TOTAL _____

Please Print

Name _____

Street Address _____

City _____

State _____

Zip Code _____

Date _____

Signed _____

Do not send cash or stamps

Prices subject to change without notice.

FOREWORD

It is an established fact that all high grade machinery requires intelligent understanding and attention. The better care given a tractor, the better service it will render. The simplicity of the Mogul 12-25 tractor and the ease with which it is operated, render an intimate knowledge of mechanical technicalities unnecessary.

It is, however, desirable that every Mogul owner should understand his tractor, and a careful study of the instructions will enable the operator to familiarize himself with the machine, as each move necessary is illustrated and described. Fortified with this knowledge, the operator can maintain the tractor economically, operate efficiently and prolong its usefulness. There are several important points in connection with the care and operation, which may be summarized as follows:

1. **OVER-LOADING:** (See special instructions on page 20.)

Never over-load the tractor. To do the best work, the machine should have only a normal load, normal speed and proper attention and adjustment. It will add a great deal to the efficiency and life of the tractor if the load is kept within the prescribed limits.

2. **LUBRICATION:** (See special instructions on page 20.)

The really important thing connected with a tractor's care is keeping all working part thoroughly cleaned and oiled. Properly defined, this means that all working parts should, when in operation, have a thin film of clean oil around them. This prevents the parts from running in contact and eliminates wear.

3. **IGNITION:** (See instructions on page 16.)

Do not attempt any adjustment of magneto without reading instructions carefully.

4. **STORING AND OVERHAULING:** (See special instructions on page 27.)

When through with the tractor for any length of time, it should be stored in a dry place, all water drained from the cooling system and, to prevent corrosion and rust, a fresh supply of oil should be pumped to all of the bearings, piston and cylinder. This can be done by means of the hand crank on the lubricator.

By following the above, time and money will be saved.

INTERNATIONAL HARVESTER CORPORATION
CHICAGO, U. S. A.

 **PRICE LIST OF REPAIR PARTS WILL BE FOUND ON PAGE 28.**



Our support email:

ebooklibonline@outlook.com