




9802/7610 L1-2-1 ENGINE, SHORT LD BUILD

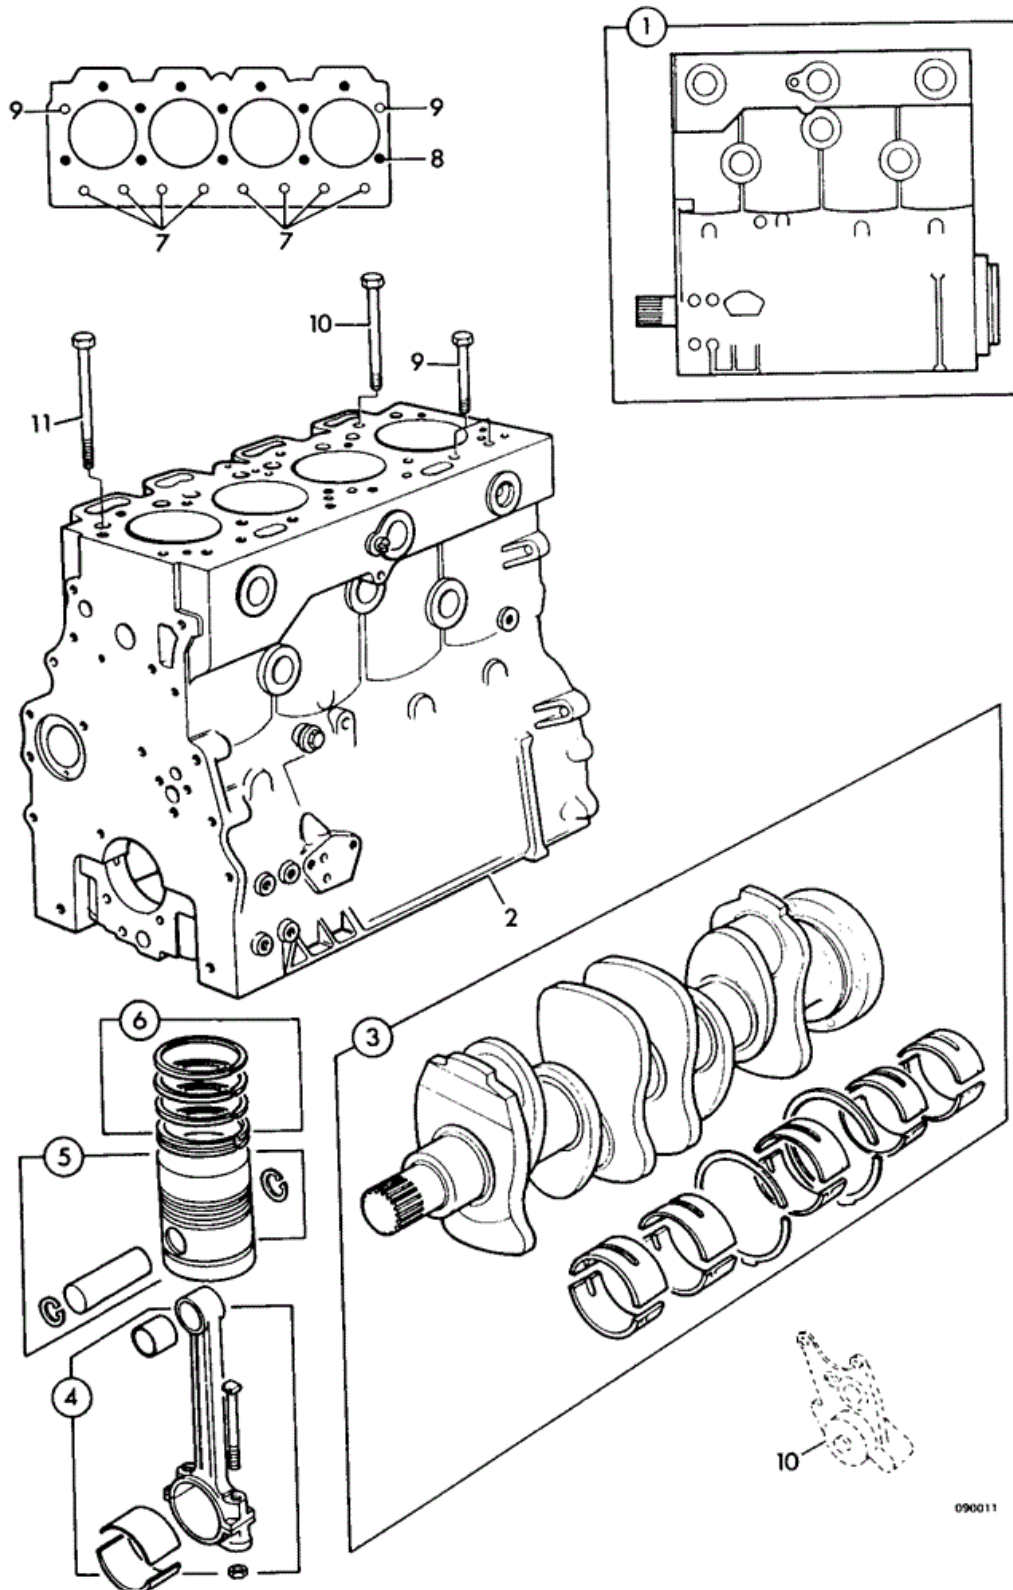


090011

Item	Part #	Change No	Description	Usage Code	QTY
1	02/101911		Engine metric short		1
2	****		'See Remark' <i>See L1-3-1 Cylinder Block Assembly</i>		1
3	****		'See Remark' <i>See L1-4-1 Crankshaft Assembly</i>		1
4	****		'See Remark' <i>See L1-4-1 Connecting Rod Assembly</i>		4
5	****		'See Remark' <i>See L1-4-1 Piston Assembly</i>		4
6	****		'See Remark' <i>See L1-4-1 Piston Ring Kit</i>		4
7	****		'See Remark' <i>See L1-3-1 Bolt - Cylinder Head</i>		8
8	****		'See Remark' <i>See L1-3-1 Bolt - Cylinder Head</i>		12
9	****		'See Remark' <i>See L1-3-1 Bolt - Cylinder Head</i>		2
10	****		'See Remark' <i>See L5-1-1 Oil Pump</i> <i>See Note 1</i>		1

Note 1: Not included in item 1.




9802/7610 L1-3-1 BLOCK ASSEMBLY LD BUILD

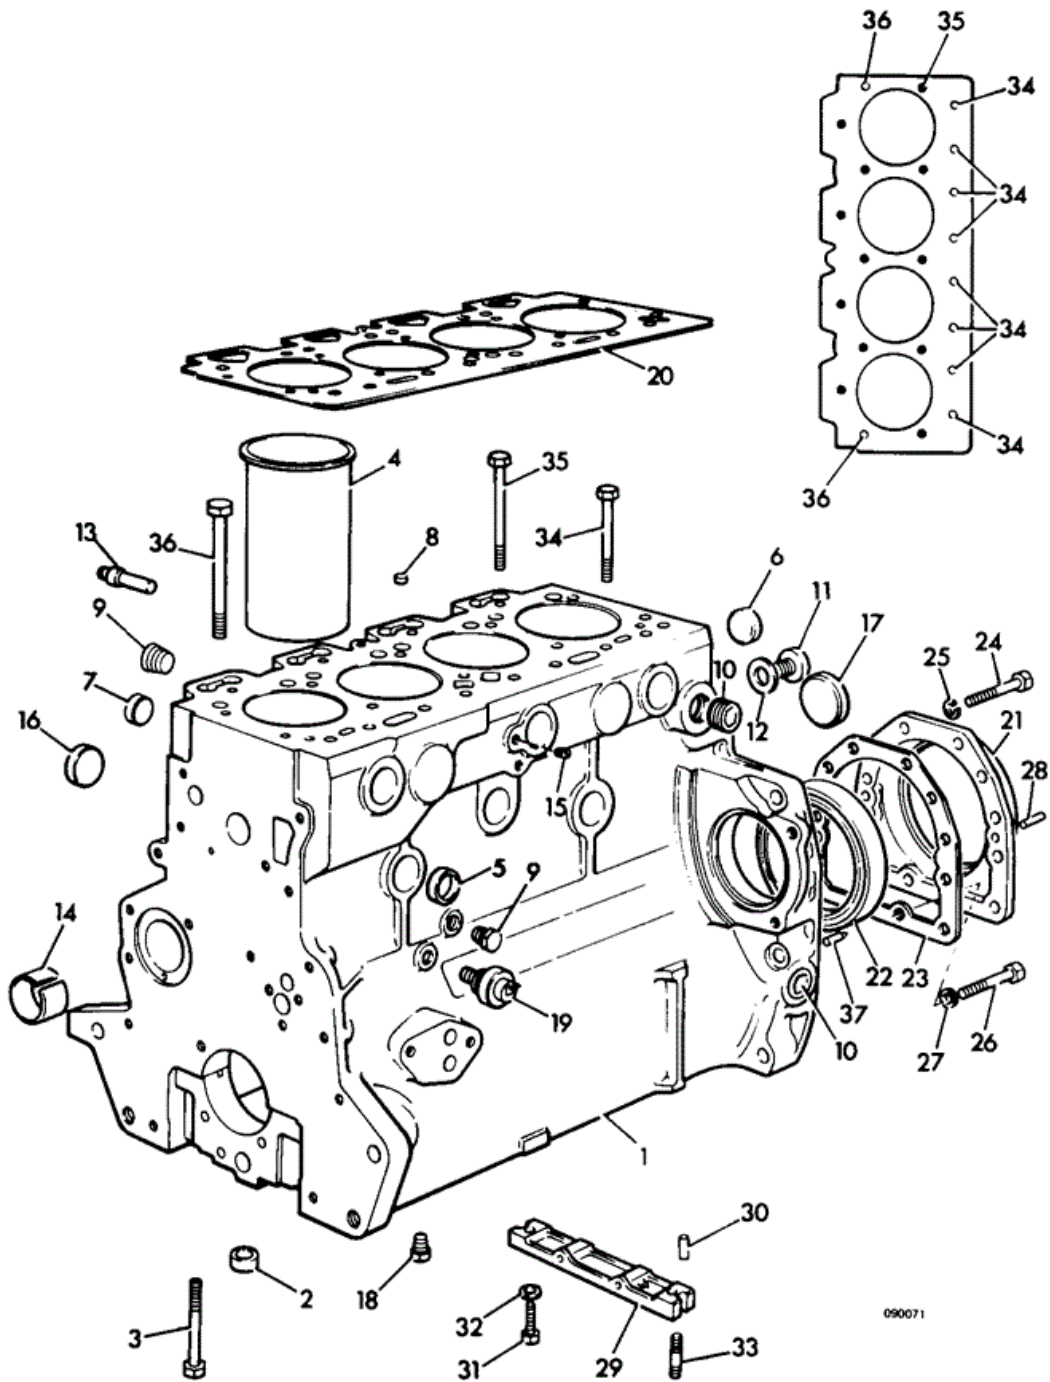

Item	Part #	Change No	Description	Usage Code	QTY
1	02/101881		Block assembly, cylinder		1
2	:02/100101		Thimble		10
3	:02/100102		Bolt		10
4	:02/101758		Liner Press fit		4
4	02/101773		Liner Slip fit		4
5	:02/100105		Plug core D=32mm		6
6	:02/100105		Plug core D=32mm		2
7	:02/100106		Plug core D=35mm		4
8	:02/100108		Plug		1
9	:02/100132		Plug drain <i>Water Drain</i>		2
9	:02/100335		Tap drain <i>Alternative</i>		2
10	:02/100134		Plug		3
11	02/100111		Plug		1
12	823/00276		Washer		1
13	:02/101827		Plug		1
14	:02/192001		Bush camshaft		1
15	02/101810		Plug		1
16	02/100110		Plug core D=38mm		4
17	02/100107		Plug core D=50mm		1
18	02/100133		Plug		1
19	701/06500		Switch oil pressure		1
20	02/101879		Gasket cylinder head		1
21	02/101704		Housing rear seal		1
22	02/101436		Seal rear oil		1
23	02/100113		Gasket rear seal housing		1
24	1305/0106Z		Bolt 5/16"UNF x 1" long		10
25	1410/0002Z		Washer (5/16" Small)		10
26	1381/3106		Capscrew		2
27	02/100307		Washer		2
28	02/100308		Dowel		2
29	02/101790		Bridge piece		1
30	02/100112		Seal		2
31	826/00759		Bolt		2
32	02/100309		Washer		2
33	02/101791		Stud		2
34	02/101762		Bolt 103mm		8
35	02/101761		Bolt 119mm		12
36	02/101760		Bolt 140mm		2
37	02/100136		Pointer Timing		1


JCB 9802/7610 L1-4-1 CRANKSHAFT, BEARINGS PISTONS, CON-RODS PULLEY & FAN BELT, LD BUILD

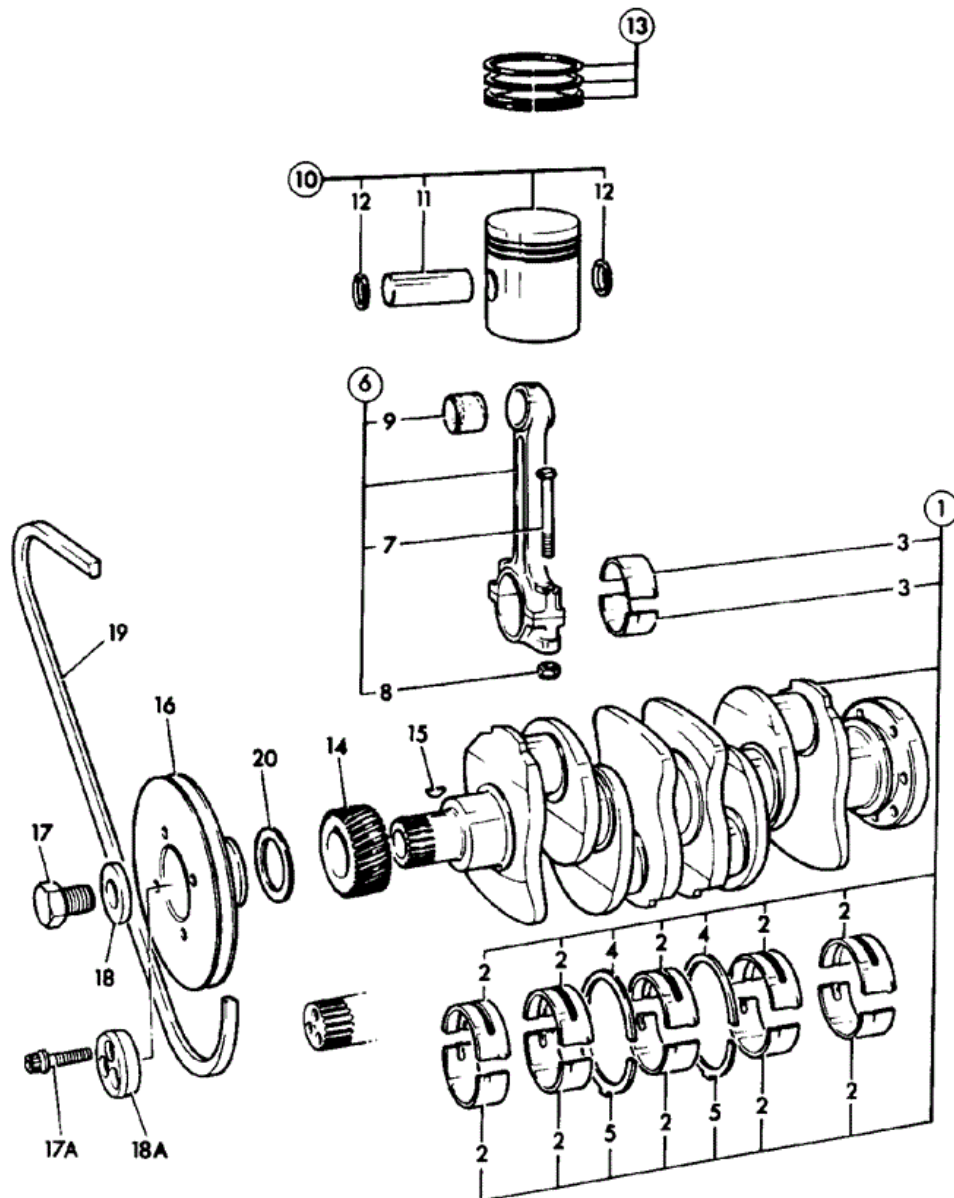

064512

Item	Part #	Change No	Description	Usage Code	QTY
1	02/101825		Crankshaft assembly <i>Includes items 17A & 18A</i>	P/Ex	1

2	:02/192002	Kit-bearing Main Standard	1
2	02/192003	Kit-bearing Main Undersize - .010inch	1
2	02/192004	Kit-bearing Main Undersize - .020inch	1
2	02/192005	Kit-bearing Main Undersize - .030inch	1
3	:02/192006	Kit-bearing big end standard	1
3	02/192007	Kit-bearing Big end Undersize - .010inch	1
3	02/192008	Kit-bearing Big end Undersize - .020inch	1
3	02/192009	Kit-bearing Big end Undersize - .030inch	1
4	:02/192083	Washer thrust top - standard	2
4	02/192011	Washer thrust top-oversize 0.19mm	2
5	:02/192084	Washer thrust bottom - standard	2
5	02/192013	Washer thrust btm-oversize 0.19mm	2
6	02/101440	Rod assembly Connecting	4
7	:02/100127	Bolt	2
8	:02/100128	Nut	2
9	:02/192015	Bush small end	1
10	02/100007	Piston assembly 5 ring	4
10	02/100008	Piston assembly Oversize - .030inch	0
11	:N.S.P.	None serviced part <i>Gudgeon pin</i>	1
12	:2203/1040	Circlip	2
13	02/101438	Kit-piston ring	4
13	02/100010	Kit-piston ring oversize - .030 inch	0
13	02/100011	Kit-piston ring service	0
14	02/190001	Gear crankshaft	1
15	02/100038	Key	1
16	02/101736	Pulley Crankshaft	1
17A	02/101813	Capscrew	3
18A	02/101812	Block Thrust	1
19	990/47900	Belt Drive - pair	1

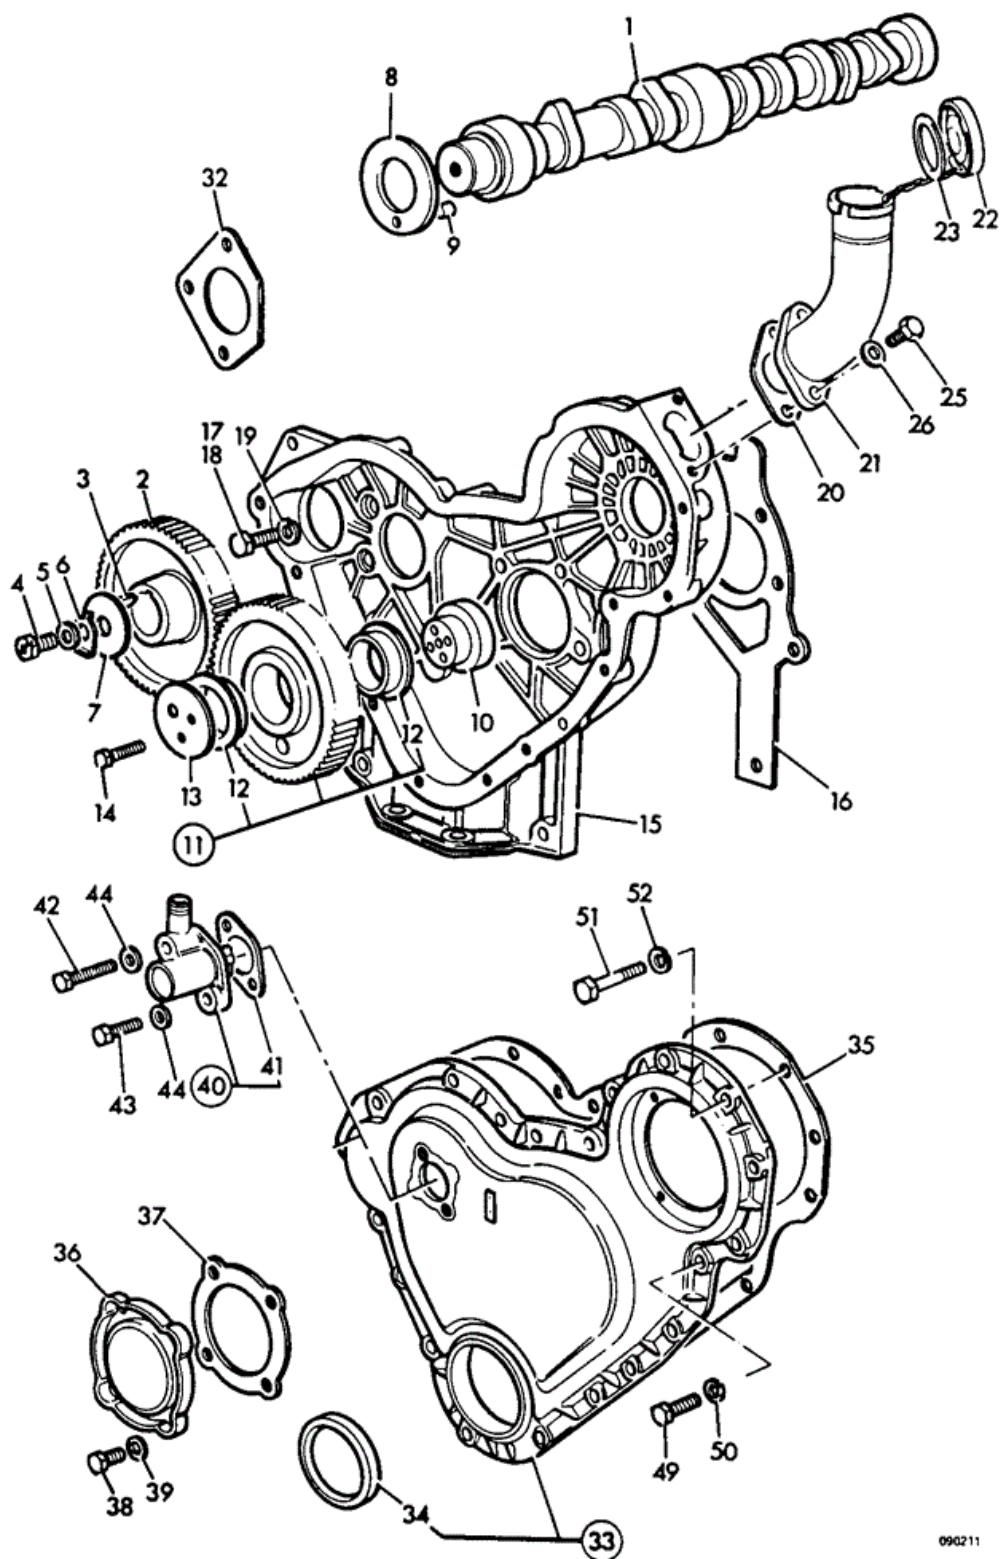


090211

Item	Part #	Change No	Description	Usage Code	QTY
1	02/101890		Camshaft		1
2	02/190032		Gear camshaft		1
3	02/100038		Key		1
4	02/100312		Bolt		1
5	02/100306		Washer		1

6	02/100305		Washer tab		1
7	02/100313		Plate thrust		1
8	02/192046		Washer thrust		1
9	2102/0604		Dowel		1
10	02/100041		Hub		1
11	02/190003		Gear Idler		1
12	:02/192016		Bush		2
13	02/100042		Plate		1
14	02/101905		Screw hexagon head		3
15	02/100002		Casing timing		1
16	02/101891		Gasket timing case		1
17	1305/0105Z		Bolt		8
18	1305/0106Z		Bolt 5/16"UNF x 1" long		1
19	823/00268		Washer spring		9
20	02/100140		Gasket		1
21	02/101483		Tube oil filler assembly		1
22	:02/101484		Cap oil filler		1
23	:02/100421		Seal		1
25	1305/0104Z		Setscrew (5/16" UNF x 3/4")		2
26	823/00268		Washer spring		2
32	02/100143		Gasket		1
33	02/100944		Cover timing		1
34	02/101435		Seal front oil		1
35	02/100006		Gasket timing cover		1
36	02/101796		Cover Inspection		1
37	02/100145		Gasket		1
38	1305/0103Z		Screw		4
39	823/00268		Washer spring		4
40	02/300113		Drive Tachometer		1
41	02/100146		Gasket		1
42	1305/3010Z		Bolt		1
43	1305/0004Z		Bolt		1
44	823/00267		Washer		2
49	1305/0105Z		Bolt <i>7/8"Long</i>		14
50	823/00268		Washer spring		14
51	1305/3118Z		Bolt 5/16"UNF x 2.5" long <i>2.1/2"Long</i>		4
52	823/00268		Washer spring		4



9802/7610 L1-6-1 FLYWHEEL & HOUSING LD BUILD

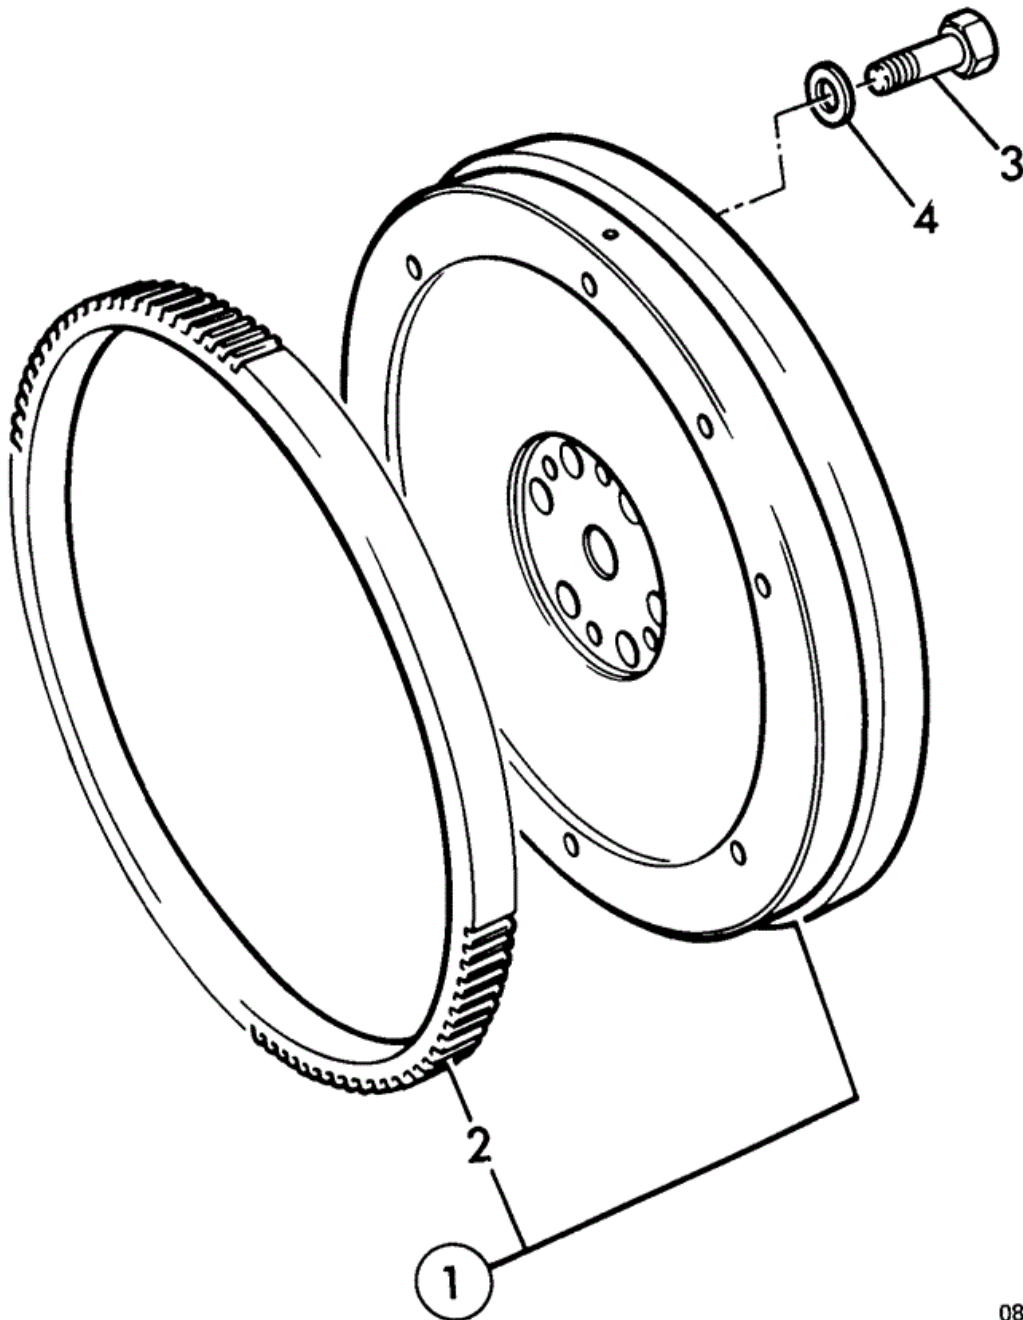


089940

Item	Part #	Change No	Description	Usage Code	QTY
A	****		'See Remark' <i>Flywheel housing See F5-6-1 & F5-2-1</i>		0
B	****		'See Remark' <i>Torque convertor See F5-6-1</i>		0
C	****		'See Remark' <i>Drive plate kit See F5-6-1</i>		0
1	02/101737		Flywheel assembly		1
2	:02/100078		Gear starter ring		1
3	1305/0407		Bolt		6
4	02/100614		Washer		6




9802/7610 L1-7-1 ENGINE MOUNTINGS

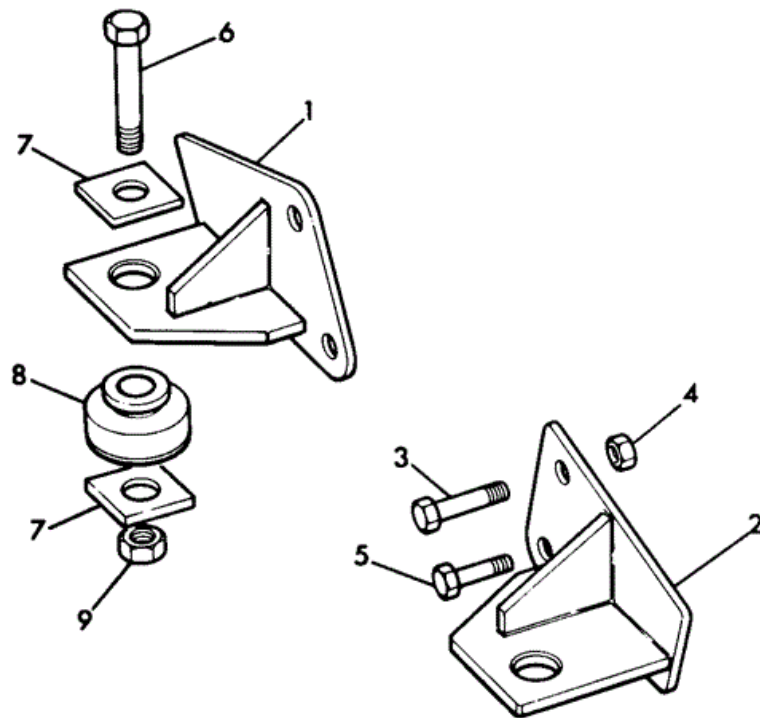

Item	Part #	Change No	Description	Usage Code	QTY
1	190/74600		Bracket engine mounting <i>Front L.H.</i>		1
2	190/25500		Bracket engine mounting right hand <i>Front R.H.</i>		1
3	1315/3716		Bolt		2
4	1370/0603Z		Nut lock M16		2
5	1315/0710Z		Setscrew		2
6	1305/3424		Bolt		2
7	111/15709		Washer		4
8	111/30101		Mounting metalastik		2
9	1340/0403Z		Nut lock		2




9802/7610 L2-1-1 CYLINDER HEAD LD BUILD

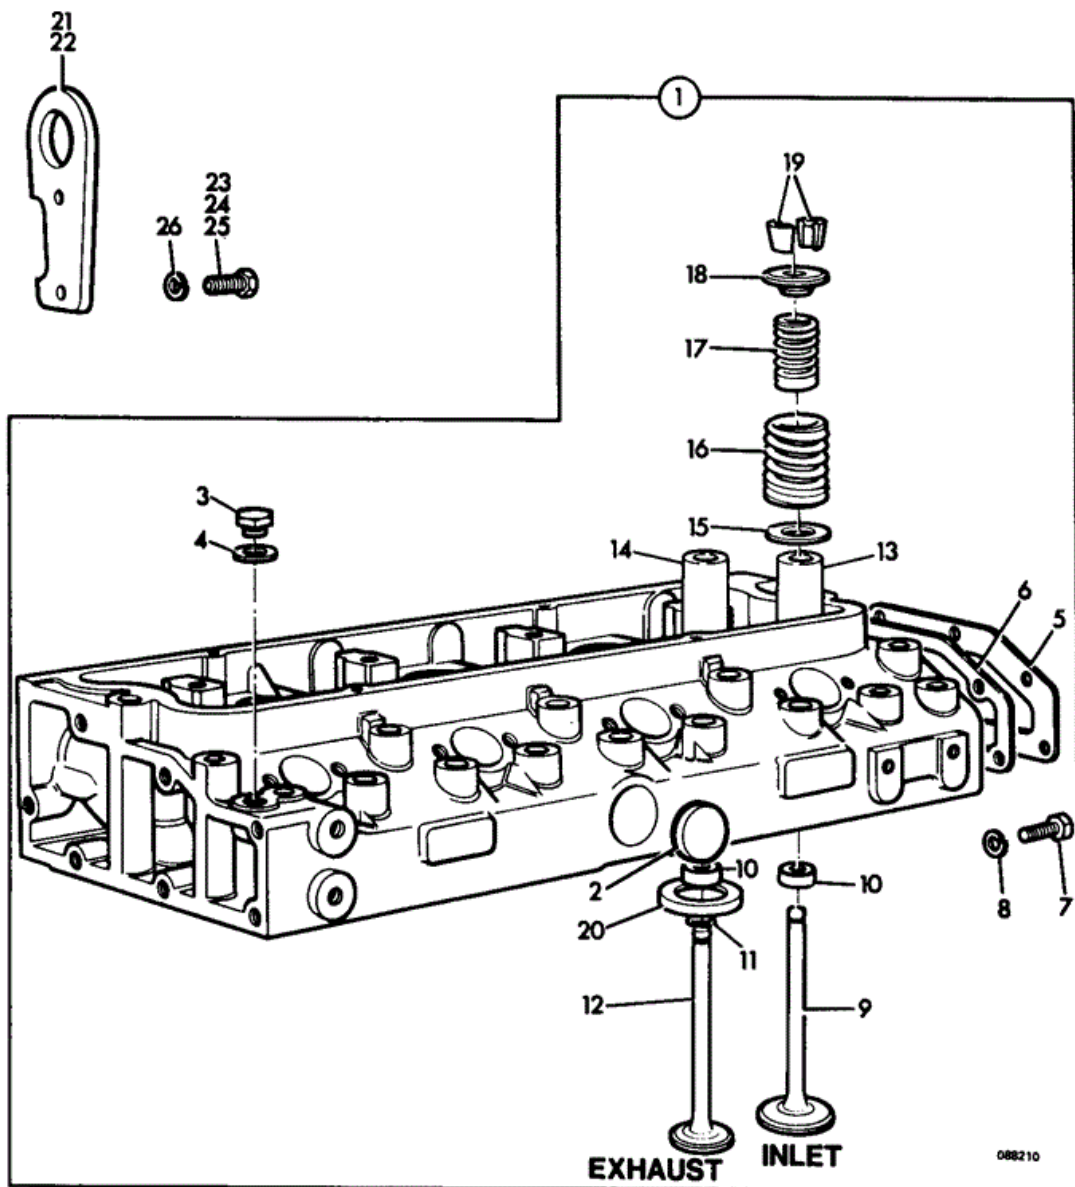

Item	Part #	Change No	Description	Usage Code	QTY
1	02/101882	Superseded	Head assembly, cylinder		1
1	02/101924		Head assembly, cylinder		1
2	:02/100105	Superseded	Plug core D=32mm		1
2	:02/100396		Plug core D=32mm		1
3	:02/100148		Plug		1
4	:823/00361		Washer		1
5	:02/101784		Cover		1
6	:02/101785		Gasket		1
7	:1305/0104Z		Setscrew (5/16" UNF x 3/4")		4
7	:1305/0204Z		Bolt 3/8"		2
8	:823/00268		Washer spring		4
8	:823/00269		Washer spring		2
9	:02/100022		Valve Inlet Standard		4
9	02/100212		Valve Inlet Standard <i>Used only with 02/101924</i>		4
10	:02/100668		Seal valve		8
11	:02/100026		O Ring		4
12	:02/100023		Valve Exhaust Standard		4
12	02/101607		Valve exhaust standard <i>Used only with 02/101924</i>		4
13	:02/101883		Guide inlet valve		4
14	:02/101884		Guide exhaust valve		4
15	:02/100638		Seat spring		8
16	:02/100019		Spring valve outer		8
17	:02/100018		Spring valve, inner		8
18	:02/100021		Holder Collet		8
19	:02/100024		Collet <i>Serviced in pairs</i>		8
20	02/100621		Insert valve seat exhaust		0
21	02/100157		Plate lifting <i>Rear</i>		1
22	02/100157		Plate lifting <i>Front</i>		1
23	1305/0205Z		Bolt <i>Rear plate bottom</i>		1
24	1305/0206Z		Setscrew (3/8" UNF x1") <i>Rear plate top</i>		1
25	1305/0210Z		Bolt <i>Front plate</i>		2
26	823/00269		Washer spring		4



9802/7610 L2-2-1 ROCKER COVER LD BUILD

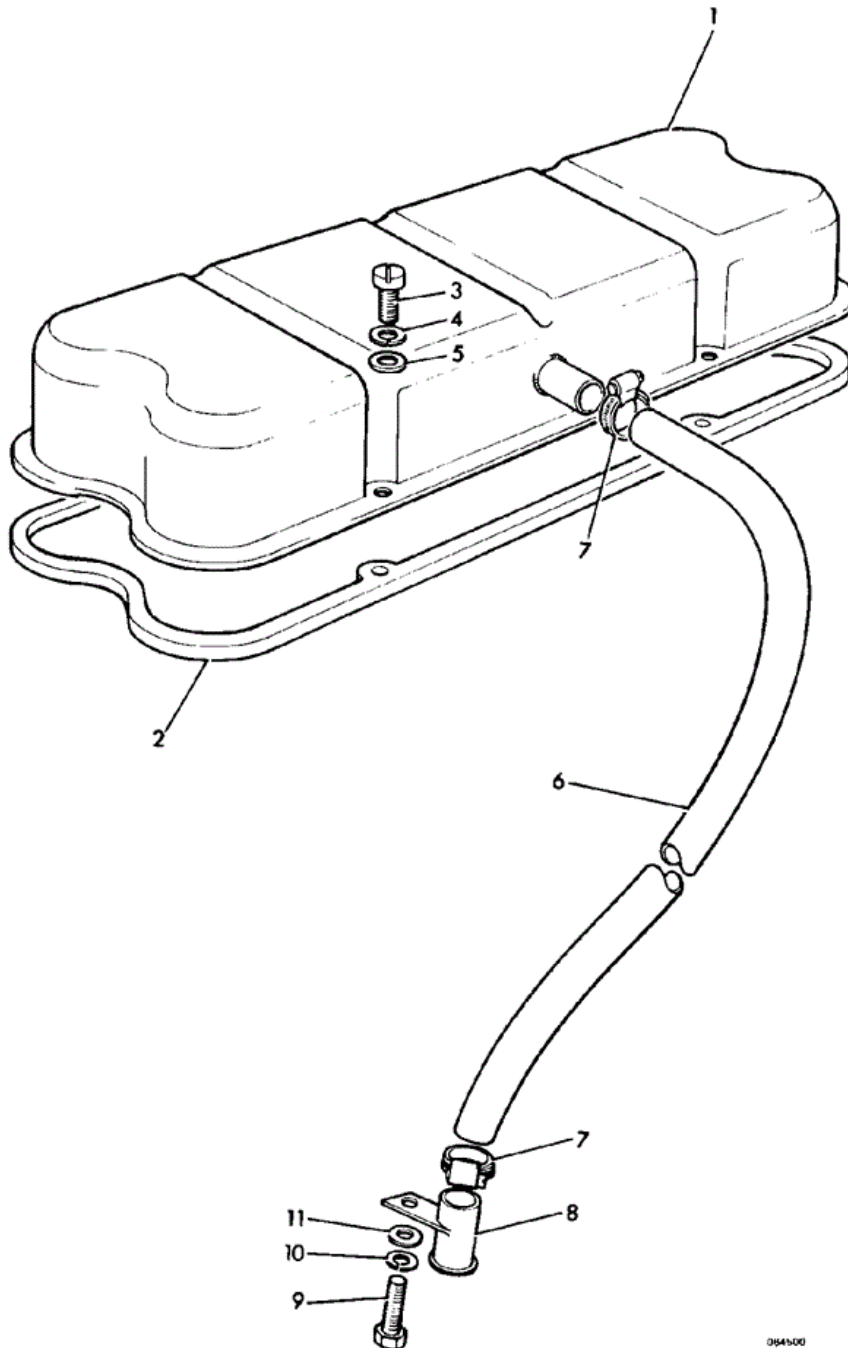

094500

Item	Part #	Change No	Description	Usage Code	QTY
1	02/100035		Cover rocker		1
2	02/101749		Gasket rocker cover		1
3	1305/0003Z		Screw 1/4 UNF x .625		4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com