


McCormick-Deering Tractor Mower

Operators Manual

MC-D 5013

Reprinted



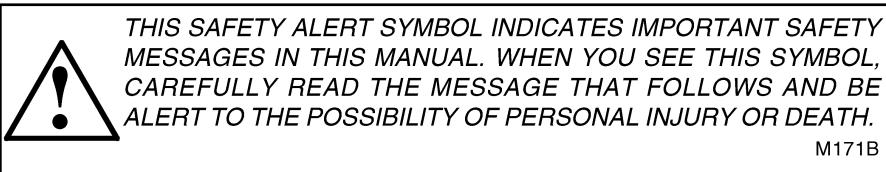




If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

Preserve This Pamphlet

Master

Instruction Manual

Setting Up and Operating McCormick-Deering Tractor Mower No. 25

See page 2 for Tractors Used On

Important!

Lubricant has been drained from gear case. See Instructions on pages 24 and 34.

With "exploded" views and parts list

Important:

This pamphlet contains instructions for setting up and operating and, in addition, a parts list with detailed illustrations of the various units arranged so that parts wanted may readily be located.

INTERNATIONAL HARVESTER COMPANY

180 NORTH MICHIGAN AVE. CHICAGO, ILLINOIS, U.S.A.

GENERAL INDEX

Tractor Used On	For Attachi Instruction see pages:
I.H.C. Farmall "A" Tractor.	7
I.H.C. Farmall "B" Tractor.	8
I.H.C. Farmall "H" and "M" Tractors	8,26,31,32
I.H.C. F-12 and F-14 Farmall Tractors	6,32
I.H.C. F-20 and F-30 Farmall Tractors	6,7,28,33
I.H.C. O-14 Tractor	11,29,30
I.H.C. W-4, W-6 and WD-6 Tractors	10,26
I.H.C. 10-20 and W-30 Tractors.	4,27
I.H.C. 15-30 and W-40 Tractors.	5,27
I.H.C. T-6, TD-6, T-9 and TD-9 TracTracTors	9,27
I.H.C. T-20 TracTracTor	9,27
Allis-Chalmers "RC" Tractor	13,26
Allis-Chalmers "UC" Tractor	13,26
Allis-Chalmers "WC" Tractor	13,26
J.I. Case "DC" Tractor.	14,26
J.I. Case "RC" Tractor.	14,26
John Deere Model "A" Tractor.	11,26
John Deere Model "B" Tractor.	11,26
John Deere Model "G" Tractor.	12,27
John Deere Model "H" Tractor.	12,26
Ford-Ferguson Tractor	15,26
Massey-Harris No. 101 Tractor	15,26
Minneapolis-Moline Universal "R" Tractor.	17,26
Minneapolis-Moline Universal "Z" Tractor.	16,26
Oliver No. 70 Tractor	16,26

INSTRUCTIONS FOR SETTING UP

(Operating Instructions are on page 34)

Remove all wires and arrange parts conveniently.

Oil all bearings and moving parts as you proceed, and see that they work freely.

Bolts must be used in the holes in which they are found, or in parts to which they are attached, unless otherwise shown.

Shaded portions in the illustrations show parts to be assembled; these must be placed on the machine in the order numbered.

Wherever the terms "left" or "right" are used, it should be understood to mean from a position behind and facing the machine.

We reserve the right to make changes or improvements in the design or construction of any part without incurring the obligation to install such changes on any machine previously delivered.

10-20 AND W-30 TRACTORS

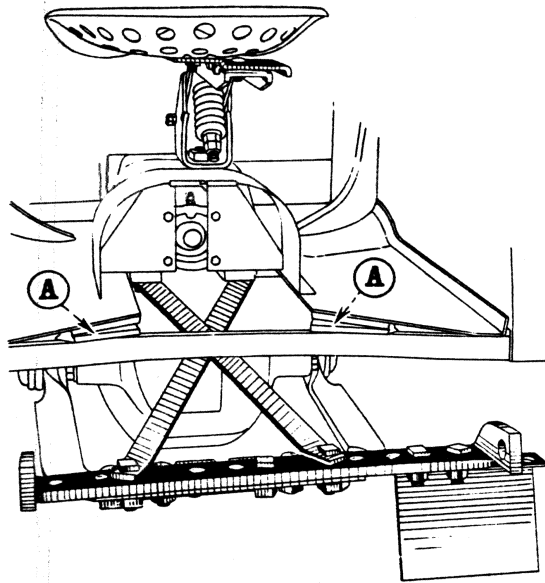


Illustration No. 1

Attach shield extension plate, main frame pivot, braces, coupling bar shield, spacers at "A", and seat spring extension, as illustrated.

NOTE: Bolts will be found with hitch parts.

15-30 AND W-40 TRACTORS

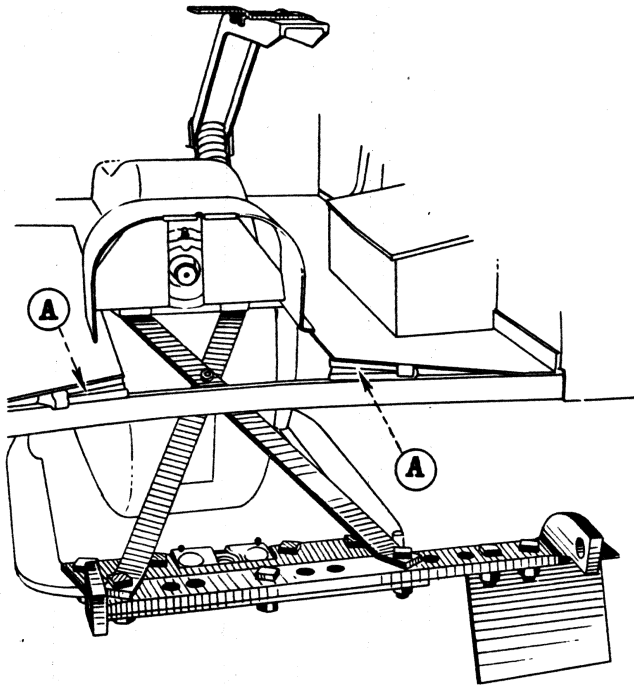
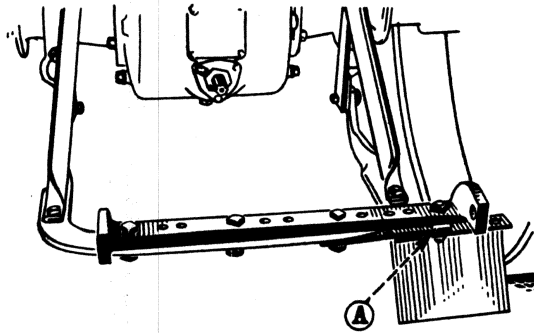


Illustration No. 2


Attach telescoping shield bracket, extension plate, main frame pivot, braces, coupling bar brace shield, spacers at "A", and seat spring extension, as illustrated.

NOTE: Bolts will be found with hitch parts.

F-12 AND F-14 FARMALL TRACTORS**Illustration No. 3**

Attach main frame pivot and coupling bar brace shield, using spacer at "A" as illustrated.

NOTE: Bolts will be found with hitch parts.

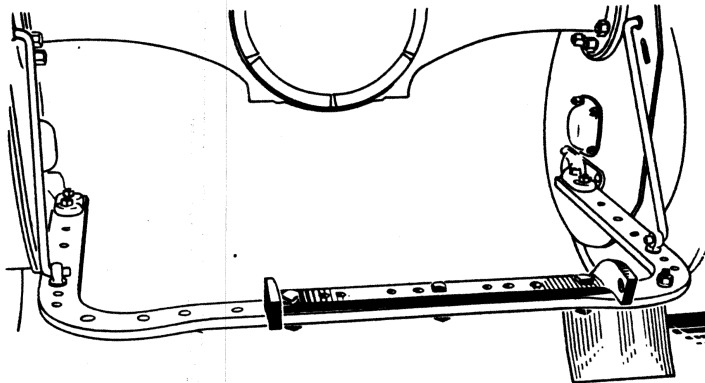F-20 REGULAR TREAD AND F-30 FARMALL TRACTORS**Illustration No. 4**

Attach main frame pivot and coupling bar brace shield as illustrated.

NOTE: Bolts will be found with hitch parts.

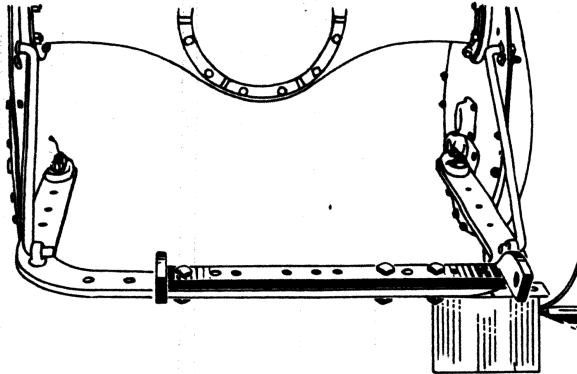
F-20 NARROW TREAD FARMALL TRACTOR

Illustration No. 5

Attach main frame pivot and coupling bar brace shield as illustrated.

NOTE: Bolts will be found with hitch parts.

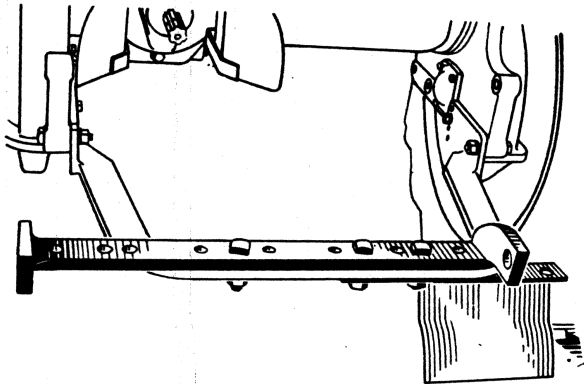
FARMALL-A TRACTOR

Illustration No. 6

Attach main frame pivot and coupling bar brace shield as illustrated.

NOTE: Bolts will be found with hitch parts.



Our support email:

ebooklibonline@outlook.com