

580N
580SN-WT
580SN
590SN
Loader Backhoe

OPERATOR'S MANUAL

Part number 84482502

2nd edition English

October 2011

Replaces part number 84261053



Contents

1 GENERAL INFORMATION

Intended use.....	1-1
CNH America LLC technical manuals.....	1-1
Electro-Magnetic Compatibility (EMC)	1-2
Note to the owner.....	1-2
Read the Operator's Manual	1-3
Manual storage	1-3
Identification numbers	1-4
Component Identification	1-7
Right, left, front and rear of the machine	1-8

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Proposition 65	2-2
Safety rules - General	2-3
Safety rules - Air conditioning system	2-3
Safety rules - Basic operating	2-4
Safety rules - Battery	2-6
Safety rules - Electrical storm safety	2-7
Safety rules - Fire or explosion prevention	2-7
Safety rules - Fuel handling precautions	2-8
Safety rules - Hazardous chemicals	2-8
Safety rules - Lifting and overhead loads	2-8
Safety rules - Maintenance precautions	2-9
Safety rules - Mounting and dismounting	2-10
Safety rules - Operator precautions	2-10
Safety rules - Specific precautions to this machine	2-11
Safety rules - Transporting precautions	2-11
Safety rules - Utility precautions	2-12
Safety rules - Wheels and tires	2-12
Ductile iron	2-13
Operator protective structure	2-13
Seat belt	2-14
Safety decals	2-15
Bucket and hydraulic coupler decals	2-29
Hand signals.....	2-34
Do Not Operate hang tag.....	2-38

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Machine access	3-1
----------------------	-----

OPERATOR'S SEAT

Operator seat.....	3-2
--------------------	-----

FORWARD CONTROLS

Front console - Left-hand switch panel	3-6
Front console - Right-hand switch panel	3-8
Steering column	3-9
Gear selector	3-11
Pedal controls	3-13

RIGHT-HAND SIDE CONTROLS

Loader functions	3-14
Console controls	3-18
Heating, ventilation or air-conditioning control	3-20
Instrument cluster	3-26
Advanced instrument cluster	3-30

REARWARD CONTROLS

Console controls	3-38
Backhoe controls - Mechanical	3-41
Backhoe controls - Pilot	3-47

OVERHEAD CONTROLS

Dome light	3-52
------------------	------

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Run in period of a new machine	4-1
Engine speed	4-1

STARTING THE UNIT

Before starting the engine	4-2
Normal engine starting	4-3
Cold temperature operation	4-4
Hot temperature operation	4-5
Booster battery procedure	4-6

STOPPING THE UNIT

Shutting down the engine	4-7
--------------------------------	-----

MOVING THE UNIT

Before operating the machine	4-8
Uniform braking	4-9
Transmission gears	4-10
Machine direction	4-12
Traveling on a hill	4-12
Differential lock system	4-12
Ride control	4-13

5 TRANSPORT OPERATIONS

RECOVERY TRANSPORT

Towing the machine	5-1
Transporting on a trailer	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

FNR shift sensitivity	6-1
Display brightness	6-2
Maximum throttle/Cold start idle	6-3
Brake enabled idle	6-5
Throttle sensitivity	6-7

LOADER OPERATIONS

Personal safety	6-8
Job layout	6-9
Comfort Steer	6-10
Detent position for 4 in 1 bucket control switch	6-11
Loader digging force	6-14
Bucket level, position and depth indicators	6-16
Return to dig	6-18
Lifting with the loader	6-20
Changing loader attachments	6-20

BACKHOE OPERATIONS

Personal safety	6-23
Basic instructions	6-23
Backhoe danger area	6-24
Swing lock	6-25
Extendahoe lock	6-25
Stabilizer pads	6-26
Backhoe transport position	6-28
Before operating the backhoe	6-30
Filling the backhoe bucket	6-32
Power lift	6-33
Moving the machine while digging	6-34
Lifting with the backhoe	6-35
Changing backhoe attachments	6-37

7 MAINTENANCE

GENERAL INFORMATION

Safety rules	7-1
General safety before you service	7-2

Hour meter	7-2
Support strut for loader lift arm	7-3
Hood latch	7-5
Fire extinguisher	7-6
Welding on the machine	7-7
Battery access and care	7-8
Capacities	7-10
Consumables	7-12
Fuses and relays	7-14
Definition Fuse, Relay and Diode Icon definitions	7-17
Diagnostic/service tool port	7-22
Heater coolant shutoff valve	7-22

MAINTENANCE CHART

Maintenance Chart	7-23
-------------------------	------

At warning message display

Engine air filters	7-25
Hydraulic filter(s)	7-27
Fuel system water separator	7-28

Initial 10 hours

Air conditioning belt	7-30
Wheel nut and bolt torque	7-32

Every 10 hours or daily

Engine oil level	7-33
Loader, backhoe, extendahoe grease fittings	7-35

Initial 20 hours

Transmission fluid level	7-44
Front axle fluid level - Four wheel drive	7-45
Rear axle fluid level	7-46

Every 50 hours

Fuel system water separator	7-47
Coolant reservoir (deaeration reservoir) fluid level	7-50
Hydraulic reservoir fluid level	7-51
Front axle grease fittings	7-52
Loader hydraulic coupler lock pins	7-53
4 in 1 bucket pivots and grease fittings	7-53

Initial 100 hours

Hydraulic filter(s)	7-55
Transmission filter	7-57
Fuel filters	7-59
Service brakes	7-62

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com