

CX350C
Tier 4
Crawler Excavator

OPERATOR'S MANUAL

Part number 84406998
1st edition English
January 2011



Contents

1 GENERAL INFORMATION

Safety rules and signal word definitions	1-1
Safety rules	1-2
Note to the Owner	1-3
Product identification	1-5
Left, right, front and rear of the machine	1-8
Electro-magnetic interference (EMC).....	1-8
Description of the main components	1-9

2 SAFETY INFORMATION

Safety rules	2-1
Safety decals	2-7
Hand signals.....	2-21

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

FRAME AND CAB - Access/Exit	3-1
Position of the operator's compartment controls and accessories	3-3

OPERATOR'S SEAT

Air suspension seat adjustments	3-5
---------------------------------------	-----

FORWARD CONTROLS

Hand control levers and pedals	3-8
Windshield.....	3-12
Front lower window	3-13
Front right hand console.....	3-14
System display and function control panel	3-15
Monitor switches.....	3-21
Menu screen display	3-24
Diesel particulate diffuser.....	3-32
Clock adjustment	3-39

LEFT-HAND SIDE CONTROLS

Left-hand control arm.....	3-40
Heating, ventilation or air-conditioning control	3-41
Function cancellation lever and safety bar	3-45
Cab internal lighting	3-46
Emergency exit hammer	3-46
Tool quick coupler locking and unlocking control switch (Optional)	3-47
Sliding windows on door.....	3-47

RIGHT-HAND SIDE CONTROLS

Right-hand control arm	3-48
Cab radio	3-49
Right hand console	3-51
Coat hanger hook	3-52
Cup holder.....	3-52

REARWARD CONTROLS

Fuse box.....	3-53
Magazine rack	3-53
Refrigerated compartment.....	3-54
Storage compartment	3-54

OVERHEAD CONTROLS

Roof curtain.....	3-55
Roof hatch.....	3-55
Sun shield (optional)	3-55

EXTERIOR CONTROLS

Fuel tank.....	3-56
Rear view mirrors.....	3-57
Cameras.....	3-58
Front storage box.....	3-58
Side doors	3-59
Engine hood.....	3-60
Lower panels	3-61
Windshield washer reservoir	3-61
Load handling eyes.....	3-62
Towing holes.....	3-63
Safety valves (optional)	3-64
Optional tool supply valves (optional)	3-64
Fuel tank filler pump (if equipped)	3-65
Cab protection (ROPS and FOPS) (optional)	3-67

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

USER PLATFORM - Operating.....	4-1
USER PLATFORM - Running-in Procedure.....	4-3

STARTING THE UNIT

Anti-theft protection.....	4-4
Starting the engine	4-7
Bringing the machine up to operating temperature.....	4-9
Engine operation	4-10
Operating the machine in hot or cold weather.....	4-11
Machine operation.....	4-12

STOPPING THE UNIT

Stopping the engine	4-13
---------------------------	------

MOVING THE UNIT

Machine travel	4-14
Handling the machine	4-17
Load handling	4-18
Operating the machine	4-20
Quick coupler (optional)	4-22
Lowering the attachment in the event of a failure	4-27
Auxiliary hydraulic circuits	4-28
Optional hand control levers configuration	4-34

PARKING THE UNIT

Parking the machine.....	4-35
--------------------------	------

5 TRANSPORT OPERATIONS

SHIPPING TRANSPORT

Transporting the machine	5-1
--------------------------------	-----

RECOVERY TRANSPORT

Towing	5-6
--------------	-----

6 MAINTENANCE

GENERAL INFORMATION

Basic instructions	6-1
Fluids, fuels and lubricants	6-4
Fluid capacities and lubricant specifications	6-8
Grease points.....	6-9
Levels.....	6-17
Engine	6-19
Cooling system	6-22
Fuel system.....	6-25
Releasing pressure in the hydraulic system.....	6-30
Hydraulic circuit.....	6-32
Air filter	6-41
Swing reduction gear	6-45
Travel reduction gears.....	6-47
Tracks	6-48
Track rollers and idler wheels	6-51
Radiator and coolers	6-52
Fan and alternator drive belt	6-54
Adjustment of engine valve rocker clearances	6-55
Fuel tank filter	6-55
Fire extinguisher (not supplied)	6-56

Protecting the Electrical/Electronic Systems During Charging or Welding	6-56
Cab protection (ROPS and FOPS) (optional)	6-57
Machine inspection and cleaning	6-57
Checking the machine settings	6-57
Plastic and resin parts	6-58
Checking the cylinders for leaks	6-58
Tooth tip wear limits on the backhoe bucket	6-58
Replacing a tooth on a backhoe bucket	6-59
Replacing a backhoe bucket	6-60
Checking the opening of the quick coupler locking hook (optional)	6-61
Air conditioning	6-63
Diesel particulate diffuser	6-66
Gas spring inspection	6-67
Torque specifications for hardware	6-68
Fuses	6-69
Batteries	6-71
Alternator	6-75
Starter motor	6-75
Bulb replacement	6-76

MAINTENANCE CHART

Maintenance Chart	6-79
-------------------------	------

STORAGE

Preparation for storage	6-83
Periodic checks	6-84
Starting up after storage	6-85

7 TROUBLESHOOTING

FAULT CODE RESOLUTION

Engine troubleshooting	7-1
------------------------------	-----

8 SPECIFICATIONS

General specification	8-1
Noise level	8-3
Weight	8-3
Dimension	8-4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com