



# ***Operation & Maintenance Manual***

*Original Instructions  
Keep this manual with machine at all times.*

## ***Models TH414C GC TH417C GC***

S/N KRF00150 & After  
S/N LYN00150 & After  
S/N NAB00150 & After  
S/N NMM00150 & After

**31200957**

*Revised  
October 1, 2014*

---

**TABLE OF CONTENTS**

**Revision Log**

**Read This First**

Operator Qualifications ..... b  
 Modifications..... b  
 Other Publications Available ..... d

**Table of Contents**

**Section 1 - General Safety Practices**

1.1 Hazard Classification System ..... 1-1  
     Safety Alert System and Safety Signal Words..... 1-1  
 1.2 General Precautions ..... 1-1  
 1.3 Operation Safety..... 1-2  
     Electrical Hazards..... 1-2  
     Tip Over Hazard ..... 1-3  
     Travel Hazard..... 1-6  
     Load Falling Hazard ..... 1-7  
     Lifting Personnel..... 1-8  
     Driving Hazards on Slopes..... 1-9  
     Pinch Points and Crush Hazards..... 1-10  
     Fall Hazard..... 1-12  
     Chemical Hazards ..... 1-13

**Section 2 - Pre-Operation and Inspection**

2.1 Pre-Operation Check and Inspection..... 2-1  
 2.2 Safety Decals ..... 2-3  
 2.3 Walk-Around Inspection ..... 2-6  
 2.4 Warm-Up and Operational Checks ..... 2-8  
     Warm-Up Check ..... 2-8  
     Operational Check..... 2-8  
 2.5 Operator Cab..... 2-9  
 2.6 Windows ..... 2-10  
     Cab Door Window ..... 2-10  
     Rear Window ..... 2-11

**Section 3 - Controls and Indicators**

3.1 General ..... 3-1  
 3.2 Controls..... 3-2  
     Instrument Cluster..... 3-4  
     Ignition ..... 3-6  
     Park Brake ..... 3-7  
     Parking Procedure..... 3-7  
     Transmission Control Lever (if equipped)..... 3-8

## Table of Contents

---

|     |   |      |
|-----|---|------|
|     | Load Stability Indicator - LSI .....        | 3-10 |
|     | Steering Column Adjuster.....               | 3-12 |
|     | Joystick .....                              | 3-14 |
|     | Console Switches.....                       | 3-20 |
|     | Accessory Control Lever.....                | 3-22 |
| 3.3 | Anti Theft .....                            | 3-23 |
| 3.4 | Steer Modes .....                           | 3-24 |
|     | Manual Steering Alignment Mode Change ..... | 3-24 |
| 3.5 | Operator Seat .....                         | 3-25 |
|     | Operator Presence .....                     | 3-25 |
|     | Adjustments .....                           | 3-26 |
|     | Seat Belt .....                             | 3-27 |
| 3.6 | Boom Indicators .....                       | 3-28 |
|     | Boom Extension .....                        | 3-28 |

## Section 4 - Operation

|     |  |      |
|-----|--|------|
| 4.1 | Engine .....                             | 4-1  |
|     | Starting the Engine .....                | 4-1  |
|     | Battery Boosted Starting.....            | 4-2  |
|     | Normal Engine Operation .....            | 4-3  |
|     | Shut-Down Procedure .....                | 4-3  |
| 4.2 | Operating with a Non-Suspended Load..... | 4-4  |
|     | Lift Load Safely .....                   | 4-4  |
|     | Picking Up a Load .....                  | 4-4  |
|     | Transporting a Load .....                | 4-5  |
|     | Leveling Procedure .....                 | 4-5  |
|     | Placing a Load.....                      | 4-6  |
|     | Disengaging a Load.....                  | 4-6  |
| 4.3 | Operating with a Suspended Load.....     | 4-7  |
|     | Lift Load Safely .....                   | 4-7  |
|     | Picking Up a Suspended Load .....        | 4-7  |
|     | Transporting a Suspended Load.....       | 4-8  |
|     | Leveling Procedure .....                 | 4-8  |
|     | Placing a Suspended Load .....           | 4-9  |
|     | Disengaging a Suspended Load .....       | 4-9  |
| 4.4 | Road Operation (CE).....                 | 4-10 |
| 4.5 | Loading and Securing for Transport ..... | 4-11 |
|     | Tiedown .....                            | 4-11 |
|     | Lifting .....                            | 4-12 |

**Section 5 - Attachments**

5.1 Approved Attachments.....5-1

5.2 Unapproved Attachments .....5-1

5.3 JLG Supplied Attachments.....5-2

    CAT Quick Coupler .....5-2

5.4 Telehandler/Attachment/Fork Capacity.....5-4

5.5 Use of the Capacity Chart.....5-5

    Capacity Indicator Locations .....5-5

    Sample Load Chart .....5-6

    Example.....5-8

5.6 Attachment Installation .....5-10

    CAT Quick Coupler .....5-10

    Manitou Coupler.....5-12

    JCB Coupler.....5-14

    Hydraulic Operated Attachment.....5-16

5.7 Adjusting/Moving Forks .....5-17

5.8 Attachment Operation .....5-18

    Carriage w/Forks .....5-19

    Bucket .....5-20

    Multi-Purpose Bucket.....5-22

    Fork Mounted Hook.....5-24

    Coupler Mounted Hook.....5-25

    Truss Boom.....5-26

**Section 6 - Emergency Procedures**

6.1 Towing a Disabled Product.....6-1

    Moving Short Distances .....6-1

    Moving Longer Distance.....6-1

6.2 Emergency Lowering of Boom .....6-2

6.3 Cab Emergency Exit.....6-2

**Section 7 - Lubrication and Maintenance**

7.1 Introduction .....7-1

    Clothing and Safety Gear .....7-1

7.2 General Maintenance Instructions.....7-2

7.3 Service and Maintenance Schedules.....7-3

    10 & 1st 50 Hour Maintenance Schedule .....7-3

    50 & 1st 250 Hour Maintenance Schedule.....7-4

    250 & 500 Hour Maintenance Schedule .....7-5

    1000 & 3000 Hour Maintenance Schedule .....7-6

    6000 & 12000 Hour Maintenance Schedule.....7-7

## **Table of Contents**

---

|     |   |      |
|-----|---|------|
| 7.4 | Lubrication Schedules.....                  | 7-8  |
|     | TH414C GC.....                              | 7-8  |
|     | TH417C GC.....                              | 7-9  |
| 7.5 | Operator Maintenance Instructions.....      | 7-10 |
|     | Fuel System.....                            | 7-10 |
|     | Tires.....                                  | 7-12 |
|     | Engine Oil.....                             | 7-14 |
|     | Engine Cooling System.....                  | 7-15 |
|     | Hydraulic Oil.....                          | 7-16 |
|     | Transmission Oil.....                       | 7-17 |
|     | Air Intake System.....                      | 7-18 |
|     | Cab Air Filters (if equipped).....          | 7-20 |
|     | Battery.....                                | 7-22 |
|     | Windshield Washer System (if equipped)..... | 7-23 |

### **Section 8 - Additional Checks**

|     |                                      |     |
|-----|--------------------------------------|-----|
| 8.1 | General.....                         | 8-1 |
| 8.2 | Load Stability Indicator System..... | 8-1 |
| 8.3 | Boom Interlock.....                  | 8-2 |

### **Section 9 - Specifications**

|     |                                |     |
|-----|--------------------------------|-----|
| 9.1 | Product Specifications.....    | 9-1 |
|     | Fluids.....                    | 9-1 |
|     | Capacities.....                | 9-3 |
|     | Tires.....                     | 9-4 |
|     | Performance.....               | 9-5 |
|     | Dimensions.....                | 9-6 |
|     | Declaration of Vibration.....  | 9-8 |
|     | Noise Emission Level (CE)..... | 9-8 |
|     | Machine Towing Capacity.....   | 9-8 |

### **Index**

### **Inspection, Maintenance and Repair Log**

### **Transfer Of Ownership**

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)