



# Operation and Maintenance Manual

---

## **TH580B Telehandler**

---

S/N TBJ00100 & After

*Keep this manual with machine at all times.*

---



## Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

**Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.**

**Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.**

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

**Attention! Become Alert! Your Safety is Involved.**

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

Operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

**Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. If a tool, procedure, work method or operating technique that is not specifically recommended by Caterpillar is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the product will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.**

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Caterpillar® dealers have the most current information available.



**When replacement parts are required for this product Caterpillar recommends using Caterpillar replacement parts or parts with equivalent specifications including, but not limited to, physical dimensions, type, strength and material.**

**Failure to heed this warning can lead to premature failures, product damage, personal injury or death.**

## EFFECTIVITY PAGE

July 14, 2006 - A - Original Issue Of Manual

February 2, 2007 - B - Added Tier III information. Revised pages 9, 18, 19, 36, 76, 94, 109, 124, 125, 126, 127, 129 and 130.

July 10, 2007 - C - Added LSI Cutout information on pages 46 & 47. Revised Tire Information on page 91 and revised Boom Chain Adjustment Procedure on pages 99 thru 101.

**Table of Contents****Foreword**

Literature Information .....	5
Safety .....	5
Operation .....	5
Maintenance.....	5
Maintenance Intervals.....	5
Certified Engine Maintenance .....	5
Machine Capacity.....	5
Contact Information .....	6

**Safety Section**

Safety Messages.....	7
Do Not Operate (1).....	9
Do Not Stand Under the Load (2) .....	10
No Hands (3).....	10
Do Not Operate (4).....	11
Forks (5).....	11
ROPS/FOPS Structure (6) .....	12
No Hands (7).....	12
Crushing Hazard (8).....	13
Seat Belt (9) .....	13
Crushing Hazard (10).....	14
Crushing Hazard (11).....	14
Engine Coolant (12) .....	15
Avoid Power Lines (13).....	15
Low Bridge (14).....	16
Jump Start Cables (15) .....	16
Ether (16) .....	17
Crushing Hazard (17).....	17
Crushing Hazard (18).....	17
Crushing Hazard (19).....	18
Ether (20) .....	18
Universal Warning (21) .....	19
Hand (High Pressure) (22).....	19
Additional Messages.....	19
General Hazard Information .....	23
Pressurized Air and Water .....	24
Trapped Pressure .....	24
Fluid Penetration .....	24
Containing Fluid Spillage .....	24
Dispose of Waste Properly.....	25
Crushing Prevention and Cutting Prevention .....	25
Burn Prevention .....	25
Coolant.....	25
Oils .....	25
Batteries .....	25
Fire Prevention and Explosion Prevention .....	26
Fire Extinguisher .....	27
Lines, Tubes and Hoses .....	27
Fire Extinguisher Location.....	27
Tire Information .....	27
Electrical Storm Injury Prevention .....	28
Before Starting Engine.....	28
Engine Starting.....	28
Before Operation.....	29
Operation .....	29
Machine Operating Temperature Range.....	29
Machine Operation.....	29

Travel.....	29
Lifting Capacities .....	29
Work Tools.....	30
Engine Stopping.....	30
Work Tools.....	30
Parking.....	31
Equipment Lowering with Loss of Hydraulic Power.....	31
Sound Information and Vibration Information .....	31
Sound Level.....	31
Vibration Level .....	31
Operator Station .....	32
Guards (Operator Protection) .....	32
Rollover Protective Structure (ROPS), Falling Object Protective Structure (FOPS).....	32
Other Guards (If Equipped) .....	32

**Product Information Section**

General Information .....	33
Lifting Capacities .....	33
Examples of Estimating the Lift Operation from the Load Chart .....	34
Specifications .....	35
Intended Use .....	35
Application/Configuration Restrictions .....	36
Identification Information.....	36
Plate Locations and Film Locations .....	36
Serial Number.....	36
Certification.....	37
Sound .....	37
ROPS/FOPS Film .....	37
Machine Security System .....	38
Italian Roading Homologation.....	38
Emissions Certification Film.....	39

**Operation Section**

Before Operation.....	41
Mounting and Dismounting .....	41
Alternate Exit .....	41
Daily Inspection .....	41
Machine Operation.....	42
Alternate Exit .....	42
Seat .....	42
Air Suspension (If Equipped) .....	43
Seat Belt .....	43
Operator Controls (Side Console) .....	46
Operator Controls .....	48
Battery Disconnect Switch (If Equipped) .....	58
Boom Cylinder Lock (If Equipped) .....	59
Operation Information .....	60
Work Tools.....	67
Monitoring System .....	72
Backup Alarm .....	75
Cab Door .....	75
Engine Starting .....	76
Engine Starting .....	76
Starting Below 0 °C (32°F).....	76
Engine and Machine Warm-Up.....	77
Parking.....	77
Stopping the Machine .....	77

Stopping the Engine .....	77	Service Brake .....	106
Stopping the Engine if an Electrical Malfunction		Parking Brake .....	107
Occurs .....	78	Cab Air Filter - Clean/Replace .....	107
Leaving the Machine .....	78	Primary Cab Air Filter .....	107
Transportation Information .....	78	Secondary Cab Air Filter .....	108
Shipping the Machine .....	78	Circuit Breakers - Test .....	108
Roading the Machine .....	79	Cooling System Coolant -Change.....	109
Lifting and Tying Down the Machine .....	79	Cooling System Coolant Level - Check .....	110
Towing Information .....	80	Cooling System Coolant Sample (Level 1) -	
Towing the Machine .....	80	Obtain .....	111
Engine Starting (Alternate Methods) .....	82	Cooling System Coolant Sample (Level 2) -	
Engine Starting with Jump Start Cables.....	82	Obtain .....	111
Equipment Lowering with Loss of Hydraulic		Cooling System Pressure Cap - Clean/Replace	112
Power .....	83	Cooling System Water Temperature Regulator	
Procedure for Retracting the Boom without Hand		Replace .....	112
Pump .....	84	Differential Oil - Change.....	113
Procedure for Lowering the Boom with Hand		Rear Axle Differential.....	113
Pump .....	85	Front Axle Differential .....	113
Procedure for Lowering the Boom without Hand		Differential Oil Level - Check .....	114
Pump .....	85	Rear Axle Differential.....	114
Resetting the Load Control System .....	86	Front Axle Differential .....	114
<b>Maintenance Section</b>		Differential Oil Sample - Obtain .....	115
Maintenance Access .....	89	Drive Shaft Spline - Lubricate .....	115
Access Doors and Covers.....	89	Drive Shaft Universal Joint Bolts - Check .....	116
Tire Inflation Information .....	89	Engine Air Filter Primary Element - Clean/Replace .	116
Tire Inflation with Air.....	89	Cleaning Primary Air Filter Elements.....	117
Tire Pressure.....	90	Inspecting the Primary Air Filter Elements....	117
Tire Inflation Pressure Adjustment.....	91	Engine Air Filter Primary Element - Replace .....	118
Tire Damage .....	91	Engine Air Filter Secondary Element - Replace.....	118
Tire Replacement.....	91	Engine Mounts - Inspect .....	118
Wheel and Tire Installation.....	92	Engine Oil Level - Check .....	119
Lubricant Viscosities and Refill Capacities.....	92	Engine Oil Sample - Obtain .....	119
Lubricant Viscosities .....	92	Engine Oil and Filter - Change.....	119
Capacities (Refill) .....	94	Engine Valve Lash - Check.....	121
SOS Information.....	94	Final Drive Oil - Change.....	121
Maintenance Support .....	95	Final Drive Oil Level - Check .....	122
Welding on Machines and Engines with		Final Drive Oil Sample - Obtain .....	122
Electronic Controls.....	95	Fork Leveling Cylinder Pin -Lubricate .....	123
Maintenance Interval Schedule .....	95	Frame Leveling Cylinder Pin - Lubricate.....	123
Axle Breathers - Clean/Replace.....	97	Fuel System - Prime .....	123
Backup Alarm - Test.....	97	Fuel System Water Separator - Drain .....	124
Battery - Recycle.....	97	Fuel System Water Separator Element - Replace	
Battery or Battery Cable -Inspect/Replace.....	97	(Tier II) .....	124
Belt - Inspect/Replace .....	97	Fuel System Water Separator Element - Replace	
Inspect .....	97	(Tier III) .....	125
Replace .....	98	Fuel Tank Cap - Clean.....	126
Boom Chain - Inspect/ Lubricate.....	98	Fuel Tank Water and Sediment - Drain .....	127
Boom Chain Tension -Check/Adjust .....	99	Fuses and Relays - Replace .....	127
Check Condition.....	99	Fuses .....	127
Check and Adjust the Chain Tension.....	99	Relays.....	129
Measure the Chain for Wear.....	101	Indicators and Gauges - Test.....	130
Boom Head Section - Lubricate .....	102	Longitudinal Stability Indicator - Calibrate.....	130
Boom Pivot Shaft - Lubricate .....	102	Longitudinal Stability Indicator -Test .....	130
Boom Telescoping Cylinder Air - Purge .....	102	Initial Test .....	130
Boom Wear Pad Clearance -Inspect/Adjust.....	103	Second Test.....	131
Adjustment .....	104	Oil Filter - Inspect.....	131
Boom and Frame - Inspect.....	105	Inspect a Used Filter for Debris .....	131
Braking System - Test.....	106	Parking Brake - Adjust .....	131

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)