

430




Bobcat®

Parts Manual

**S/N 5625 11001 & Above
S/N 5627 11001 & Above**

D & G series

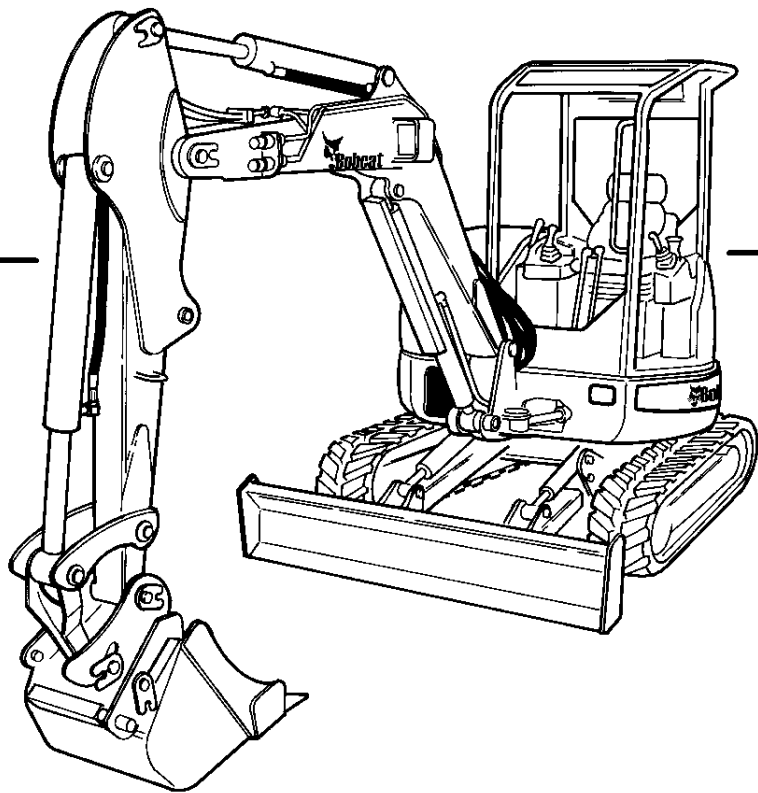

Bobcat®
Printed in U.S.A.

430 D & G CONTENTS

MAINTENANCE ITEMS	10-19
MAINTENANCE ITEMS	10-11
MAINTENANCE SCHEDULE	12-19
MAIN FRAME	20-45
UPPERSTRUCTURE	20-21
UPPERSTRUCTURE LOCK	22-23
* OPERATOR CAB	24-27
OPERATOR SEAT	28-29
* RIGHT WINDOW	30-31
* CAB ENCLOSURE	32-37
CANOPY	38-39
* SEAT SUSPENSION	40-41
INSULATION	42-43
R.H. COVER	44-45
UNDERCARRIAGE	46-71
UNDERCARRIAGE	46-47
* RECOIL SPRING	48-55
* FRONT IDLER	56-61
* TRACK ROLLER	62-65
TRACK ROLLER	66-69
* TRACKS	70-71
WORK EQUIPMENT	72-81
* ARM & BUCKET LINK	72-73
* EXTENDIBLE ARM	74-75
SWING FRAME	76-77
BOOM	78-79
BLADE	80-81
CONTROL CONSOLE	82-93
R.H. CONSOLE	82-83
L.H. CONSOLE	84-85
BLADE CONTROL	86-87
THROTTLE CONTROL	88-89
TRAVEL	90-91
OFFSET	92-93
HYDRAULIC CIRCUITRY	94-199
HYDRAULIC CIRCUITRY	94-101
* MANIFOLD	102-103
HYDRAULIC CIRCUITRY	104-109
* HYDRAULIC	110-111
ISO/STD	112-113
* SELECTOR VALVE ASSY	114-115
* R.H. JOYSTICK	116-117
* L.H. JOYSTICK	118-119
* TRAVEL JOYSTICK	120-121
* TRAVEL MOTOR	122-123
* ROTARY GROUP	124-127
* PRESSURE VALVE	128-129
* PRESSURE RINGS	130-131
* HYDROSTATIC PUMP	132-133
SWING MOTOR	134-135
* HYDRAULIC CONTROL VALVE	136-137
* VALVE SECTION	138-153
MOTOR CARRIER	154-155
* HYDROSTATIC PUMP	156-173
* PISTON PUMP ASSY	174-177
* GEAR PUMP	178-181
* FAN MOTOR	182-183
HYDRAULIC TANK	184-185
SWIVEL JOINT	186-187
ARM CYLINDER	188-189
BLADE CYLINDER	190-191
* BOOM CYLINDER	192-193
* BUCKET CYLINDER	194-195
* CLAMP CYLINDER	196-197
SWING CYLINDER	198-199

430 D & G CONTENTS (Cont'd)

ELECTRICAL	200-213
* ELECTRICAL	200-209
ALTERNATOR	210-211
STARTER	212-213
POWER UNIT	214-331
ENGINE & ATTACHING PARTS	214-221
CRANKCASE	222-223
OIL PAN	224-225
CYLINDER HEAD	226-227
GEARCASE	228-229
HEAD COVER	230-231
OIL FILTER	232-233
DIPSTICK & GUIDE	234-235
OIL PUMP	236-237
MAIN BEARING CASE	238-239
IDLER	240-241
CAMSHAFT & IDLE GEAR SHAFT	242-243
PISTON & CRANKSHAFT	244-245
FUEL CAMSHAFT & GOVERNOR SHAFT	246-247
IDLE APPARATUS	248-249
INJECTION PUMP	250-251
GOVERNOR	252-253
SPEED CONTROL PLATE	254-255
NOZZLE HOLDER & GLOW PLUG	256-257
FUEL PUMP	258-259
FAN DRIVE PULLEY	260-261
PLUG	262-263
WATER FLANGE & THERMOSTAT	264-265
WATER PUMP	266-267
FAN	268-269
VALVE & ROCKER ARM	270-271
INLET MANIFOLD	272-273
EXHAUST MANIFOLD	274-275
CRANKCASE	276-277
OIL PAN	278-279
CYLINDER HEAD	280-281
GEARCASE	282-283
HEAD COVER	284-285
OIL FILTER	286-287
DIPSTICK & GUIDE	288-289
OIL PUMP	290-291
MAIN BEARING CASE	292-293
* IDLER	294-295
CAMSHAFT & IDLE GEAR SHAFT	296-297
PISTON & CRANKSHAFT	298-299
FUEL CAMSHAFT & GOVERNOR SHAFT	300-301
IDLE APPARATUS	302-303
INJECTION PUMP	304-305
GOVERNOR	306-307
SPEED CONTROL PLATE	308-309
NOZZLE HOLDER & GLOW PLUG	310-311
FUEL PUMP	312-313
FAN DRIVE PULLEY	314-315
PLUG	316-317
WATER FLANGE & THERMOSTAT	318-319
WATER PUMP	320-321
FAN	322-323
VALVE & ROCKER ARM	324-325
INLET MANIFOLD	326-327
EXHAUST MANIFOLD	328-329
FUEL SYSTEM	330-331
ACCESSORIES & OPTIONS	332-399
AIR CONDITIONER UPGRADE KIT	332-333
* BEACON KIT	334-335
BLOCK HEATER	336-337

430 D & G CONTENTS (Cont'd)

ACCESSORIES & OPTIONS 5CONT'D)	332-399
* CLAMP KIT	338-339
* COUNTERWEIGHT KIT	340-343
DECALS	344-347
DIRECT TO TANK KIT	348-349
* EXTENDIBLE ARM KIT	350-351
HEATER BOX	352-353
HEATER KIT	354-355
* HVAC BOX	356-357
HVAC DUCT	358-359
HVAC INSTALLATION	360-363
KEYLESS IGNITION KIT	364-365
LONG ARM KIT	366-367
MOTION ALARM KIT	368-369
* PURIFIER MUFFLER	370-371
* RADIO KIT	372-373
* SEAT BELT KIT	374-375
SECONDARY AUXILIARY KIT	376-377
SOLAR KIT	378-379
* SPECIAL APPLICATION KIT	380-383
STEEL TRACK KIT	384-385
* STROBE LIGHT KIT	386-387
* TOP GUARD KIT	388-389
* TOP GUARD LIGHT KIT	390-391
* X-CHANGE	392-395
* X-CHANGE MOUNTED	396-397
BULK ITEMS	398-399
NUMERICAL INDEX	400-441
NUMERICAL INDEX	400-441

GENERAL INFORMATION



When using the machine serial number, use the complete number.

Some Serial Number breaks are not available at time of printing. These are listed as & Below or & Above.

The number shown in the quantity column in this manual is the number of parts needed for the illustration on the page. For some parts an "x" will be shown in the quantity column. This "x" indicates that the quantity to be used is "As Needed".

When references L.H. and R.H. are used in this manual, it is done from the operator's seat in the forward operating position.

Some of the illustrations and information found in this parts manual were supplied to Bobcat by machine component companies.

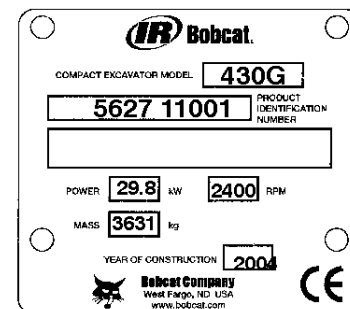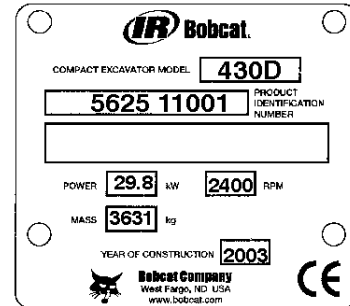

ABBREVIATIONS & SYMBOLS

SALES = Order from Gwinner Sales Department

NSS = Not Serviced Separately

NAP = Not Available as Parts

***** = Changed or Added Sections, Pages or Part Numbers

Disposition Code Definition (Found in the Remarks Column)

[A] = Use Up


[B] = Use Up on Other Application (See PNI)

[C] = File PDR Report With Bobcat Parts Sales

[D] = Part Number Error

Explications en francais	Grid Nb	3
Erklärungen auf deutsch	Grid Nb	4
Spiegazioni in italiano	Grid Nb	5
Explicaciones en espanol	Grid Nb	6
Verklaring in het Nederlands	Grid Nb	7

UPPERSTRUCTURE

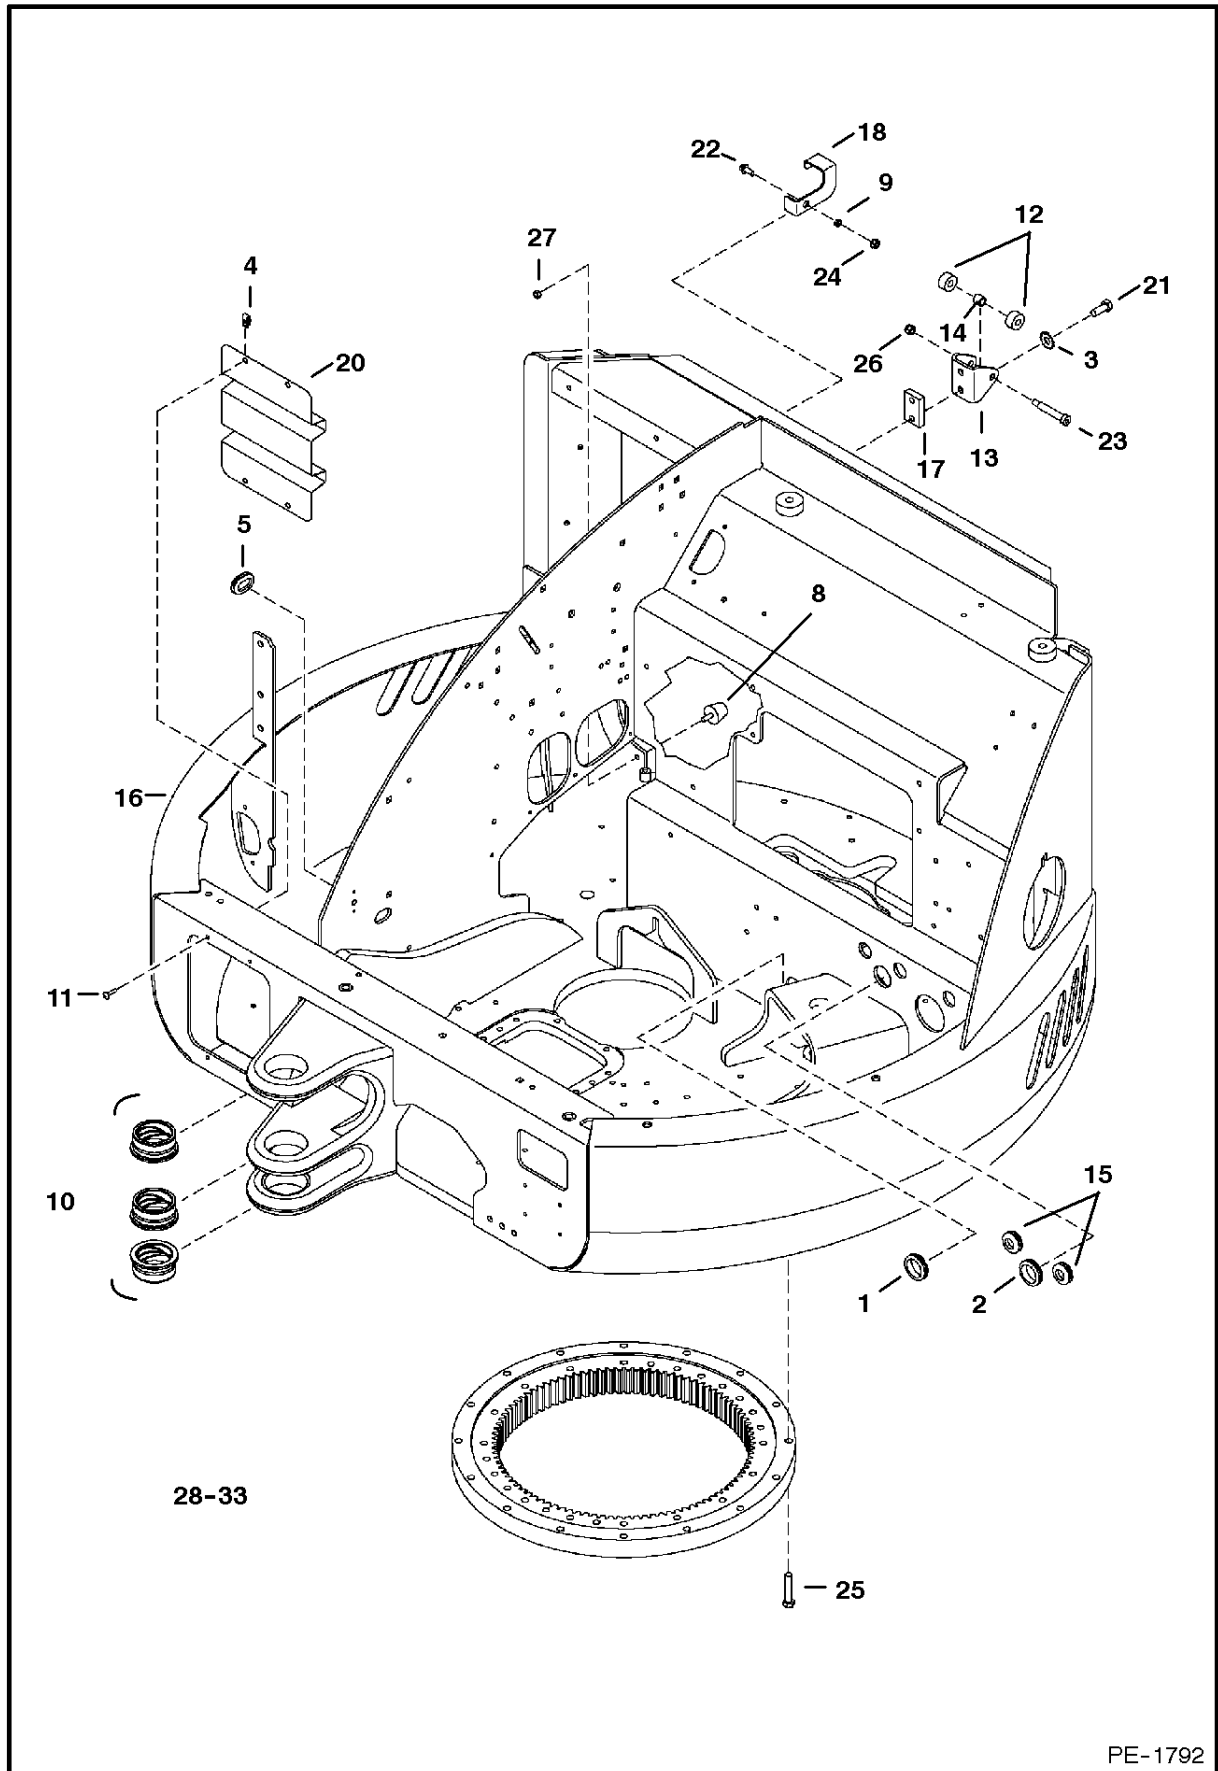


PE-1792

UPPERSTRUCTURE

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6515603	GROMMET			1
2	6670119	GROMMET			1
3	6675273	WASHER			3
4	6676026	NUT			4
5	6681886	GROMMET			1
6	6682272	SEAL	rubber		1
7	6683172	CLIP	plastic		6
8	6733616	BUMPER			1
9	6807220	SPACER			1
10	6807956	BUSHING			3
11	6809030	SCREW			4
12	6809726	ROLLER			2
13	6809727	CHANNEL			1
14	6809734	BUSHING			1
15	6810133	GROMMET			2
16	6810696	UPPERSTRUCTUR E			1
17	6810802	STRIKER	bar		1
18	6811886	PLATE			1
19	6814926	GROMMET			2
20	6816555	SCREEN			1
21	17C-820	BOLT			2
22	29CM-820	BOLT			1
23	38C-840	BOLT			1
24	43DM-8	NUT			1
25	55CM-1260	SCREW			16
26	59D-6	NUT			1
27	61D-5	NUT			1
28	6560899	WASHER	flat		1
29	6808365	BUMPER			1
30	6810972	PLATE			1
31	1CM-1030	BOLT			4
32	29CM-1050	SCREW			1
33	51DM-10	NUT			1

UPPERSTRUCTURE LOCK

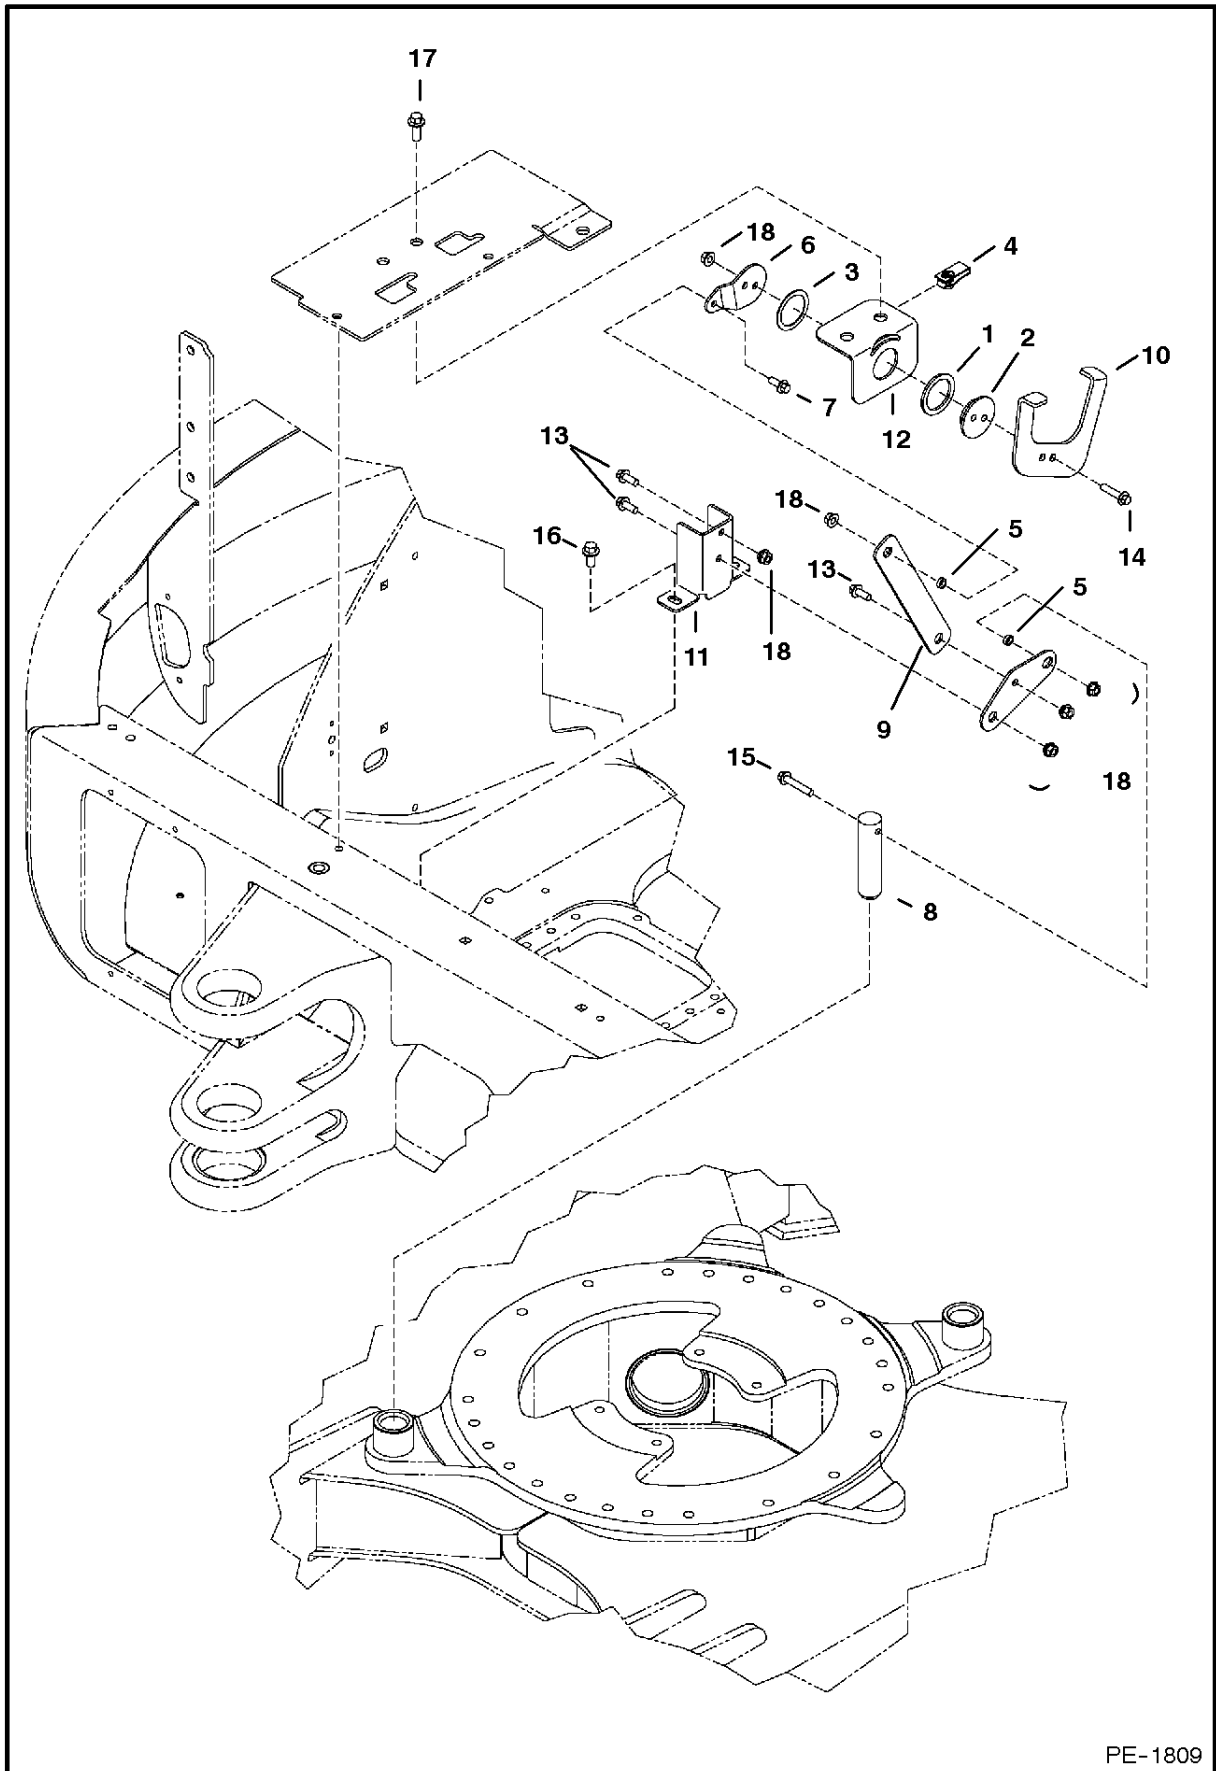


PE-1809

UPPERSTRUCTURE LOCK

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6567962	WASHER			1
2	6567963	SPACER			1
3	6630945	WASHER			2
4	6675722	NUT			2
5	6807220	SPACER			5
6	6808596	LEVER			1
7	6808597	LEVER			1
8	6808598	PIN			1
9	6814729	LINK			1
10	6814730	LEVER			1
11	6814731	BRACKET			1
12	6814732	BRACKET			1
13	29CM-820	BOLT			4
14	29CM-835	SCREW			3
15	29CM-845	SCREW			1
16	29CM-1020	BOLT			2
17	29CM-1025	SCREW			2
18	51DM-8	NUT			7

*** OPERATOR CAB
(Door)**

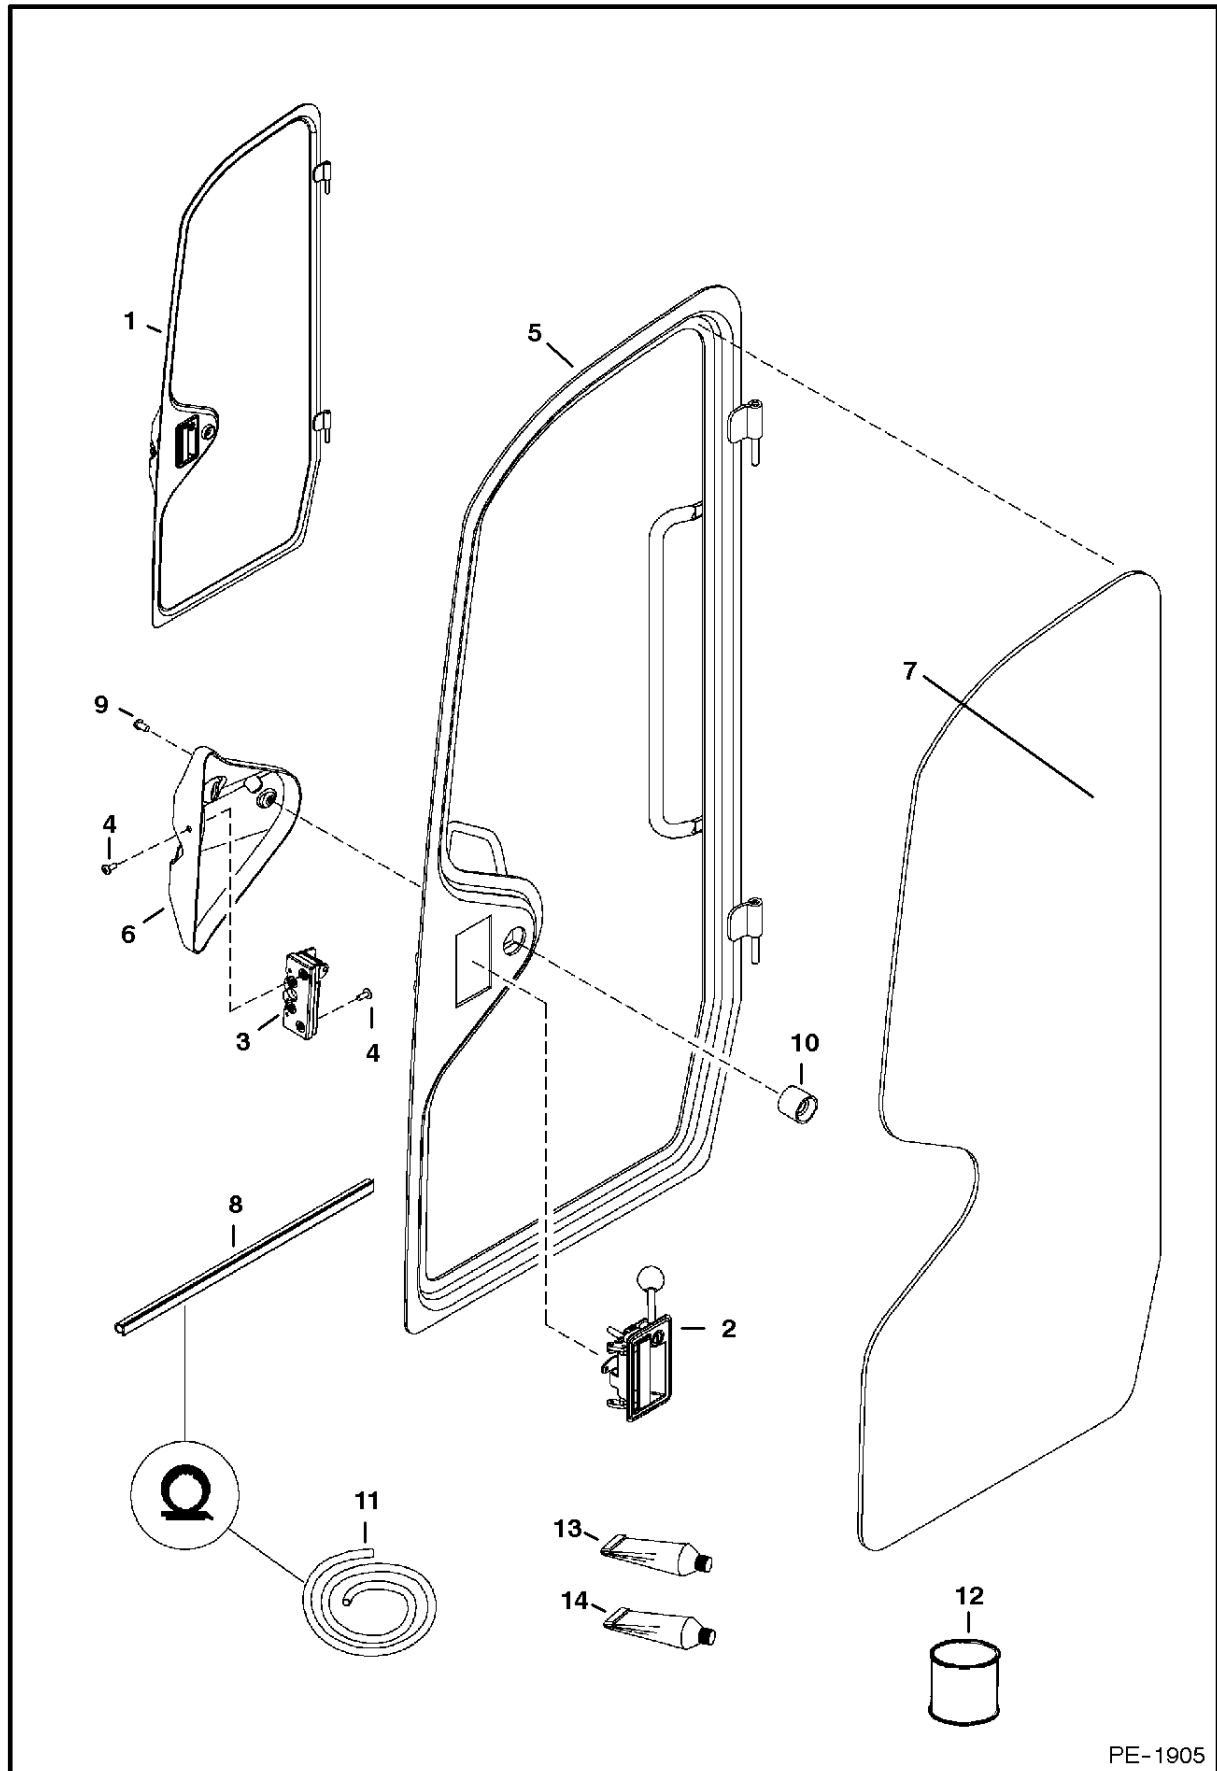


PE-1905

* OPERATOR CAB

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6810944	DOOR	assy		1
2	6679885	HANDLE	door		1
2		KEY			1
3	6679886	LATCH			1
4	6803202	SCREW			4
5	NAP	DOOR	frame - order 6810944 - Was 6813493 [A]		1
6	6813574	COVER	latch		1
7	NAP	DOOR	glass - order 6810944 - Was 6816248 [A]		1
8	6817305	SEAL	door		1
9	25G-510	BOLT	socket		1
10	6675386	SOCKET			1
11	6684518	SEAL	bulk - sold per foot		x
12	7101508	PRIMER			1
13	7102268	ADHESIVE	combo		1
14	7101510	ADHESIVE			1

*** OPERATOR CAB
(Front Window)**

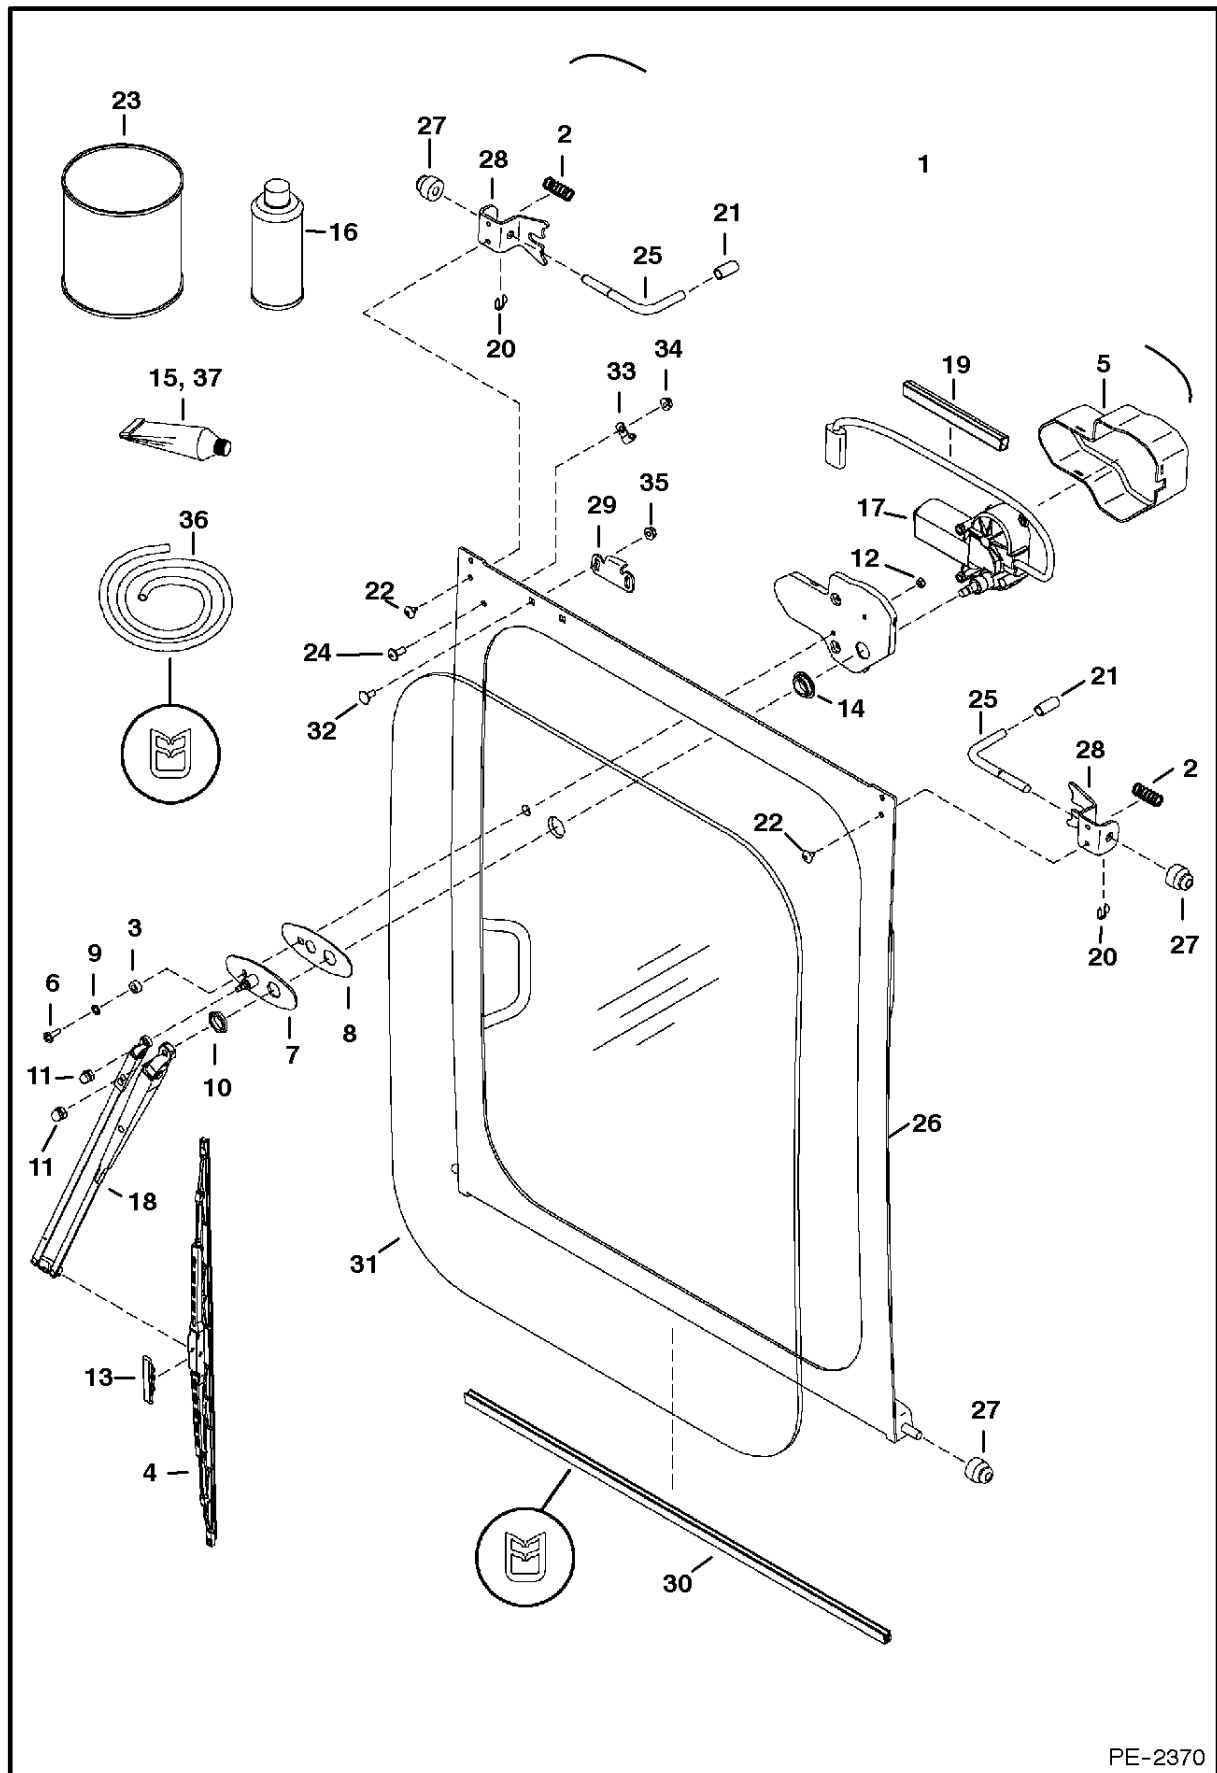


PE-2370

* OPERATOR CAB

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6812705	WINDOW	assy		1
2	6610082	SPRING			2
3	6664085	BUSHING			2
4	6677834	BLADE	wiper		1
5	6685140	COVER	motor		1
6	6677837	BOLT			1
7	6677839	GASKET			1
8	6677840	SWIVEL ASSY			1
9	6677841	WASHER			1
10	6677842	NUT			1
11	6677843	NUT			1
12	6677844	NUT			2
13	6677845	ADAPTER			1
14	6677847	GROMMET			1
15	6808881	DEGREASER			1
16	6818073	CLEANER			1
17	6684139	BEARING			1
18	6680180	ARM			1
19	6680971	RETAINER			1
20	6681651	RING	retaining		2
21	6681652	CAP			2
22	6589675	SCREW			4
23	6818074	PRIMER	black		1
24	6803202	SCREW			1
25	6812413	PIN			2
26	NAP	WINDOW	frame - order Ref. * OPERATOR CAB (1) - Was 6812416 [A]		1
27	6813028	ROLLER			4
28	6814423	BRACKET			2
29	6816437	BRACKET			1
30	NAP	SEAL	use 33" of Ref. * OPERATOR CAB (36)		1
31	NAP	WINDOW	front - Was 7101204 [A]		1
32	21CM-616	BOLT			2
33	30H-10	CLAMP			1
34	43DM-6	NUT			2
35	51DM-6	NUT			2
36	6682492	EDGE TRIM	bulk - sold per foot		2
37	6808882	ADHESIVE			1

OPERATOR SEAT

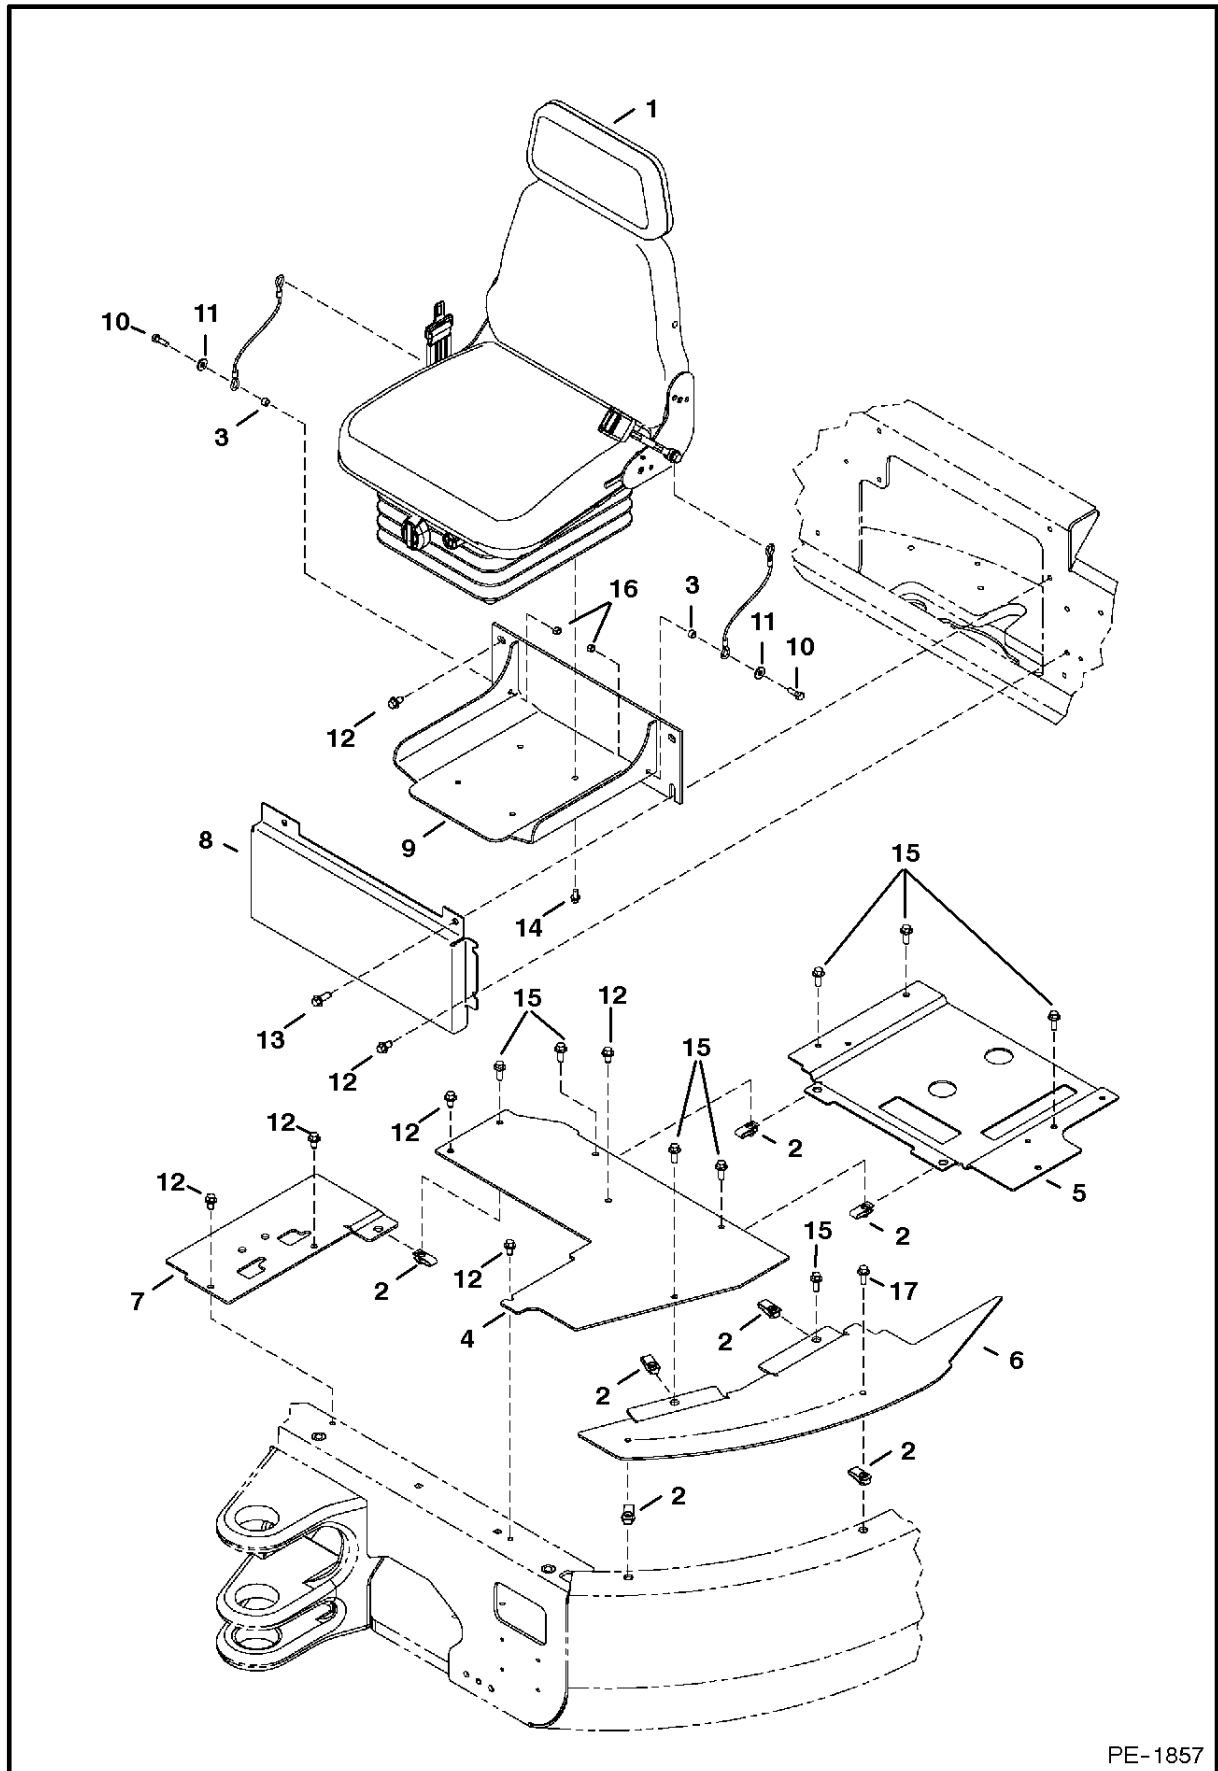

PE-1857

OPERATOR SEAT

Page : 1

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6685657	SEAT	no seat belt or hardware - See Page * (2) - Was 66829 64 [A]		1
2	6675722	NUT			7
3	6802539	SPACER			2
4	6812296	PLATE	front		1
5	6812297	PLATE	rear		1
6	6812298	PLATE			1
7	6812299	PLATE			1
8	6812458	PLATE			1
9	6814192	SEAT			1
10	1CM-825	BOLT			2
11	25E-16	WASHER			2
12	26GM-10020	SCREW			9
13	26GM-10030	SCREW			2
14	29CM-816	BOLT			4
15	29CM-1025	SCREW			8
16	53DM-8	NUT			7
17	27CM-1030	SCREW			2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com