

A300
TURBO



Bobcat®


Parts Manual

S/N 5234 11001 & Above

S/N 5235 11001 & Above

S/N 5264 11001 & Above

S/N 5265 11001 & Above

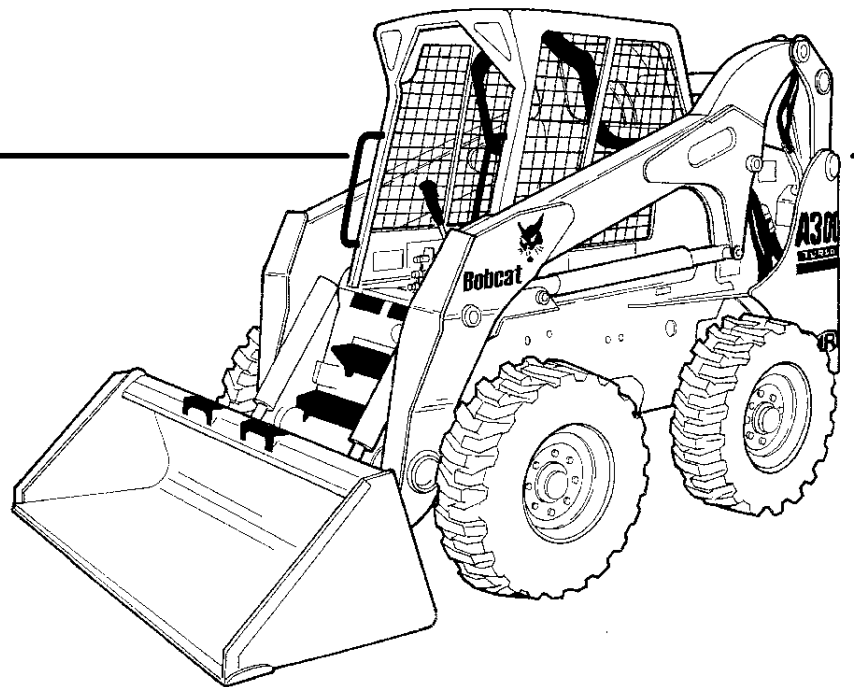

A300 CONTENTS

MAINTENANCE ITEMS	11-18
MAINTENANCE ITEMS	11-12
SERVICE SCHEDULE ITEMS	13-18
MAIN FRAME	19-40
MAIN FRAME	19-20
OPERATOR CAB	21-26
SEAT & SEAT BAR	27-28
SEAT	29-30
REAR DOOR	31-32
LIFT ARMS & BOBTACH	33-34
BOB-TACH	35-36
PANELS	37-38
FUEL SYSTEM	39-40
DRIVE TRAIN	41-48
DRIVE TRAIN	41-42
MOTOR CARRIER	43-44
CHAINCASE COVERS	45-46
AXLE	47-48
HYDRAULIC SYSTEM	49-70
HYDRAULIC CIRCUITRY	49-50
LIFT & TILT CONTROL CIRCUITRY	51-52
AUXILIARY HYDRAULICS	53-54
TILT CYLINDER	55-56
LIFT CYLINDER	57-58
STEERING CYLINDER	59-60
MANUAL LIFT RELEASE VALVE	61-62
HYDRAULIC CONTROL VALVE	63-64
BICS CONTROL VALVE	65-68
BUCKET POSITIONING VALVE	69-70
HYDROSTATIC SYSTEM	71-106
HYDROSTATIC CIRCUITRY	71-82
HYDROSTATIC MOTOR & BRAKE	83-86
HYDROSTATIC PUMP	87-94
GEAR PUMP	95-96
STEERING VALVE	97-98
2-SPEED VALVE	99-100
HYDROSTATIC OIL FILTER	101-106
ELECTRICAL SYSTEM	107-118
CAB ELECTRICAL CIRCUITRY	107-108
CONTROLS ELECTRICAL	109-110
ENGINE ELECTRICAL	111-114
ALTERNATOR	115-116
STARTER	117-118
POWER UNIT	119-206
COOLING SYSTEM	119-122
ENGINE & ATTACHING PARTS	123-132
ENGINE SPEED CONTROL	133-134
COOLING FAN DRIVE ASSY.	135-136
ENGINE & GASKET KITS	137-138
MANIFOLDS	139-140
TURBOCHARGER	141-142
CYLINDER HEAD & COVER	143-144
CYLINDER HEAD	145-146
OIL PAN	147-148

A300 CONTENTS (Cont'd)

POWER UNIT (CONT'D)	119-206
PISTON & CRANKSHAFT	149-150
CAMSHAFT	151-152
FRONT COVER	153-154
WATER PUMP & THERMOSTAT	155-156
WATER PUMP	157-158
FUEL INJECTION SYSTEM	159-162
FUEL INJECTION PUMP	163-164
GOVERNOR	165-168
AIR CLEANER	169-170
* ENGINE	171-172
* MANIFOLDS	173-174
* TURBOCHARGER	175-176
* CYLINDER HEAD & COVER	177-178
* CYLINDER HEAD	179-180
* OIL PAN	181-182
* PISTON & CRANKSHAFT	183-184
* CAMSHAFT	185-186
* FRONT COVER	187-188
* WATER PUMP & THEMOSTAT	189-190
* WATER PUMP	191-192
* FUEL INJECTION SYSTEM	193-196
* FUEL INJECTION PUMP	197-198
* GOVERNOR	199-204
* AIR CLEANER	205-206
ACCESSORIES & OPTIONS	210-321
ACS CONVERSION KIT	210-211
ACCESS COVER	212-213
BACK-UP ALARM	214-215
BEACON	216-217
BLOCK HEATER	218-219
BUCKET POSITIONING KIT	220-221
CAB DOOR	222-233
CAB ENCLOSURE	234-237
CAB WINDOWS	238-241
ELECTRICAL CONNECTOR KIT	242-243
ELECTRICAL CONTROLS KIT	244-249
FIRE EXTINGUISHER	250-251
FLASHER LIGHTS	252-253
F.O.P.S. KIT	254-255
FRONT AUXILIARY	256-257
GAS SPRING KIT	258-259
HEATER & A/C	260-277
HORN KIT	278-279
LIFT KIT	280-283
LIGHT KIT	284-285
POWER BOB-TACH KIT	286-287
POWER BOB-TACH CYLINDER	288-289
POWER BOB-TACH	290-291
PURIFIER	292-293
RADIATOR SCREEN KIT	294-295
REAR AUXILIARY HYDRAULICS	296-297
REAR AUXILIARY VALVE	298-299
REAR DOOR LOCK	300-301
REAR WIPER	302-303

A300 CONTENTS (Cont'd)

ACCESSORIES & OPTIONS	210-321
SEAT	304-307
SEAT BELT	308-313
SOUND OPTION	314-315
STROBE LIGHT	316-317
TIRES & RIMS	318-319
BULK ITEMS	320-321

A300 CONTENTS

MAINTENANCE ITEMS	11-18
MAINTENANCE ITEMS	11-12
SERVICE SCHEDULE ITEMS	13-18
MAIN FRAME	19-40
MAIN FRAME	19-20
OPERATOR CAB	21-26
SEAT & SEAT BAR	27-28
SEAT	29-30
REAR DOOR	31-32
LIFT ARMS & BOBTACH	33-34
BOB-TACH	35-36
PANELS	37-38
FUEL SYSTEM	39-40
DRIVE TRAIN	41-48
DRIVE TRAIN	41-42
MOTOR CARRIER	43-44
CHAINCASE COVERS	45-46
AXLE	47-48
HYDRAULIC SYSTEM	49-70
HYDRAULIC CIRCUITRY	49-50
LIFT & TILT CONTROL CIRCUITRY	51-52
AUXILIARY HYDRAULICS	53-54
TILT CYLINDER	55-56
LIFT CYLINDER	57-58
STEERING CYLINDER	59-60
MANUAL LIFT RELEASE VALVE	61-62
HYDRAULIC CONTROL VALVE	63-64
BICS CONTROL VALVE	65-68
BUCKET POSITIONING VALVE	69-70
HYDROSTATIC SYSTEM	71-106
HYDROSTATIC CIRCUITRY	71-82
HYDROSTATIC MOTOR & BRAKE	83-86
HYDROSTATIC PUMP	87-94
GEAR PUMP	95-96
STEERING VALVE	97-98
2-SPEED VALVE	99-100
HYDROSTATIC OIL FILTER	101-106
ELECTRICAL SYSTEM	107-118
CAB ELECTRICAL CIRCUITRY	107-108
CONTROLS ELECTRICAL	109-110
ENGINE ELECTRICAL	111-114
ALTERNATOR	115-116
STARTER	117-118
POWER UNIT	119-206
COOLING SYSTEM	119-122
ENGINE & ATTACHING PARTS	123-132
ENGINE SPEED CONTROL	133-134
COOLING FAN DRIVE ASSY.	135-136
ENGINE & GASKET KITS	137-138
MANIFOLDS	139-140
TURBOCHARGER	141-142
CYLINDER HEAD & COVER	143-144
CYLINDER HEAD	145-146
OIL PAN	147-148


A300 CONTENTS (Cont'd)

POWER UNIT (CONT'D)	119-206
PISTON & CRANKSHAFT	149-150
CAMSHAFT	151-152
FRONT COVER	153-154
WATER PUMP & THERMOSTAT	155-156
WATER PUMP	157-158
FUEL INJECTION SYSTEM	159-162
FUEL INJECTION PUMP	163-164
GOVERNOR	165-168
AIR CLEANER	169-170
* ENGINE	171-172
* MANIFOLDS	173-174
* TURBOCHARGER	175-176
* CYLINDER HEAD & COVER	177-178
* CYLINDER HEAD	179-180
* OIL PAN	181-182
* PISTON & CRANKSHAFT	183-184
* CAMSHAFT	185-186
* FRONT COVER	187-188
* WATER PUMP & THEMOSTAT	189-190
* WATER PUMP	191-192
* FUEL INJECTION SYSTEM	193-196
* FUEL INJECTION PUMP	197-198
* GOVERNOR	199-204
* AIR CLEANER	205-206
ACCESSORIES & OPTIONS	210-321
ACS CONVERSION KIT	210-211
ACCESS COVER	212-213
BACK-UP ALARM	214-215
BEACON	216-217
BLOCK HEATER	218-219
BUCKET POSITIONING KIT	220-221
CAB DOOR	222-233
CAB ENCLOSURE	234-237
CAB WINDOWS	238-241
ELECTRICAL CONNECTOR KIT	242-243
ELECTRICAL CONTROLS KIT	244-249
FIRE EXTINGUISHER	250-251
FLASHER LIGHTS	252-253
F.O.P.S. KIT	254-255
FRONT AUXILIARY	256-257
GAS SPRING KIT	258-259
HEATER & A/C	260-277
HORN KIT	278-279
LIFT KIT	280-283
LIGHT KIT	284-285
POWER BOB-TACH KIT	286-287
POWER BOB-TACH CYLINDER	288-289
POWER BOB-TACH	290-291
PURIFIER	292-293
RADIATOR SCREEN KIT	294-295
REAR AUXILIARY HYDRAULICS	296-297
REAR AUXILIARY VALVE	298-299
REAR DOOR LOCK	300-301
REAR WIPER	302-303

A300 CONTENTS (Cont'd)

ACCESSORIES & OPTIONS	210-321
SEAT	304-307
SEAT BELT	308-313
SOUND OPTION	314-315
STROBE LIGHT	316-317
TIRES & RIMS	318-319
BULK ITEMS	320-321

MAIN FRAME

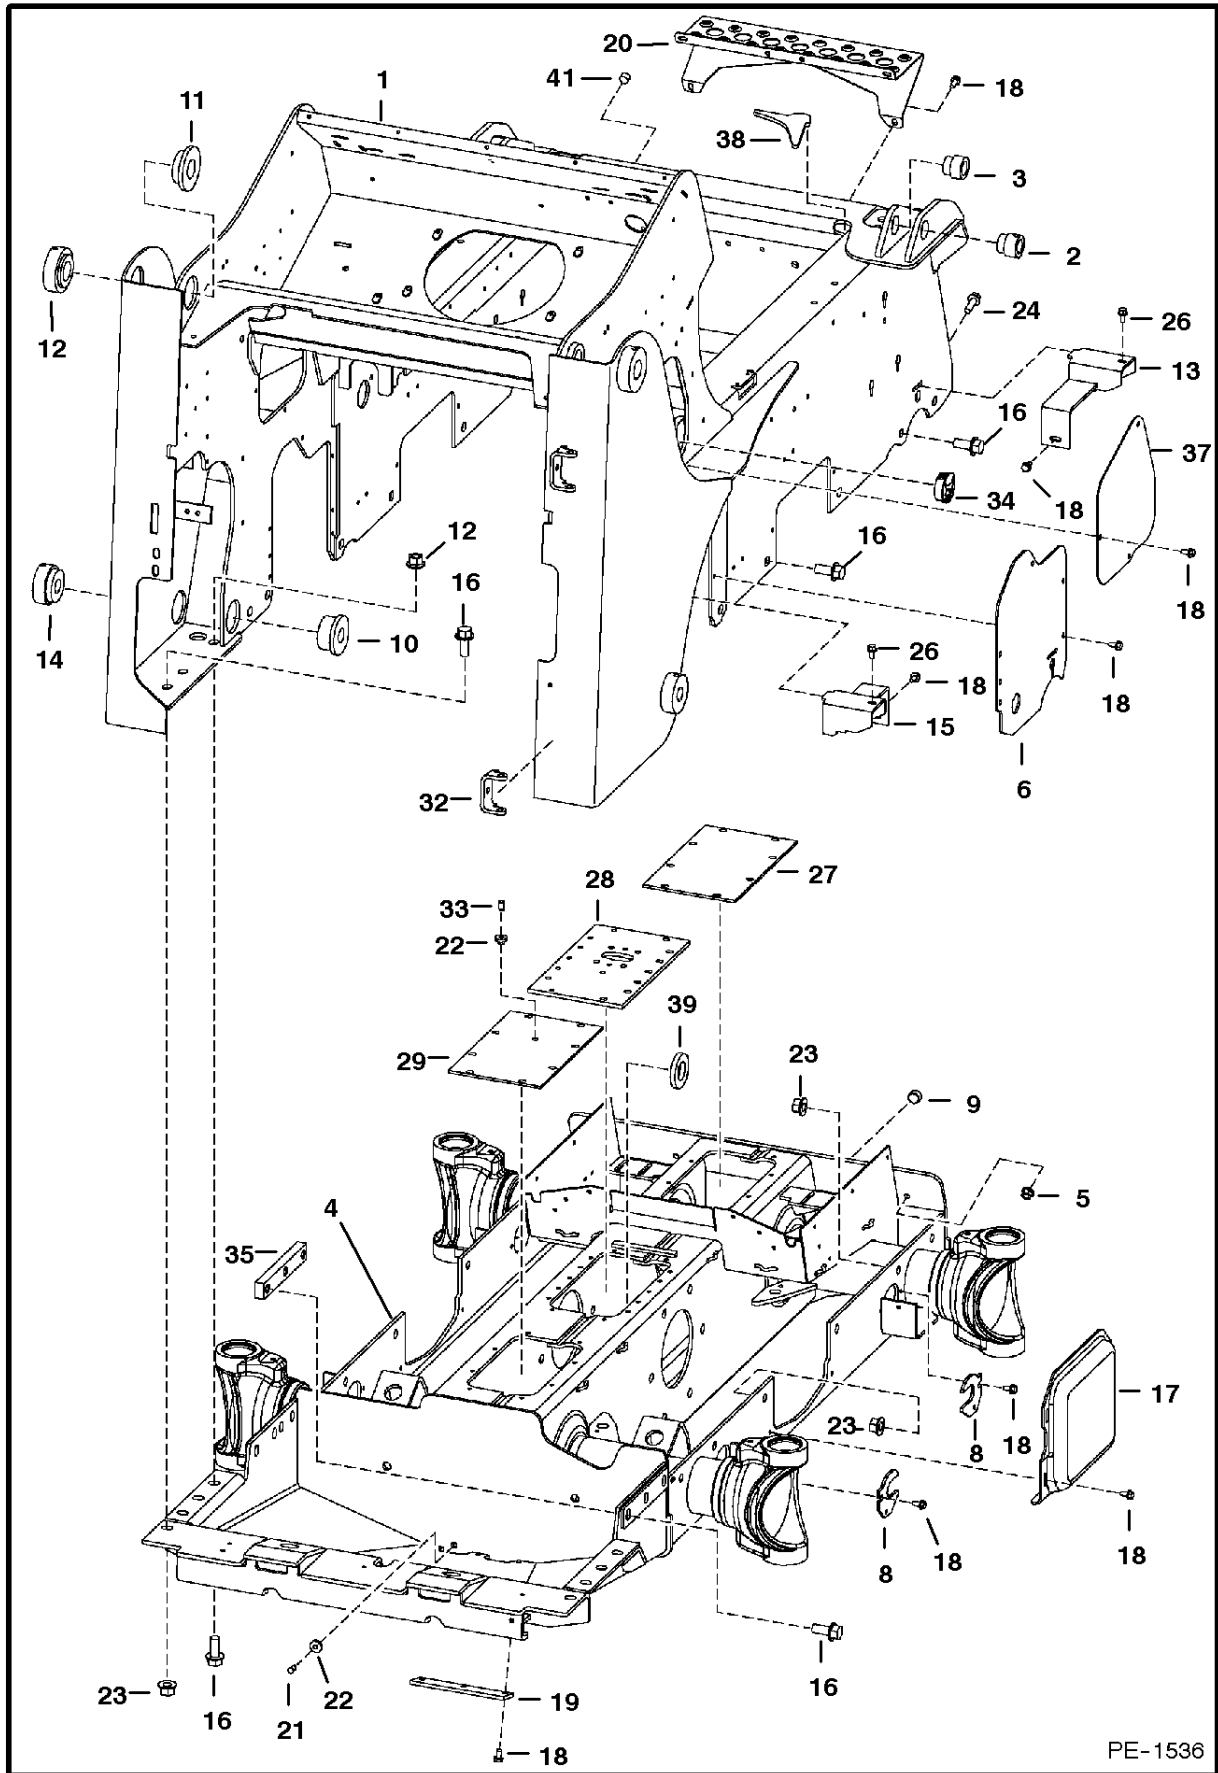


PE-1536

MAIN FRAME

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6731768	MAIN FRAME			1
2	6717277	BUSHING	weldAon		2
3	6717278	BUSHING	weldAon		2
4		CHAINCASE	See Page DRIVE TRAIN(1) - frame only		1
5	83D-8	NUT			4
6	6736768	COVER			2
7	83D-12	NUT			19
8	6731052	COVER			4
9	6731121	PLUG	chaincase fill		1
10	6730785	BUSHING	inside upright weldAon		2
11	6729401	BUSHING	inside upright weldAon		2
12	6729402	BUSHING	outside upright weldAon		2
13	6731354	SHIELD	front - R.H.		1
13	6731353	SHIELD	front - L.H.		1
14	6730784	BUSHING	outside upright weldAon		2
15	6731782	SHIELD	rear - R.H.		1
15	6731783	SHIELD	rear - L.H.		1
16	31C-1228	BOLT			24
17	6719168	COVER			2
18	84G-3712	BOLT			32
19	6700182	COVER	drain		1
20	6732577	STEP			1
21	6599645	PLUG	chaincase drain		1
22	6553411	BUSHING			2
23	53D-12	NUT			18
24	31C-824	BOLT			4
25	6679966	PLUG	.687' diameter hole		8
26	35C-612	BOLT			4
27		COVER	See Page CHAINCASE COVERS(3)		1
28		COVER	See Page CHAINCASE COVERS(3)		1
29		COVER	See Page CHAINCASE COVERS(3)		1
30		BREATHER	See Page CHAINCASE COVERS(3)		1
31	6706485	HOOK	tie down - weldAon		2
32	6708987	BRACKET	weldAon		2
33	6678796	PLUG			1
34	6718796	PLUG			1
35	6706857	BLOCK	threaded		2
36	84G-3708	BOLT			4
37	6730783	COVER			2
38	6733917	GUSSET			2
39	6680055	MAGNET			2

OPERATOR CAB

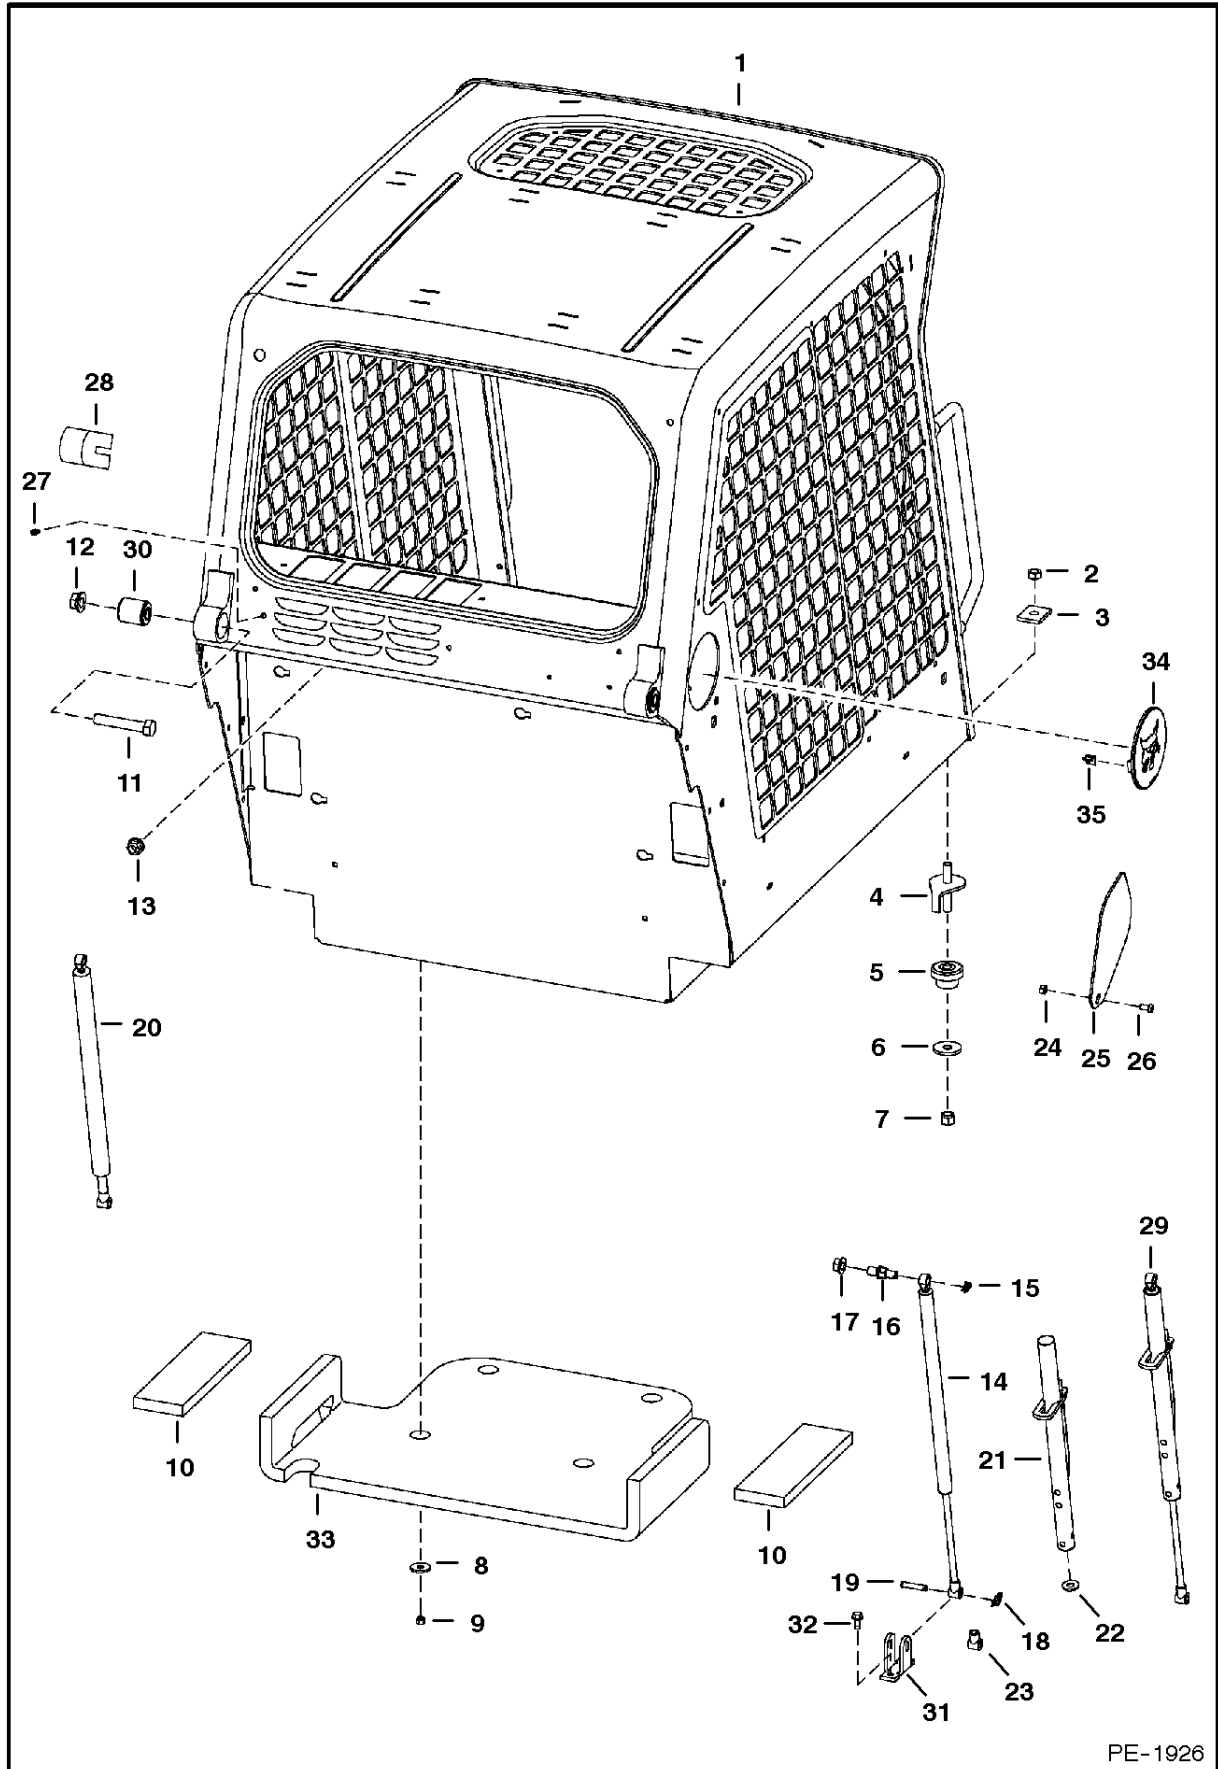


PE-1926

OPERATOR CAB

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6719672	OPERATOR CAB	includes cab decals		1
2	59D-8	NUT			2
3	6553709	WASHER	rectangular		2
4	6702971	BOLT			2
5	6560633	MOUNT			2
6	6515817	WASHER			2
7	85D-8	NUT			2
8	619021	WASHER			4
9	59D-5	NUT			4
10	6729012	INSULATION	seat pan		2
11	17C-1056	BOLT			2
12	53D-10	NUT			2
13	53D-6	NUT			4
14	6675135	GAS SPRING	R.H.		1
15	6675140	SNAP RING			2
16	6719064	MOUNT			2
17	97D-8	NUT			2
18	6631418	PIN	ring		2
19	6567743	PIN			2
20	6675134	GAS SPRING	L.H.		1
20	6675136	GAS SPRING	L.H. - for cab W/ enclosure		1
21	6708189	TUBE	stop - R.H.		1
22	6701174	WASHER			1
23	6675257	ROD END			1
24	95D-5	NUT			2
25	6718784	COVER			2
26	25G-512	BOLT			2
27	6675033	INSERT			x
28	6579613	STOP			2
29	NAP	GAS SPRING	R.H. - W/ latch - Order Ref. OPERATOR CAB(14) & OPERATOR CAB(21)-OPERATOR CAB(23)		1
30	6562602	BUSHING			2
31	6706349	MOUNT	gas spring		2
32	84G-3112	BOLT			4
33	6729013	INSULATION	seat pan		1
34	6733107	PLUG	W/Ref. OPERATOR CAB(35)		2
35	6679990	CLIP			6

OPERATOR CAB

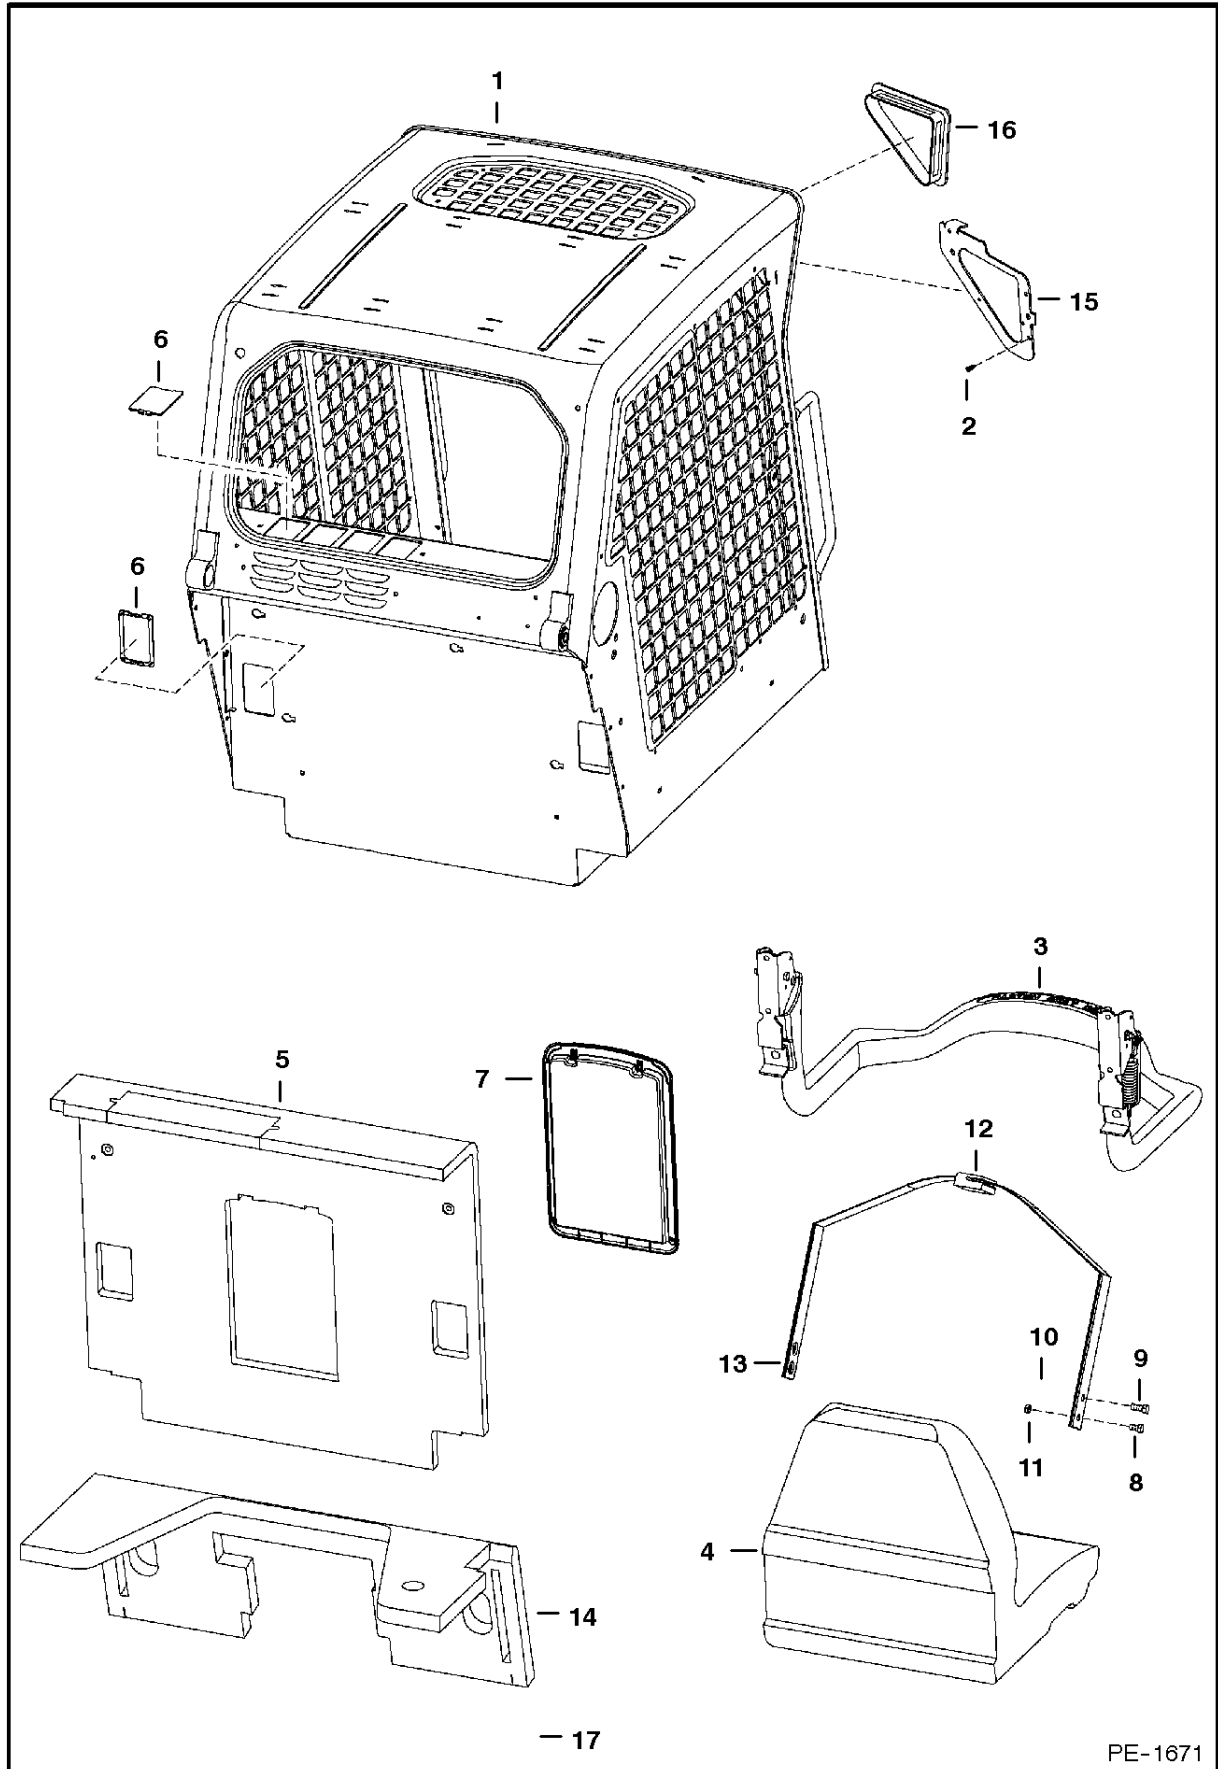


PE-1671

OPERATOR CAB

Ref.N°	Part N°	Description	Remarks	Serial N°	Qty.
1	6719672	OPERATOR CAB	does not include cab decals		1
2	6675033	INSERT			6
3		SEAT BAR	See Page SEAT & SEAT BAR(3)		1
4		SEAT	See Page SEAT(1) & SEAT(3)		1
5	6717516	INSULATION			1
6	6718101	COVER			6
7	6719503	CONTAINER	manuals		1
7	6675524	CLIP			2
7	6725301	COVER			1
7	6725303	FRAME			1
8	17C-612	BOLT			2
9	17C-716	BOLT			2
10	85D-7	NUT			2
11	85D-6	NUT			2
12	6675074	SEAT BELT			1
13	6725373	SPRING PLATE			2
14	6716800	INSULATION			1
15	NSS	FRAME	L.H. - weldAon		1
15	NSS	FRAME	R.H. - weldAon		1
16	6674403	COVER	no lights		2
17	6701674	INSULATION			1

OPERATOR CAB

NOTE: When installing heater in export loaders built with deluxe cab, also order 6715365 Harness.

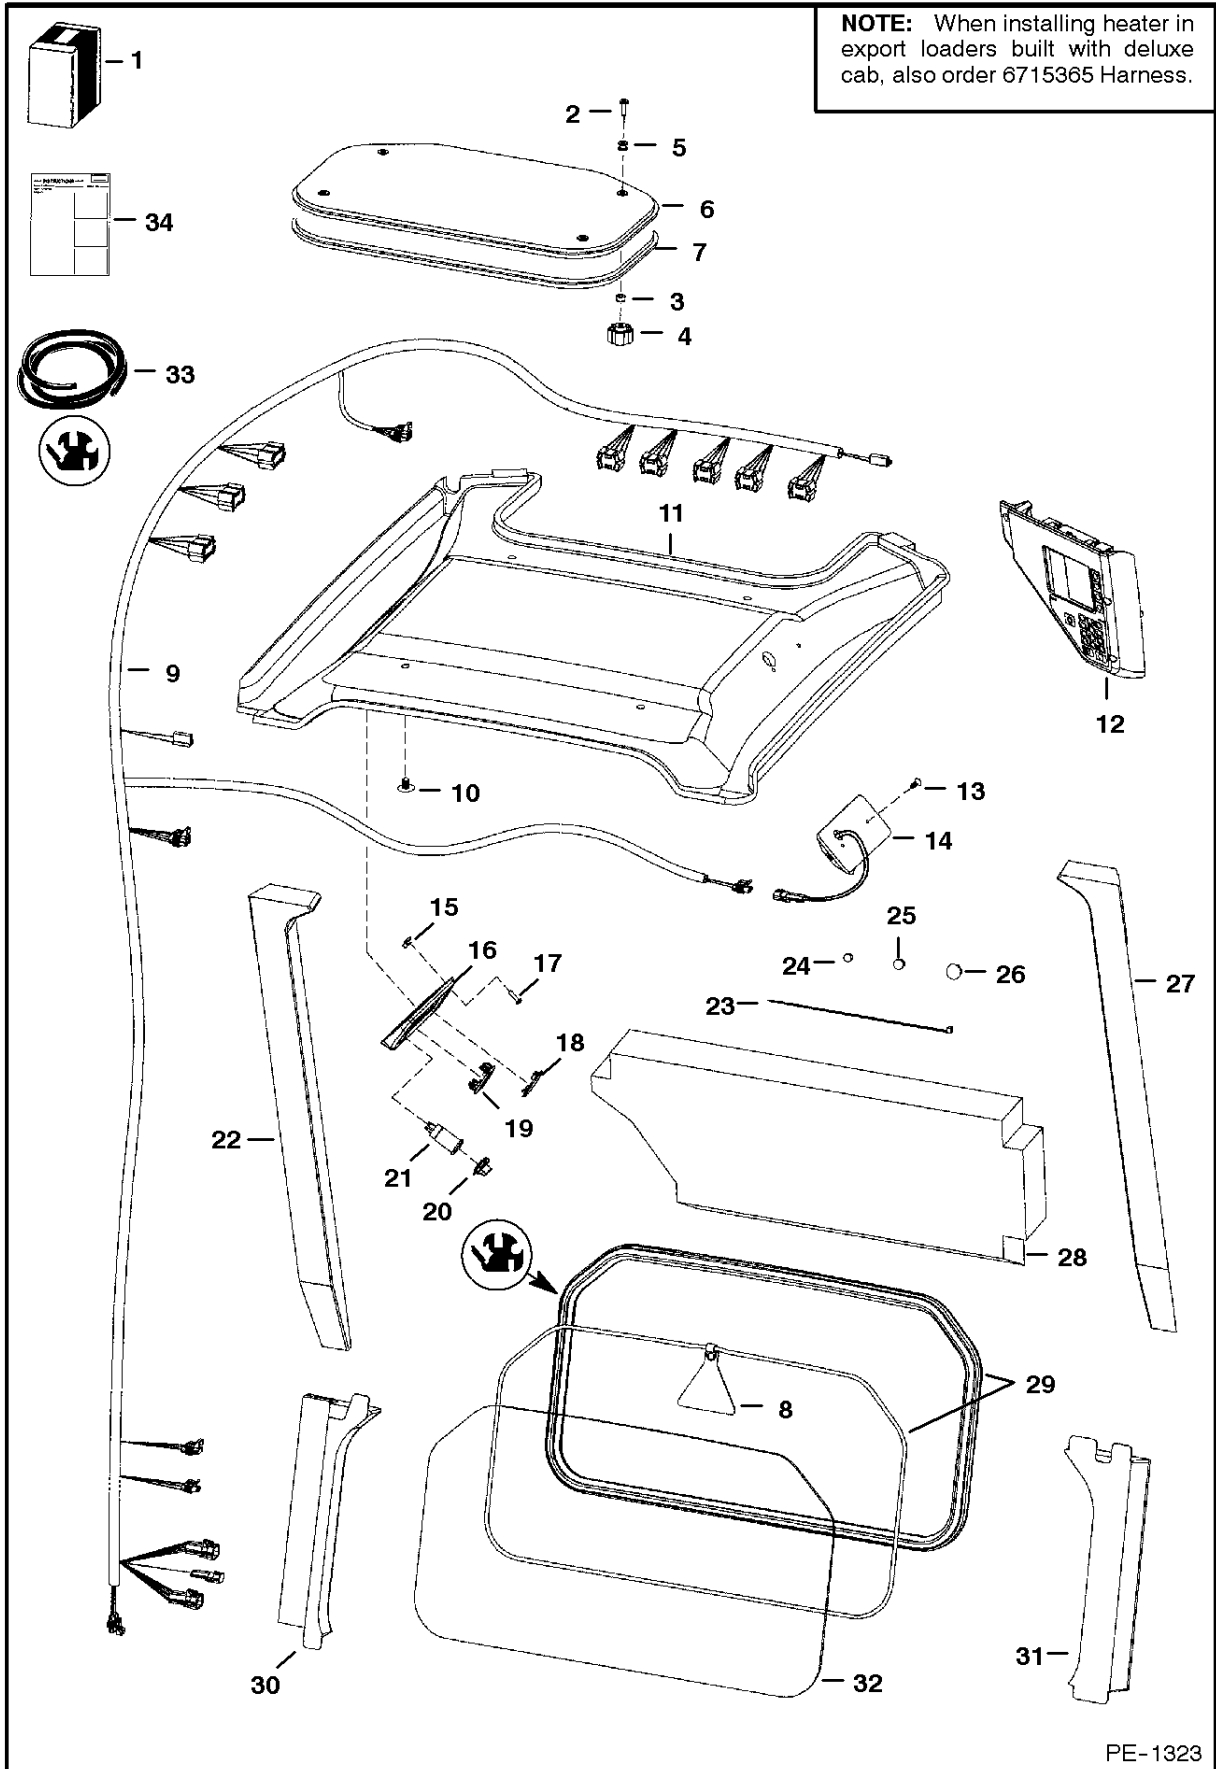

PE-1323

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com