



---

# PARTS CATALOG

---

## LOADER BACKHOE

---

### 580 SUPER M SERIES 2 580 SUPER M+ SERIES 2

---



Photograph may show installation of optional equipment.

BD04A007

#### TABLE OF CONTENTS

- General Information
- Section 2 – Engine
- Section 3 – Fuel System
- Section 4 – Electrical System
- Section 5 – Tracks / Steering
- Section 6 – Power train
- Section 7 – Brakes
- Section 8 – Hydraulics
- Section 9 – Chassis/Attachments
- Index

---

CNH America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer

This unit first became available 02-2004			
REVISION HISTORY			
Issue	Issue Date	Applicable Machines	Remarks
First Edition	02-2004	580 SUPER M SERIES 2, 580 SUPER M+ SERIES 2	7-9040 NA
Revision 1	05-2004	580 SUPER M SERIES 2, 580 SUPER M+ SERIES 2	7-9041 NA
Revision 2	05-2005	580 SUPER M SERIES 2, 580 SUPER M+ SERIES 2	7-9042 NA
Revision 3	12-2006	580 SUPER M SERIES 2, 580 SUPER M+ SERIES 2	7-9043 NA

---

# TABLE OF CONTENTS

---

02-01	RADIATOR - MOUNTING
02-02	DEAERATION SYSTEM - MOUNTING
02-03	RADIATOR ASSY (WITHOUT AIR CONDITIONING)
02-03A	RADIATOR ASSY (WITH AIR CONDITIONING)
02-04	AIR CLEANER - AIR INTAKE PARTS
02-05	AIR CLEANER
02-06	MUFFLER - EXHAUST SYSTEM (WITH TURBOCHARGER)
02-06A	MUFFLER, ASPIRATED & SPARK ARRESTOR - EXHAUST SYSTEM
02-07	ENGINE - MOUNTING
02-07A	ENGINE - BLOCK HEATER
02-08	ENGINE
02-09	CYLINDER BLOCK
02-10	CYLINDER BLOCK
02-11	OIL PUMP, PAN
02-12	CYLINDER BLOCK - COVERS
02-13	CYLINDER BLOCK - COVERS
02-14	CYLINDER BLOCK - COVERS
02-15	BREATHER - ENGINE
02-16	CYLINDER HEAD
02-17	CYLINDER HEAD - COVERS
02-18	CYLINDER HEAD - VALVE MECHANISM
02-19	MANIFOLD - INTAKE
02-20	MANIFOLD - EXHAUST
02-21	CRANKSHAFT
02-22	PISTONS - CONNECTING ROD
02-23	PISTONS - CONNECTING ROD
02-24	FLYWHEEL - ENGINE
02-25	PULLEY - CRANKSHAFT
02-26	DYNAMIC BALANCER, GEARS & SHAFTS
02-27	DYNAMIC BALANCER, GEARS & SHAFTS (2830952)
02-28	CAMSHAFT
02-29	TURBOCHARGER
02-30	ENGINE, OIL
02-31	OIL PUMP - ENGINE
02-32	OIL FILTERS - ENGINE
02-33	PIPING - ENGINE OIL
02-34	OIL FILTER AND COOLER
02-35	WATER PUMP
02-36	COOLING SYSTEM - ENGINE
02-37	THERMOSTAT - ENGINE COOLING SYSTEM
02-38	WATER PUMP - CONTROL
02-39	FAN DRIVE
02-40	POWER TAKE-OFF
02-41	ENGINE - LIFT HOOK
03-01	FUEL LINES, RESERVOIR
03-02	CONTROLS - THROTTLE, HAND
03-03	CONTROLS - THROTTLE, FOOT
03-04	FUEL INJECTION PUMP
03-05	FUEL INJECTION SYSTEM
03-06	FUEL INJECTION SYSTEM
03-07	FUEL INJECTION SYSTEM

---

# TABLE OF CONTENTS

---

03-08	FUEL FILTER
03-09	FUEL PUMP
03-10	FUEL INJECTION SYSTEM
03-11	FUEL INJECTION SYSTEM
04-01	STARTER
04-02	ALTERNATOR
04-03	STARTER MOUNTING - ALTERNATOR MOUNTING
04-04	HARNESS, ENGINE - MOUNTING AND CONNECTIONS
04-05	BATTERY CABLES (MODELS WITHOUT COLD START)
04-06	BATTERY, DUAL - COLD START
04-06A	COLD START GRID HEATER
04-07	HARNESS, FRONT CONSOLE - SWITCHES
04-08	HARNESS, FRONT CONSOLE - MOUNTING
04-09	ELECTRICAL - TRANSMISSION, POWERSHIFT (WITHOUT COMFORT STEER)
04-09A	ELECTRICAL - TRANSMISSION, POWERSHIFT (WITH COMFORT STEER)
04-10	HARNESS, SIDE CONSOLE - SWITCHES
04-11	INSTRUMENT PANEL, FRONT - COVERS
04-12	INSTRUMENT PANEL, SIDE - COVERS (RIGHT-HAND SIDE)
04-13	INSTRUMENT CLUSTER
04-14	ELECTRICAL - LAMPS, ROPS CANOPY
04-15	ELECTRICAL - LAMPS, ROPS CAB
04-16	LAMP ASSY (ROPS CANOPY MODELS)
04-17	HORN - ALARM, BACKUP
04-18	BEACON, ROTATING (CAB OR CANOPY MODELS)
04-19	ANTENNA, RADIO - HARNESS, RADIO
04-20	ELECTRICAL - BACKHOE AUXILIARY HYDRAULIC, UNI-DIRECTIONAL
04-21	ELECTRICAL - BACKHOE AUXILIARY HYDRAULIC, WITH PILOT CONTROLS
05-01	STEERING WHEEL - COLUMN
05-02	HYDRAULICS - STEERING
05-02A	HYDRAULICS - STEERING (COMFORT STEER)
05-03	STEERING COLUMN
05-04	AXLE, FRONT (86990837) - MOUNTING
05-05	AXLE, FRONT (86990837) - HOUSING
05-06	AXLE, FRONT (86990837) - HOUSING, SWIVEL
05-07	AXLE, FRONT (86990837) - CYLINDER, STEERING
05-08	AXLE, FRONT (86990837) - HUB AND BEARINGS
05-09	WHEELS, FRONT - TIRES
06-01	AXLE, FRONT DRIVE - MOUNTING
06-02	AXLE, FRONT DRIVE - HOUSING
06-03	AXLE, FRONT DRIVE - HOUSING, SWIVEL
06-04	AXLE, FRONT DRIVE - CYLINDER, STEERING
06-05	AXLE, FRONT DRIVE - SHAFTS, AXLE
06-06	AXLE, FRONT DRIVE - PLANETARY
06-07	AXLE, FRONT DRIVE - DIFFERENTIAL
06-08	AXLE, FRONT DRIVE - RING AND PINION
06-09	DRIVE SHAFT, FRONT AXLE
06-10	COOLING SYSTEM - TRANSMISSION (MODELS WITHOUT POWERSHIFT)(WITH CUT HOSES AT COOLER)
06-11	COOLING SYSTEM - TRANSMISSION (MODELS WITH POWERSHIFT)(WITH CUT HOSES AT COOLER)
06-11A	COOLING SYSTEM - TRANSMISSION (WITH FLARED FITTINGS AT COOLER)

---

# TABLE OF CONTENTS

---

06-12	TRANSMISSION - MOUNTING (MODELS WITHOUT POWERSHIFT)
06-13	TRANSMISSION - MOUNTING (MODELS WITH POWERSHIFT)
06-14	TRANSMISSION ASSY - FILTER, OIL (MODELS WITHOUT POWERSHIFT)
06-15	TRANSMISSION ASSY (2WD) - HOUSING (MODELS WITHOUT POWERSHIFT)
06-16	TRANSMISSION ASSY (4WD) - HOUSING (MODELS WITHOUT POWERSHIFT)
06-17	TRANSMISSION ASSY - PUMP, OIL (MODELS WITHOUT POWERSHIFT)
06-18	TRANSMISSION ASSY - SHIFTER MECHANISM (MODELS WITHOUT POWERSHIFT)
06-19	TRANSMISSION ASSY - SHAFT, IDLER AND PRIMARY (MODELS WITHOUT POWERSHIFT)
06-20	TRANSMISSION ASSY - SHAFT, INPUT (MODELS WITHOUT POWERSHIFT)
06-21	TRANSMISSION ASSY - SHAFT, SECONDARY (MODELS WITHOUT POWERSHIFT)
06-22	TRANSMISSION ASSY (4WD) - SHAFT, OUTPUT (MODELS WITHOUT POWERSHIFT)
06-23	TRANSMISSION ASSY (86984097 OR 86984098) - VALVE, CONTROL (MODELS WITHOUT POWERSHIFT)
06-23A	TRANSMISSION ASSY (87456843 OR 87456844) - VALVE, CONTROL (MODELS WITHOUT POWERSHIFT)
06-23B	TRANSMISSION ASSY (87396484 OR 87396485) - VALVE, CONTROL (MODELS WITHOUT POWERSHIFT)
06-24	TRANSMISSION ASSY (4WD) - VALVE, SOLENOID (MODELS WITHOUT POWERSHIFT)
06-25	TRANSMISSION ASSY, POWERSHIFT - HOUSING
06-26	TRANSMISSION ASSY, POWERSHIFT - HOUSING, REAR
06-27	TRANSMISSION ASSY, POWERSHIFT - TORQUE CONVERTER
06-28	TRANSMISSION ASSY, POWERSHIFT - PUMP, OIL
06-29	TRANSMISSION ASSY, POWERSHIFT - CLUTCH, FORWARD DRIVE
06-30	TRANSMISSION ASSY, POWERSHIFT - CLUTCH, REVERSE DRIVE
06-31	TRANSMISSION ASSY, POWERSHIFT - CLUTCH, PUMP DRIVE
06-32	TRANSMISSION ASSY, POWERSHIFT - CLUTCH, SECOND GEAR
06-33	TRANSMISSION ASSY, POWERSHIFT - CLUTCH, OUTPUT SHAFT
06-34	TRANSMISSION ASSY, POWERSHIFT - MOUNTING, VALVE
06-35	TRANSMISSION ASSY, POWERSHIFT - VALVE, CONTROL
06-36	TRANSMISSION ASSY, POWERSHIFT - PLATE, DRIVE
06-37	WHEELS, REAR - TIRES
06-38	AXLE, REAR DRIVE - MOUNTING
06-39	AXLE, REAR - DIFFERENTIAL LOCK
06-40	AXLE, REAR DRIVE - HOUSING
06-41	AXLE, REAR DRIVE - DIFFERENTIAL (CLOCKWISE INPUT, MODELS WITHOUT POWERSHIFT)
06-42	AXLE, REAR DRIVE - DIFFERENTIAL (COUNTER CLOCKWISE INPUT, MODELS WITH POWERSHIFT)
06-43	AXLE, REAR DRIVE - RING AND PINION
06-44	AXLE, REAR DRIVE - DIFFERENTIAL LOCK (CLOCKWISE INPUT, MODELS WITHOUT POWERSHIFT)
06-45	AXLE, REAR DRIVE - DIFFERENTIAL LOCK (COUNTER CLOCKWISE INPUT, MODELS WITH POWERSHIFT)
06-46	AXLE, REAR DRIVE - PLANETARY
06-47	DRIVE SHAFT, REAR AXLE
07-01	AXLE, REAR DRIVE - BRAKE, DIFFERENTIAL
07-02	AXLE, REAR DRIVE - BRAKE, PARKING
07-03	BRAKE - PEDALS
07-04	HYDRAULICS - BRAKE MASTER CYLINDER

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)