



Parts Manual

Model TH255C

S/N JK200150 & After
S/N JK300150 & After

31200721

*Revised
September 12, 2017*

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
SECTION 1 –		
FRAME & ATTACHING PARTS		1-1
1-1	Frame & Attaching Parts	1-2
1-2	Covers	1-8
1-3	License Plate Holder Installation	1-16
1-4	Hitches	1-18
1-5	Hitch Assembly	1-22
SECTION 2 –		
BOOM		2-1
2-1	Boom Assembly - Components	2-2
2-2	Boom Assembly - Pads & Shims	2-6
2-3	Quick Coupler	2-8
2-4	Manual Quick Coupler Installation	2-10
2-5	Hydraulic Quick Coupler Installation	2-12
SECTION 3 –		
ATTACHMENTS		3-1
3-1	Standard Carriage	3-2
3-2	Universal Standard Carriage	3-4
3-3	Side Tilt Carriage	3-6
3-4	Universal Side Tilt Carriage	3-8
3-5	Universal Side Shift Carriage	3-10
3-6	Forks	3-12
3-7	Grapple Bucket	3-14
3-8	Light Material Buckets	3-20
3-9	Fork Mounted Hook	3-22
3-10	Universal Hitch Attachment	3-24
3-11	Universal Quick Attach Lifting Hook	3-26
3-12	Multi-Purpose Bucket	3-28
3-13	Fork Muck Attachment (w/GRAB)	3-30
3-14	Reflective Plates Installation (Forks)	3-32
3-15	Reflective Plates Installation (Bucket) (Italy)	3-34
SECTION 4 –		
ENGINE & ATTACHING PARTS		4-1
4-1	Engine Installation	4-2
4-2	Fuel Tank & Lines	4-6
4-3	Fuel Tank and Components Installation	4-8
4-4	Radiator Installation	4-12
4-5	Air Cleaner Installation	4-16
4-6	Exhaust Installation	4-18
4-7	Engine Heater Installation	4-22
4-8	Lubricity Doser Installation	4-24

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
4-9	Precleaner Filter	4-26
SECTION 5 –		
	DRIVE TRAIN	5-1
5-1	Drivetrain Installation	5-2
5-2	Front Axle Assembly	5-4
5-3	Central Housing & Steering	5-6
5-4	Differential	5-8
5-5	Hub Reduction	5-12
5-6	Brakes	5-14
5-7	Rear Axle Assembly	5-16
5-8	Central Housing & Steering	5-18
5-9	Differential	5-20
5-10	Hub Reduction	5-22
5-11	Fender Installation	5-24
5-12	Tires & Rims	5-26
SECTION 6 –		
	CAB	6-1
6-1	Cab Installation	6-2
6-2	Open Cab	6-8
6-3	Enclosed Cab Installation	6-10
6-4	Rear Window Installation	6-14
6-5	Cab Interior	6-16
6-6	Overhead Console Installation	6-20
6-7	Suspension Seat	6-22
6-8	Wiper Installation	6-24
6-9	Heater & A/C - Cab	6-26
6-10	AC Condenser Installation	6-34
6-11	AC System Installation	6-36
6-12	Heater Assembly	6-38
6-13	Heater Assembly with AC	6-40
SECTION 7 –		
	CONTROLS	7-1
7-1	Brake	7-2
7-2	Accelerator	7-6
7-3	Steering Column	7-8
7-4	Boom Joystick	7-10
SECTION 8 –		
	HYDRAULIC CIRCUITS	8-1
8-1	Supply Circuit	8-2
8-2	Dump Circuit	8-6

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
8-3	Steer Select	8-10
8-4	Service/Park Brake	8-12
8-5	Boom Joystick	8-14
8-6	Lift Cylinder	8-18
8-7	Extend/Retract Cylinder	8-22
8-8	Tilt & Compensating	8-24
8-9	Auxiliary Hydraulics	8-26
8-10	Rear Auxiliary Hydraulics	8-28
8-11	Auxiliary Hydraulics Pressure Relief	8-30
8-12	Hydraulic Tank Breather Installation	8-32
 SECTION 9 –		
	HYDRAULIC COMPONENTS	9-1
9-1	Lift Cylinder	9-2
9-2	Extend/Retract Cylinder	9-8
9-3	Tilt Cylinder	9-12
9-4	Compensating Cylinder	9-16
9-5	Fork Locking Cylinder	9-20
9-6	Side Tilt Carriage Cylinder & Grapple Bucket Cylinder	9-22
9-7	Universal Side Shift Cylinder	9-24
9-8	Main Control Valve	9-26
9-9	Front Drive Motor	9-28
9-10	Hydrostatic Drive Pump	9-30
9-11	Gear Pump	9-32
9-12	Divertor Valve	9-34
9-13	Steering Select Valve	9-36
9-14	Pilot Select Valve	9-38
9-15	Brake Valves	9-40
 SECTION 10 –		
	ELECTRICAL	10-1
10-1	Engine Compartment Electrical Installation	10-2
10-2	Boom and Frame Electrical Installation	10-4
10-3	Cab Electrical Installation	10-10
10-4	Cab Switches	10-12
10-5	Work Lights	10-14
10-6	Drive Lights	10-18
10-7	Engine Harness	10-22
10-8	Frame Harness	10-28
10-9	Frame Option Harness	10-34
10-10	Cab Harness	10-40
10-11	Cab Roof Harness	10-52
10-12	Roof Worklight Harness	10-54
10-13	Boom Worklight Harness	10-56
10-14	Beacon Worklight Harness	10-58

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
10-15	Boom Aux Harness	10-60
10-16	LSI Boom Sensor Harness	10-62
10-17	Mode Select Harness	10-64
10-18	Heater Jumper Harness	10-66
10-19	Valve Jumper Harness	10-68
10-20	AC Condenser Harness	10-70
 SECTION 11 –		
	DECALS	11-1
11-1	Cab & Frame Decals	11-2
11-2	Boom Decals	11-8
 SECTION 12 –		
	MAINTENANCE PARTS LIST	12-1
 SECTION 13 – PART NUMBER INDEX		
		13-1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com